

DO NOT RETURN TO PLACE OF PURCHASE
FOR IMMEDIATE HELP WITH ANY SERVICE OR MISSING PART CALL
2 623-202-1395 OR EMAIL
CUSTOMERSERVICE@ARIZONAIRCOOLERS.COM

Please read and save these instructions. Read through this owner's manual carefully before using product. Protect yourself and others by observing all safety information, warnings, and cautions. Failure to comply with instructions could result in personal injury and/or damage to product or property. Please retain instructions for future reference.



AZ60MA1

**5300 CFM 3 SPEED
EVAPORATIVE COOLER**

FOR CUSTOMER SERVICE Technical Question?

customerservicecool@arizonaaircoolers.com

UNPACKING

After unpacking the unit, inspect carefully for any damage that may have occurred during transit. Check for loose, missing, or damaged parts. If any damage is observed, a shipping damage claim must be filed with the carrier. Do not use the 3 Speed Evaporative Cooler if broken, bent, cracked or damaged parts (including labels) are noted. Any evaporative cooler that appears damaged in any way, operates abnormally or is missing parts should be removed from service immediately. If you suspect that the evaporative cooler was subjected to shock load (a load that was dropped suddenly, unexpectedly, etc.) immediately discontinue use until it has been checked by a factory authorized service center.



⚠ WARNING

The following safety information is provided as a guideline to help you operate your 3 Speed Evaporative Cooler under the safest possible conditions. Any tool or piece of equipment can be potentially dangerous to use when safety or safe handling instructions are not known or not followed. The following safety instructions are to provide the user with the information necessary for safe use and operation. Please read and retain these instructions for the continued safe use of your tool. Failure to follow instructions listed below may result in serious injury. In addition, make certain that anyone who uses the equipment understands and follows these safety instructions as well.

EXPLANATION OF SAFETY SIGNAL WORDS

⚠ WARNING: Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION: Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION: Used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

NOTES: Provide clarity and helpful information.

Thank you very much for choosing an Koolkub Product!

For future reference, please register your new tool at www.arizonaaircoolers.com and complete the owner's record below:

Model: _____ **Purchase Date:** _____

Save the receipt, warranty and these instructions. It is important that you read the entire manual to become familiar with this product before you begin using it. This product is designed for certain applications only cooler workz inc cannot be responsible for issues arising from modification. We strongly recommend this product is not modified and/or used for any application other than that for which it was designed. If you have any questions relative to a particular application, DO NOT use the product until you have first contacted customer service to determine if it can or should be performed on the product.

⚠ WARNING: Pursuant to California Proposition 65, this product contains chemicals known to the state of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.



AZ40MA1



IMPORTANT INSTRUCTIONS AND SAFETY RULES

1. Know your evaporative cooler. Read this manual carefully. Learn the evaporative cooler's applications and limitations, as well as, potential hazards specific to it.
2. Keep work area clean and well lit. Cluttered or dark work areas invite accidents.
3. Keep children away. All children should be kept away from the work area. Never let a child handle an evaporative cooler without strict adult supervision.
4. DO NOT operate this evaporative cooler if under the influence of alcohol or drugs. Read warning labels on prescriptions to determine if your judgment or reflexes are impaired while taking drugs. If there is any doubt, do not attempt to operate.
5. Use safety equipment. Eye protection should be worn at all times when operating this evaporative cooler. Use ANSI approved safety glasses. Everyday eyeglasses are NOT safety glasses. Dust mask, non-skid safety shoes, hard hat or hearing protection should be used in appropriate conditions.
6. Wear proper apparel. Loose clothing, gloves, neck-ties, rings, bracelets or other jewelry may present a potential hazard when operating this evaporative cooler. Keep all apparel clear of the evaporative cooler.
7. Don't overreach. Keep proper footing and balance at all times when operating this evaporative cooler.
8. Check for damage. Check your evaporative cooler regularly. If part of the evaporative cooler is damaged it should be carefully inspected to make sure that it can perform its intended function correctly. If in doubt, the part should be repaired. Refer all servicing to a qualified technician. Consult your dealer for advice.
9. Keep away from flammables. Do not attempt to operate this evaporative cooler near flammable materials or combustibles. Failure to comply may cause serious injury or death.
10. Store idle evaporative coolers out of the reach of children and untrained persons. Evaporative coolers may be dangerous in the hands of untrained users.
11. Maintain your evaporative coolers with care.
12. DO NOT use a damaged evaporative cooler. Tag damaged evaporative coolers "DO NOT use" until repaired.
13. Use only accessories that are recommended by the manufacturer for your model. Accessories that may be suitable for one tool may become hazardous when used on another evaporative cooler.
14. Evaporative cooler service must be performed only by qualified repair personnel. Service or maintenance performed by unqualified personnel could result in a risk of injury.
15. When servicing an evaporative cooler, use only identical replacement parts. Use of unauthorized parts or failure to follow maintenance instructions may create a risk of injury.
16. Maintain a safe working environment. Keep the work area well lit. Make sure there is adequate surrounding workspace. Keep the work area free of obstructions, grease, oil, trash and other debris.
17. Maintain labels and nameplates on this product. These carry important information. If unreadable or missing, contact for a replacement.

IMPORTANT SAFETY INSTRUCTIONS

The warnings, precautions, and instructions discussed in this manual cannot cover all possible conditions and situations that may occur. The operator must understand that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

DISPOSAL

At the end of the useful life of the Evaporative Cooler, dispose of the components according to all state, federal and local regulations.

PURPOSE

Evaporative cooling works on the principle of heat absorption by moisture evaporation. Simply put, heat is removed from the air as water evaporates. You feel this principle in action when you step out of a swimming pool or shower and feel cool as water evaporates from the surface of your skin.

Your evaporative cooler works on the same principle. The fan pulls hot outside air through the wet cooling pads, where the air is cooled by evaporation and then discharged from the cooler.

PRODUCT SPECIFICATIONS

Size:	46" x 28" x 17"
Weight:	57 Lbs.
CFM:	5,300
Motor:	1/3 HP 3 SPEED
Water Capacity:	14.3 gallons
Cooling Area:	Up to 1600 sq. ft.
Run Time:	Up to 4 hours

⚠ WARNING: SAFETY INFORMATION READ AND SAVE THESE INSTRUCTIONS

⚠ WARNING

1. Unplug the evaporative cooler before moving it or performing maintenance. Do not touch the evaporative cooler when your hands are wet.
2. Those who are not qualified electricians should not disassemble, repair or rebuild the evaporative cooler.
3. Unplug the evaporative cooler when it is not in use.
4. DO NOT unplug the evaporative cooler by holding the cable cord. Unplug by holding the plug.
5. DO NOT use the evaporative cooler when there is damage to the cable cord or plug.
6. Avoid the use of extension cords when possible. Ensure that they are UL listed if they must be used. DO NOT use a single extension cord to operate more than one evaporative cooler. DO NOT plug the evaporative cooler into any other cord-connected device (power strip, surge protector, multiple outlet adapters etc.).
7. DO NOT use the evaporative cooler close to any fire or heat source.
8. DO NOT insert your hand or other objects into the rear housing when the blade is moving.
9. To reduce the risk of fire or electric shock, do not use this evaporative cooler with any solid-state speed control device.
10. Please don't operate any evaporative cooler with a damaged cord or plug. Discard the evaporative cooler or return to an authorized service facility for examination and/or repair.
11. Please don't run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
12. DO NOT use if electrical cord is frayed or bent.

⚠ CAUTION

13. DO NOT immerse the evaporative cooler in water.
14. Confirm the rear panel is attached before operating.
15. This evaporative cooler is not intended for use by people (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instructions concerning use of the evaporative cooler by a person responsible for their safety. Supervise children to ensure they do not play with the evaporative cooler.
16. Always place the evaporative cooler on a stable, flat, level surface when operating, to avoid the chance of the evaporative cooler overturning.
17. To reduce the risk of fire or electrical shock, do not expose electrical connections to water.
18. Do not touch electrically live components.
19. Adequate ventilation is required.



AZ40MA1

ASSEMBLY INSTRUCTIONS

Coolers are pre-assembled and ready to operate. Simply remove the packaging and then carefully remove the unit from the box. Install the casters. Lock the 2 locking wheels before filling and turning on fan to keep the cooler from moving from the air velocity.

NOTE: The media pad will have a slight odor when it is new. This is normal. It will dissipate after a period of time depending on the use time. Draining the tank often during the break in period will help speed this up.

OPERATING INSTRUCTIONS

1. Your cooler must be positioned in front of an open window or door if it is to operate effectively.
2. Always ensure that there is another open window or door through which the air can exhaust from the room.
3. Ensure the filter is kept clean throughout the summer season.
4. At the end of each day run your cooler on FAN ONLY for 5 minutes to dry out the filter.
5. Prior to putting your cooler away for winter, always:
 - a. Drain the tank and wipe out clean.
 - b. Clean the filter.
 - c. Re-assemble and run on FAN ONLY for 30 minutes to dry out the filter.
6. Having completed assembly of your cooler, position the unit with its back to an open window or door. This will allow fresh air to be drawn through the cooler and exhausted from the room. Constant air change is essential and part of the fresh air benefit from evaporative air cooling.
7. Remember your cooler has been designed to operate even if it runs out of water. No damage will be caused to the pump if cooler runs out of water.

FILLING COOLER OR CONNECTING TO WATER SUPPLY

Move the cooler to an area where it can be filled.

MANUAL FILL


The cooler can be filled via the front fill door by hose or bucket. Using the water fill indicator to monitor water level, simply depress the fill door and the spring lock will release and open it. To close, simply push it closed and locked.

AUTO FILL CONNECTIONS

Connect to a water supply using a garden hose or coil hose (supplied by customer), or a direct water line. (Parts for direct connection can be obtained at any hardware store.) Simply attach hose adapter (supplied with cooler) to the float valve nipple protruding from cooler. Verify water tight connections by visually examining the hose connection.

Assembly

Unpack the Carton, take the casters (4pc s) out of it. Put them at the bottom of water tank (as showed in left picture). After testing and pushing smoothly, go on to the next step.

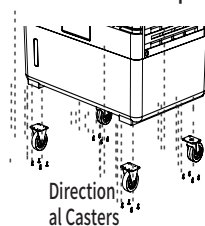


Water inlet pressure should be limited to a maximum 50 PSI. If valve is overcome, install a pressure reducer (25 PSI) on nipple first. (It can be obtained at hardware stores in irrigation section.) Hose bib needs only be cracked open slightly to supply water to float valve and the cooler only needs to be about half filled when in auto fill configuration. The float is already set to that level.

USING THE CONTROL SWITCHES MECHANICAL

Left small Rotary switch operates the Power and turns on Fan O/I,

middle rotary switch control pump on and off. run ump to have cool air (snowflake icon)

 right small rotary switch controls the ASDS swing oscillating louver on or off ,turn on the vertical louver



Large Rotary switch :Low Med Hi Fan Speed


MAINTENANCE

WARNING: Do not remove the back panel with the cooler running.
NOTE: For best operation and long useful life the following maintenance and cleaning procedures should be followed.

CLEANING COOLER AND PADS

At regular intervals the cooler should be shut down and disconnected from power supply. The water tank should be drained of dirty water and sprayed out with fresh water and refilled. The more you do this the better it will work and less calcium will develop on pads or other surfaces. You may spray through the cooling pads to wash them out and allow water to deposit in the tank to be drained away. The removable panel and media pad can be sprayed out on the ground to clean pad. Use light pressure when spraying pads. NEVER spray pads with water while cooler is operating and fan is running. This can cause damage to motor and will void the warranty

1. remove fixing pins at top of back panel (3). fig 1
2. Lift Panel up and pull out at the bottom.
3. Slide the panel out of the cabinet.
4. You will now have access to the pump, float valve and the water distribution

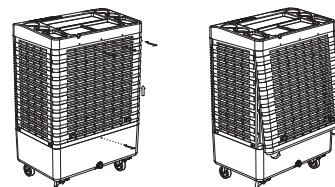

DRAINING THE COOLER TANK

Unscrew drain cap from drain assemble and drain away water. You may tip the unit carefully to the drain side to help drain all the water out.

REMOVAL AND REPLACEMENT OF COOLING MEDIA

The cooling pads are made from a special resin impregnated craft paper specially designed for evaporative cooling. They will last many years if maintained properly and water quality is maintained. It is not necessary to remove the pads to clean them.

Inspect the pads for deposits of calcium on the air entering side. If the flute cells are clogged or the pad is very heavy it may be time to change the media. New media can be purchased where you bought the cooler. Follow these steps for replacing the pads.

1. With access panel removed, simply pull off the pad retainer disc from the pad pin.
2. With disc removed, remove the pins from the pads and carefully remove pads from the fixed side mounting frame. Then do the same for the back panel or panels.
3. Pads are made with a 45/45 flute and can be installed either side to the frame. Just make sure the distribution pad that is fixed to the top of the new media pad is at the top. This allows water get onto the top of the pad evenly. The installation of the pads is opposite of the removal, install the pad, insert pins and install the retaining disc.
4. Reinstall the back panel and you are ready to use the cooler again.

PUMP MAINTENANCE AND REPLACEMENT.

NOTE: Disconnect power supply before this procedure.

The submersible pump is mounted inside the tank to the bottom with a retention bracket. While you are cleaning the cooler the pump may be removed and the strainer cap on the bottom of pump can be cleaned of debris. If pump has failed and needs replacing follow these steps:

1. Remove retaining screws.
2. Remove the switch control panel from the top of cooler, by inserting a small screwdriver into the tap slots and pop loose.
3. The pump is connected to the control via the white plastic clip. Disconnect the pump clip and feed the plastic clip through the control box into the cooler.
4. There may be cable ties holding cable to the motor mounting bracket. Remove the pump from cooler when cable is free.

5. Re-install the new pump in reverse. Being sure to reconnect the cable in the twist ties and secure the cable in a manner of which it stays clear of fan blade when cooler is running. Re-attach the pump clip in the control box. Be sure not to pull any other wires loose from control switches when you have panel loose.
6. Re-install the control panel into the cabinet making sure it is seated.

FLOAT VALVE REPLACEMENT OR ADJUSTMENT

NOTE: Disconnect power supply before this procedure.

The float valve is mounted to the left side of cooler if you are facing the front grill. It is held in place by the retaining nut that is visible from the outside. The rubber washer is between the nut and cabinet. The rear panel will have to be removed to adjust the float (if the water level is too high or too low) or remove and replace a float that has failed to shut of water supply.


NOTE: Be sure that the PSI of the supply water is within the 50 PSI spec. Before determining the float has failed.

1. The float valve can be purchased where you purchased your cooler.
2. Remove any hose adapters attached to the float valve nipple.
3. Remove the rear panel assembly as instructed in Section 5
4. Remove the float valve retaining nut and rubber washer. And remove float valve from cabinet.
5. Re-install the float valve in reverse. Set the valve adjustment to around 60 degrees for best results.

KOOLKUBE® 2 YEAR LIMITED WARRANTY For 2 YEARS from the original purchase of this product, Arizona Air Coolers (company) will warranty this item. If you find any defect in material or workmanship, through normal usage, return it to the place of purchase or to Arizona Air Coolers for repair or replacement at our discretion. In order to obtain this service send your tool and proof of purchase, transportation pre-paid, to Arizona Air Coolers LLC. We will not be responsible for lost or damaged goods during transportation, please insure your package. If our inspection verifies the defect, we will either repair or replace the product at our election, or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product. Arizona Air Coolers LLC does not provide warranty for products labeled other than KOOLKUBE® or and will not provide any warranty for products subjected to abnormal use. Abnormal use includes, but is not limited to, abuse, accident, alteration, neglect, and unauthorized or unreasonable use or repairs. This warranty does not cover Media Pads, Filters, batteries, or calibration. We recommend that you maintain COOLER AND WATER QUALITY. Water Damage to Components due to scale buildup is not covered under this warranty. Change tank water regularly and clean tank weekly of left behind dissolved solids. Arizona Air Coolers L® reserves the right to makes any changes in construction or design at any time without any obligation in incorporating such changes to tools or equipment previously sold.

Arizona Air Coolers® makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 2 YEARS from the date of purchase. This warranty does not apply to damage due directly or indirectly to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear or to lack of maintenance.

We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. Don't forget to register your new KOOLKUBE® product at www.KOOLKUBE.COM

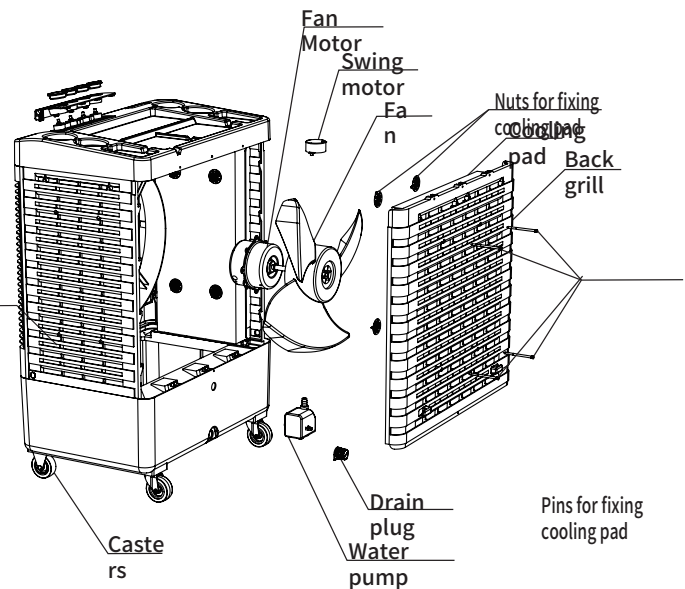

CONTACT US CUSTOMERSERVICE@ARIZONAIRCOOLERS.COM