



## **The Housekeeper Pro Series Multi-Function Steamer**

Model: SAG806D

### Instruction Manual

Please read all instructions carefully and retain for future reference.

#### **Getting Started**

Remove the appliance from the box.

Remove any packaging from the product.

Place the packaging inside the box and either store or dispose for safety.

#### **In the Box**

Steam Mop Body (Hand-held unit)

Handle Tube

Handle

Squeegee Attachment

Metal Brush Tool

Nylon Brush Tool

Accessory Adaptor

Angled Nozzle

Brush Tool

Scraping Tool

Steamer Cloth

Steam shelf

Carpet Glider

Microfibre Cloths x 2

Triangle Detergent Spray Mop Head

Instruction Manual

## **Features**

Steam cleaning freshens carpets and cleans tiles, vinyl and hardwood floors

Quick start

Lightweight

Transparent tank allows monitoring of water level

## **Safety Instructions**

Please ensure that you read the full safety and operational instructions within the manual included with your steam mop.

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

This appliance is not intended for use by persons (including children) who are not mentally able, physically capable, experienced or do not understand the product. They should be given supervision and instruction in the use of the appliance by a person responsible for their safety.

Do not direct steam at people, animals, electrical appliances or electrical outlets.

Keep this appliance and cord out of reach of children.

This appliance must not be used by children.

**Warning:** Danger of scalding. Please use caution when using the steam cleaner. The steam emitted from the openings is very hot.

Do not immerse the appliance in water.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not leave the appliance connected to an electrical outlet when not in use.

Never pull the power cord to disconnect the appliance from the socket. Keep the appliance cord away from heat sources and sharp edges.

Do not use the appliance with wet hands.

Do not pull or carry the appliance by the cord, pull the cord around sharp corners or expose the cord to heated surfaces.

Do not use this appliance on leather, wax polished furniture or floors, synthetic fabrics, velvet or other delicate, steam sensitive materials.

Do not use the appliance on any unsealed hard floor surfaces.

**Note:** Surfaces treated with wax and some non-wax floors may lose their sheen due to the heat and steam action. It is recommended to test an isolated surface area before proceeding.

Never add de-scaling, aromatic, alcoholic or detergent products into the steam mop as this may cause damage and doing so will void your warranty.

This appliance gets very hot during use, exercise extreme caution.

**Note:** Always wear suitable shoes when using this appliance and when changing the accessories; do not wear slippers or open-toed footwear.

This microfiber cleaning pad must be installed correctly before use.

This appliance contains no user serviceable parts. All repairs should be carried out by a qualified engineer; improper repairs may place the user at serious risk of harm.

This appliance is intended for household use only. It should not be used for commercial purposes.

Never leave the steam mop on a floor area stationary whilst on for longer than 15 seconds. Leaving the mop in this position may cause a build up of a pale residue on the surface.

To increase the life of your appliance, it is recommended that you filter the water using the jug and filter included or use de-mineralized water.

If using to clean hobs and ovens, you must not direct the steam towards any electrical connections.

Ensure the device is disconnected from the mains before cleaning.

Please ensure hobs and ovens are fully cooled before attempting to clean.

Do not use this appliance for any purpose other than that for which it is designed.

Never force the steam unit onto the mop head as this could potentially damage the steam mop.

Do not use the appliance after a malfunction or if it has been dropped or damaged in any way.

If the supply cord or plug is damaged, it must be replaced by a qualified engineer to avoid a hazard.

## **Specification**

Model: SAG 806

Rated Voltage: 120V

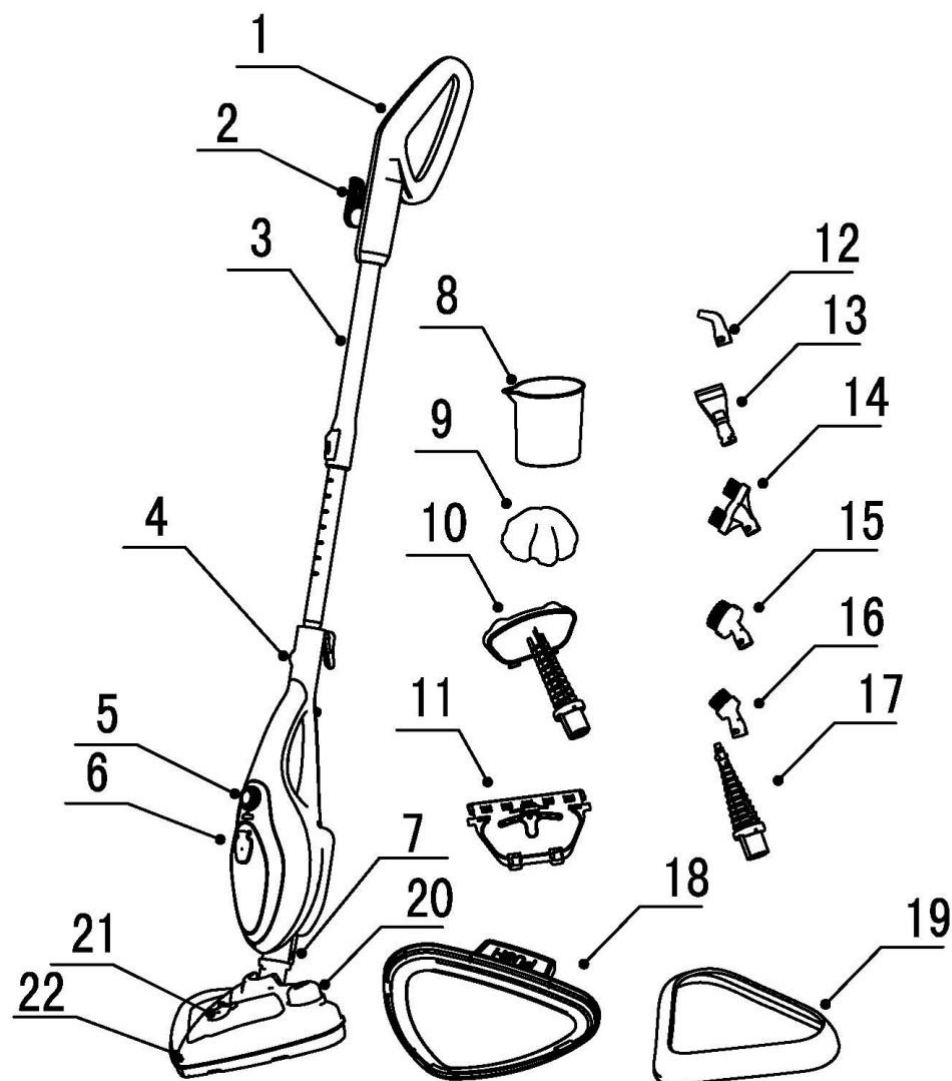 
Rated Frequency: 60Hz

Output Power: 1550W

Water Tank Capacity: 350ml

Detergent Tank Capacity: 300ml

## Description of Parts



1. Handle    2. Up cord hook    3. telescope tube 4. Down cord hook
5. Power switch    6. Water tank cover    7. Triangle detergent head
8. Cup    9. Steamer cloth    10. Garment attachment 11. Squeegee attachment
12. Angled nozzle 13. Scrape tool 14. Brush tool 15. Big nylon brush tool
16. Small metal brush tool    17. Steamer jet 18. Carpet glider 19. Microfiber cloth
20. Detergent button    21. Detergent tank 22. Detergent spray mouth

## **Assembly**

### **Attaching the Handle**

Slide the handle into the extension tube until it locks into position.

Slide the extension tube with the handle installed in to the steam mop body until it locks into place.

The handle can be removed from the steam mop body for easy storage by pressing the handle tube button.

### **Attaching the Steam Head**

Slide the bottom end of the steam mop body onto the triangle mop head until the triangle mop head spindle locks into place. Hold both parts of the unit and gently push the clip into the handle. This will lock the two parts into position.

**Warning:** Never force the steam mop body onto the triangle mop head, as this could potentially damage the steam mop. Always attach the triangle mop head using both hands, ensuring it locks into place correctly.

The triangle steam head can be removed from the main body by pressing the button on the triangle steam head spindle.

### **Attaching a Microfibre Cloth**

Position the microfiber cloth onto the triangle steam head and secure it.

### **Attaching the Carpet Glider**

Position the microfiber cloth into the triangle steam head and place the carpet glider over and around the microfiber cloth. To remove, simply push the carpet glider by foot

## **Instructions for Use**

### **Filling the Water Tank**

Open the water tank cap and fill the tank with 350ml of water.

### **Filling the Tank During Use**

Turn off the switch and open the tank and pour in the water. Seal the tank and turn on to activate the steam.

**Warning:** Never place de-scaling, aromatic, alcoholic or detergent products in the steam mop tank, this will cause damage to the appliance and void your warranty.

### **Using the Steam Mop**

Plug the appliance into the mains power supply and switch on. The indicator lights on unit will illuminate Green.

It will take approximately 20 seconds for the appliance to preheat, and then the appliance is ready for use.

Steam will run continuously until turned off or the unit runs out of water.

A full tank will supply approximately 15 minutes of steam. If the water tank is empty, the pump will make a little pumping noise and will shake; the switch must be turned off immediately. Refill the water tank following the instructions above.

### **Using detergent release**

1. Fill detergent (**diluted with water**) by funnel and cup
2. Press the detergent spray button by foot.

Remark: if the spray nozzle becomes clogged, you can clean it by removing it from the mop head. To remove it, place a flat screwdriver on the nozzle and lift.

The nozzle will pop off. Run the spray nozzle under warm water to clean it out.

Reinsert the spray nozzle into nozzle hole, push it into place.

### **Using as a Hand-held Steamer**

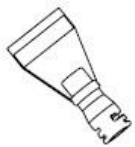 
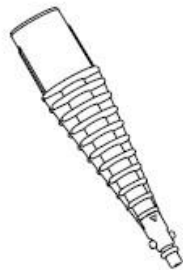 
Press the handle tube button to remove the handle from the steam mop body.

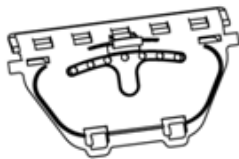 
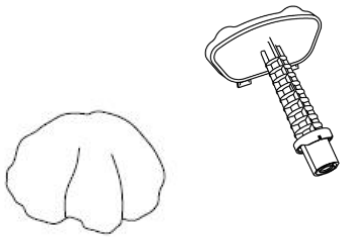 
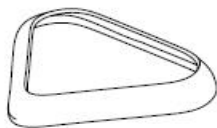 
Install the accessory adaptor at the top of the steam mop body until it locks into position.

Choose the required accessories and install by aligning the arrow indicators and

turning clockwise.

## Accessories

| Accessories                                                                        | Picture                                                                             | Suggested use                                                                                                                     |
|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| Nylon Brush Tools<br><br>WARNING: be careful of metal brush to scratch the surface |    | Ovens, hobs, showers, bath tubs, tiles, toys, refrigerators, etc.                                                                 |
| Angled Nozzle                                                                      |   | Stove tops, taps, sinks, hard to reach areas etc.                                                                                 |
| Brush Tool                                                                         |  | Cleaning grout lines, sanded or non-sanded.                                                                                       |
| Scraper Tool                                                                       |  | Scraping baked on food, grime and grease.<br>Removing residue or other different substances from surfaces such as hobs and ovens. |
| Steamer jet                                                                        |  | Sink, gas stove, faucet grout, microwaves oven, rang hood, hard to reach area etc.                                                |

|                                         |                                                                                     |                                                                                 |
|-----------------------------------------|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------|
| Squeegee Attachment                     |    | Shower screens, mirrors and glass.<br>Remove creases from sofa, tablecloths etc |
| Garment attachment and<br>Garment cloth |    | Steaming sofa, tablecloths and garment etc.                                     |
| Microfibre Cloth                        |   | For general cleaning of hard floors and carpets.                                |
| Carpet glider                           |  | For cleaning carpet use                                                         |
| Measuring cup                           |  | To fill water                                                                   |

## **Cleaning and Maintenance**

Ensure the appliance is unplugged from the mains supply and has cooled sufficiently before cleaning.

Drain any remaining water from the tank and clean after every use.

Clean the accessories in warm, soapy water and leave to dry.

## **Decalcify the Water Tank Interior**

To clean calcium deposits that builds up inside the water tank, add one or two tablespoons of white vinegar to a full tank and then shake.

**Note:** Do not turn the steamer on.

### **Removing Limescale**

If the appliance begins to produce steam more slowly than usual or stops producing steam, you may need to remove limescale.

Limescale can develop over time on the metal parts of the appliance and greatly affect its performance. It is recommended to remove limescale on a moment basis or after every 25-50 uses.

The frequency of removal depends on the hardness of your tap water and how often you use your steamer. If you live in an especially hard water area, you may need to use de-mineralized water.

### **Using a Cleaning Solution**

Prepare a solution of 1/3 white vinegar and 2/3 tap water and add to the water tank.

Secure and position the unit to ensure any steam released is aimed away from the floor or surrounding objects and surfaces.

Plug the appliance into the mains power supply and turn on; allow the unit to produce steam until all the solution is used.

Repeat the above procedures as often as necessary then fill the tank with fresh water and rinse.

Fill the tank to the max. level with fresh water, switch on and release steam through the system until the water tank is empty.

**Warning:** Do not leave the steamer unattended during the limescale removal process and/or during use.

**Note:** Perform a test on a suitable isolated surface after limescale removal to ensure there is no debris left in the unit.

**Note:** Due to the nature of UK water suppliers, some areas of the country experience large amounts of limescale build-up. If you live in one of these areas you may need to decalcify the unit more often.

### **Cleaning Blocked Accessories**

Due to the high mineral water content in certain areas, you may notice less steam from the accessories; this may be caused by calcium build-up inside the nozzle:

### **Cleaning Calcium buildup**

It is recommended to use the vinegar solution inside the affected accessory then fill the water tank with water according to the directions and run a continuous jet of steam through the affected accessory for several minutes to clear the pathway.

Aim the appliance at a neutral surface or cleaning cloth to ensure no debris is emitted.

### **Cleaning the Microfibre Cloths**

The microfiber cloths are machine washable on a warm setting; always use a mild detergent. For best results, lay flat to dry.

**Note:** never use bleach or fabric softener when cleaning the microfiber cloths.

### **Storage**

After use, turn the appliance off and unplug from the mains power supply.

Remove the water tank and empty out any residual water, then clean the outer surface with a dry cloth.

Remove the cleaning pad and wash ready for the next use.

Store the appliance in a dry area out of reach of children.

## Troubleshooting

| Problem                    | Possible Reason                                                                                                                                                                            | Possible Solution                                                                                                                                                                                |
|----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Reduced Steam or No Steam. | <p>Water tank may be empty.</p> <p>Steam nozzle may be blocked.</p> <p>There is no power to the unit.</p> <p>The steam button wasn't pressed.</p> <p>Steam control knob is set to min.</p> | <p>Fill the water tank.</p> <p>Clean the steam nozzle.</p> <p>Ensure the appliance is plugged in.</p> <p>Press the steam button.</p> <p>Turn the steam control knob clockwise to Max.</p>        |
| Unit Will Not Turn On.     | <p>Blown fuse or breaker.</p> <p>Power cord not plugged in.</p> <p>Internal fuse is blown.</p> <p>Handle is not inserted correctly.</p>                                                    | <p>Replace the fuse or reset breaker.</p> <p>Plug the cord into a working circuit.</p> <p>Contact customer services.</p> <p>Check that the handle is firmly connected to the steam mop body.</p> |