



## Portable Air Conditioner Use and Care Guide

## Climatiseur portatif Guide d'utilisation et d'entretien

## Acondicionador de aire portátil Manual de uso y cuidado

For questions about features, operation/performance, parts, or service, call **1-800-207-1156**.

In Canada, for assistance, installation, or service, call **1-800-207-1156**.

Pour des questions à propos des caractéristiques, du fonctionnement, du rendement, des pièces, ou du service, composer le **1-800-207-1156**.  
Au Canada, pour assistance, installation ou service, composer le **1-800-207-1156**.

Si tiene preguntas respecto a características, funcionamiento, rendimiento, piezas o servicio técnico, llame al **1-800-207-1156**.  
En Canadá, para obtener asistencia, instalación o servicio técnico, llame al **1-800-207-1156**.

### Table of Contents



<b>AIR CONDITIONER SAFETY</b> .....	<b>3</b>	<b>OPERATION</b> .....	<b>11</b>
<b>PARTS AND FEATURES</b> .....	<b>4</b>	<b>USING THE REMOTE CONTROL</b> .....	<b>12</b>
Accessories .....	5	Before Use .....	12
Electrical Requirements .....	6	Button Functions .....	12
Recommended Grounding Method .....	6	Usage .....	13
Power Supply Cord .....	6	<b>CARE AND CLEANING</b> .....	<b>14</b>
<b>INSTALLATION REQUIREMENTS</b> .....	<b>7</b>	Cleaning the Unit .....	14
Electrical Requirements .....	7	Cleaning the Air Filters .....	14
Location Requirements .....	7	<b>SPECIFICATIONS</b> .....	<b>15</b>
<b>INSTALLATION INSTRUCTIONS</b> .....	<b>7</b>	<b>TROUBLESHOOTING</b> .....	<b>16</b>
Duct Mounting Installation .....	7	<b>ASSISTANCE OR SERVICE</b> .....	<b>17</b>
Window Slider Kit Installation .....	8	In the USA .....	17
Window Duct Installation .....	8	In Canada .....	17
Wall Exhaust Installation .....	8	<b>WARRANTY</b> .....	<b>18</b>
Drain Hose Installation .....	9		
<b>USING YOUR AIR CONDITIONER</b> .....	<b>9</b>		
Temperature Indicator .....	10		
Button Functions .....	10		

### Table des matières

<b>SÉCURITÉ DU CLIMATISEUR</b> .....	<b>19</b>	<b>FONCTIONNEMENT</b> .....	<b>27</b>
<b>PIÈCES ET CARACTÉRISTIQUES</b> .....	<b>20</b>	<b>UTILISATION DE LA TÉLÉCOMMANDE</b> .....	<b>28</b>
Accessoires .....	21	Avant utilisation .....	28
Alimentation .....	22	Fonctions des boutons .....	28
Méthode recommandée de liaison à la terre .....	22	Usage .....	29
Cordon d'alimentation .....	22	<b>ENTRETIEN ET NETTOYAGE</b> .....	<b>30</b>
<b>EXIGENCES D'INSTALLATION</b> .....	<b>23</b>	Nettoyage de l'appareil .....	30
Alimentation .....	23	Nettoyage des filtres à air .....	30
Exigences d'emplacement .....	23	<b>SPÉCIFICATIONS</b> .....	<b>31</b>
<b>INSTRUCTIONS D'INSTALLATION</b> .....	<b>23</b>	<b>DÉPANNAGE</b> .....	<b>32</b>
Installation de montage du conduit .....	23	<b>ASSISTANCE OU DÉPANNAGE</b> .....	<b>33</b>
Ensemble d'installation pour fenêtre coulissante .....	24	Aux É.-U. ....	33
Installation du conduit de fenêtre .....	24	Au Canada .....	33
Installation du conduit d'évacuation mural .....	24	<b>GARANTIE</b> .....	<b>34</b>
Installation du tuyau de vidange .....	25		
<b>UTILISATION DU CLIMATISEUR</b> .....	<b>25</b>		
Indicateur de la température .....	26		
Fonctions des boutons .....	26		

## Tabla de contenidos

<b>SEGURIDAD DEL ACONDICIONADOR DE AIRE.....</b>	<b>35</b>	<b>FUNCIONAMIENTO .....</b>	<b>43</b>
<b>PIEZAS Y CARACTERÍSTICAS .....</b>	<b>36</b>	<b>USO DEL CONTROL REMOTO.....</b>	<b>44</b>
Accesorios.....	37	Antes de usarlo .....	44
Requisitos eléctricos.....	38	Funciones de los botones.....	44
Método de conexión a tierra recomendado .....	38	Uso .....	45
Cable de suministro eléctrico .....	38	<b>CUIDADO Y LIMPIEZA .....</b>	<b>46</b>
<b>REQUISITOS DE INSTALACIÓN .....</b>	<b>39</b>	Limpieza de la unidad .....	46
Requisitos eléctricos.....	39	Limpieza de los filtros de aire .....	46
Requisitos de ubicación.....	39	<b>ESPECIFICACIONES.....</b>	<b>47</b>
<b>INSTRUCCIONES DE INSTALACIÓN .....</b>	<b>39</b>	<b>SOLUCIÓN DE PROBLEMAS.....</b>	<b>48</b>
Instalación del montaje del ducto.....	39	<b>AYUDA O SERVICIO TÉCNICO.....</b>	<b>49</b>
Instalación del juego deslizante para ventana.....	40	En EE. UU.....	49
Instalación del ducto para ventana.....	40	En Canadá.....	49
Instalación del ducto de escape para pared .....	40	<b>GARANTÍA.....</b>	<b>50</b>
Instalación de la manguera de desagüe.....	41		
<b>USO DEL ACONDICIONADOR DE AIRE.....</b>	<b>41</b>		
Indicador de temperatura .....	42		
Funciones de los botones.....	42		

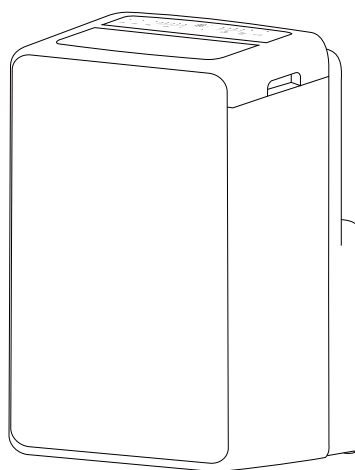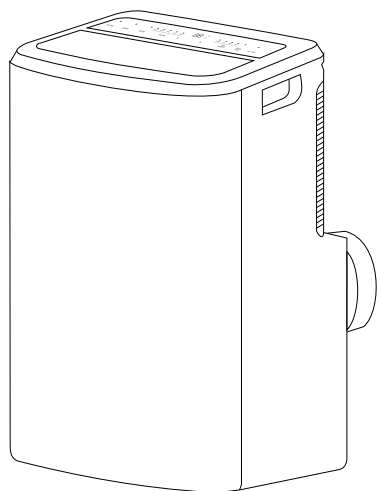

®/™ ©2021 Whirlpool. All rights reserved. Manufactured under license by XLS Products, Pennsylvania.

Tous droits réservés. Fabriqué sous licence par XLS Products, Pennsylvanie.

Todos los derechos reservados. Fabricado bajo licencia por XLS Products, Pennsylvania.

**Models/Modèles/Modelos:**

**WHAP081BWC, WHAP101BWC, WHAP131BWC**

# AIR CONDITIONER SAFETY

## Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word “DANGER” or “WARNING.”

These words mean:

**⚠ DANGER**

You can be killed or seriously injured if you don't immediately follow instructions.

**⚠ WARNING**

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

## IMPORTANT SAFETY INSTRUCTIONS

**WARNING:** To reduce the risk of fire, electrical shock or injury when using your air conditioner, follow these basic precautions:


- Children should be supervised to ensure that they do not play with the appliance.
- If the power supply cord is damaged, it must be replaced by the manufacture or its service agent or a similar qualified person.
- This unit is designed for indoor use only.

### Disposing of the unit:


- When you need to dispose of the unit, consult with your local dealer or local recycling center for information on how to dispose of the unit in a environmentally responsible manner.
- Please recycle or dispose of the packaging material for product in an environmentally responsible manner.

# PARTS AND FEATURES

## Front View

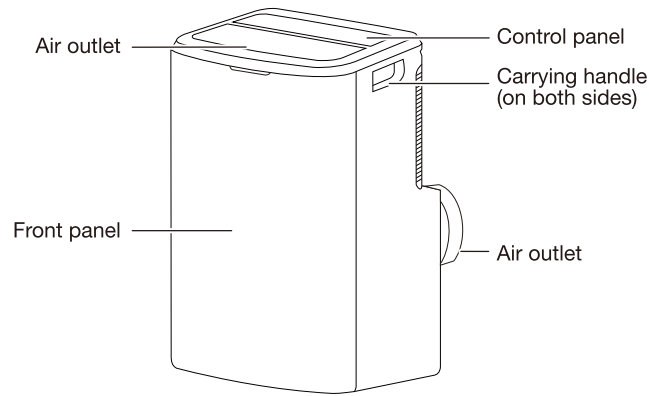

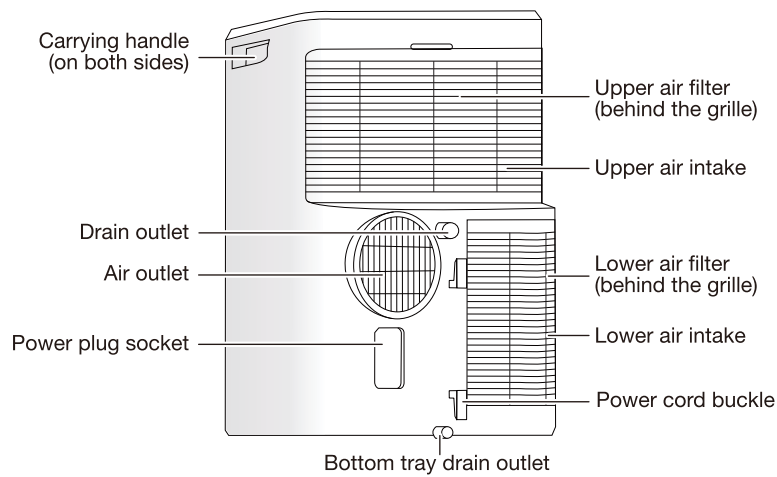


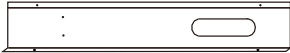
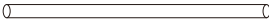

## Rear View



### NOTE:

- The descriptions in this user manual (text and figures) may vary slightly from the model you purchased.
- The working temperature range of the air conditioner is 60°F~90°F (16°C~32°C) under cool mode, beyond this temperature range, the machine may not work properly.

## Accessories

Image	Part name	Quantity
	Adapter A	1 set
	Exhaust duct	
	Adapter B (flat mouth)	
	Window slider kit	
	Drain hose	1 pc
	Remote controller and Batteries	1 pc

## Electrical Requirements

### **⚠ WARNING**



#### **Electrical Shock Hazard**

**Plug into a grounded 3 prong outlet.**

**Do not remove ground prong.**

**Do not use an adapter.**

**Do not use an extension cord.**

**Failure to follow these instructions can result in death, fire, or electrical shock.**

The electrical ratings for your air conditioner are listed on the model and serial number label. The model and serial number label are located on the back of the air conditioner cabinet.

- 115 V (103.5 V min. - 126.5 V max.)
- 0-12 A
- 15 A time-delay fuse or circuit-breaker
- If there is a "Single Circuit Only" label on the unit, use on a dedicated single-outlet circuit only. If a dedicated single-outlet circuit is not available, then it is the customer's responsibility to have a single outlet circuit installed by a qualified electrician.

## Recommended Grounding Method

The air conditioner must be grounded. This air conditioner is equipped with a power supply cord with a grounded 3-prong plug. To minimize possible shock hazard, the cord must be plugged into a grounded 3-prong outlet, and grounded in accordance with all local codes and ordinances. If a mating outlet is not available, it is the customer's responsibility to have a properly grounded 3-prong outlet installed by a qualified electrical installer. It is the customer's responsibility:

- To contact a qualified electrical installer.
- To ensure that the electrical installation is adequate and in conformance with National Electrical Code, ANSI/NFPA 70 — latest edition, and all local codes and ordinances.

Copies of the standards listed may be obtained from:

National Fire Protection Association  
1 Batterymarch Park  
Quincy, MA 02269

## Power Supply Cord

**NOTE:** Your air conditioner's power supply cord may differ from the one shown. This portable air conditioner is equipped with a power supply cord required by UL. This power supply cord contains state-of-the-art electronics that detect current leakage. If the cord is damaged, the electronics will shut off power to the unit.

### **⚠ WARNING**



#### **Electrical Shock Hazard**

**Plug into a grounded 3 prong outlet.**

**Do not remove ground prong.**


**Do not use an adapter.**

**Do not use an extension cord.**

**Failure to follow these instructions can result in death, fire, or electrical shock.**

#### **To test your power supply cord:**

1. Plug the power supply cord into a grounded 3-prong outlet.
2. Press RESET button (on some models, a green light will turn on).
3. Press TEST button.
4. Press and release RESET button.  
The power supply cord is ready for operation.

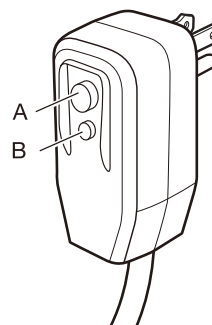

A. Reset button

B. Test button

#### **NOTES:**

- The RESET button must be pushed in for a proper operation.
- Replace the power supply cord, if it fails to trip when the TEST button is pressed or fails to reset.
- Do not use the power supply cord as an on/off switch. The power supply cord is designed as a protective device.
- Do not repair the damaged power supply cord. Always replace the power supply cord with the one purchased from the manufacturer.
- The power supply cord contains no user-serviceable parts. Opening the tamper-resistant case voids all warranty and performance claims.

# INSTALLATION REQUIREMENTS

## Electrical Requirements

- The customer should have a specified power supply, as stated on the tag of the air conditioner.
- The customer must use a dedicated circuit and efficient grounding outlet matching with the plug of the air conditioner.
- The appliance should be installed in accordance with national and local wiring regulations.
- The plug should be easily accessible after installation.

## Location Requirements


**IMPORTANT:** Observe all governing codes and ordinances.

Check the location where the air conditioner will be installed. Ensure everything necessary for the correct installation is available.

1. Install the mobile air conditioner in a flat and open location where the air outlets will not be obstructed.
2. Keep the minimum clearance from walls or other obstacles, as shown.
3. A level floor is required with maximum gradient of 10 degrees with the horizontal plane is required to place the unit.

**NOTE:**


- The air conditioner shall not be used in the laundry room or other confined space.

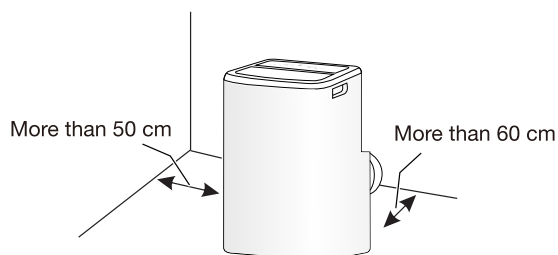


# INSTALLATION INSTRUCTIONS

## Duct Mounting Installation

- In cool and dry mode, the exhaust duct needs to be installed, while in fan mode, the exhaust duct is not required.
  - The exhaust duct can be moderately compressed or tensed. Do not excessively stretch or bend the exhaust duct.
  - The exhaust duct can be connected with windows or vented through the wall to the exterior of the building. As per requirement, you can make the installation with accessories provided along with the unit.
1. Install the adapter A and adapter B (flat mouth or round mouth) onto the exhaust duct, as shown in the figure.

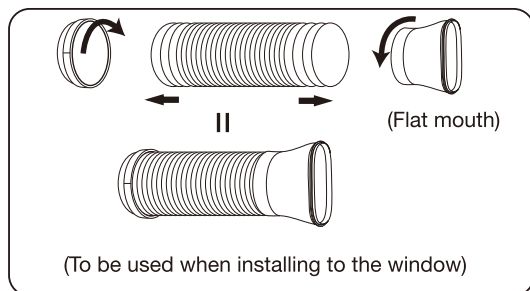


2. Connect the exhaust duct to the air outlet connector on the back of the unit. Slide the adapter A downwards until it is locked in place.

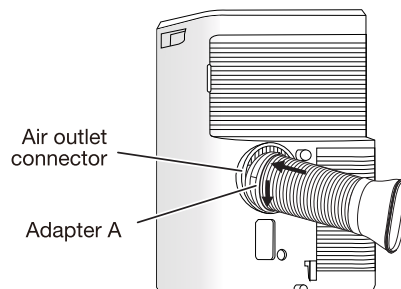


## Window Slider Kit Installation

1. Cut the foam seal (adhesive type) to the appropriate length and attach it to the window sash.

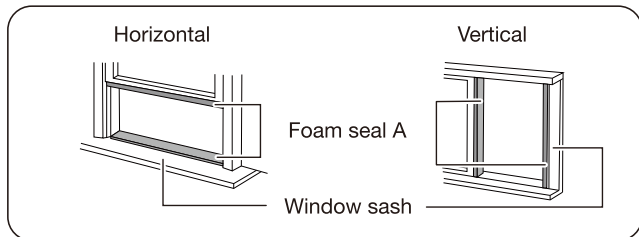


2. Attach the Window slider kit to the window sash. Adjust the length of the Window slider kit: Loosen the screw A to adjust the length of the Window slider kit then tighten the screw when the length is appropriate.


**NOTE:** The length of the Window slider kit is 67.5 cm to 120 cm.

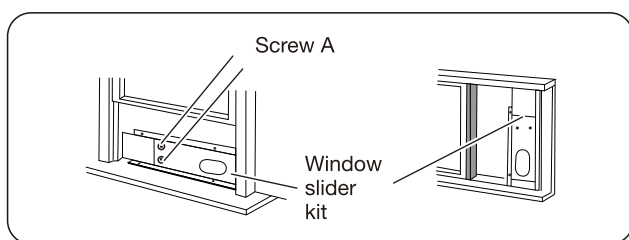


3. Gently lower the window. Secure the vent panel in place with 4 type B screws, plus one screw for each extension.

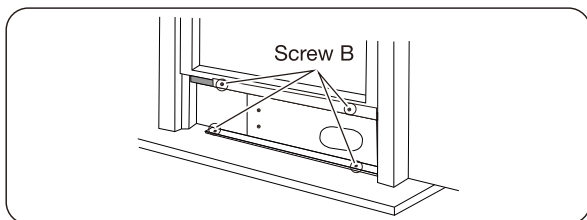

4. Cut the foam seal B (non-adhesive) the width of the window. Secure the foam seal B between the glass and the window to prevent air and insects from entering the room.

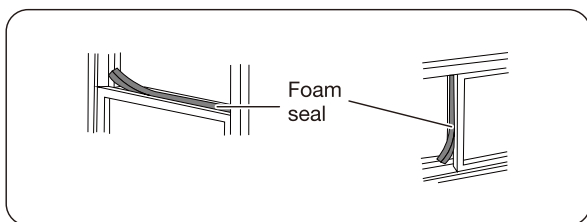


5. Install the security bracket with a type B screw, as shown in figure below.

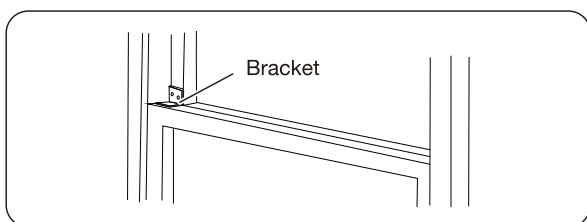

## Window Duct Installation


1. Move the unit with the packed exhaust duct next to the window, and then connect the adapter B (flat mouth) of the exhaust duct with the window, as shown.

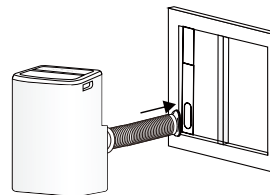

## Wall Exhaust Installation


1. Prepare a hole in the wall. Install the wall exhaust adapter onto the wall by using 4 expansion screw sleeves and type C screws, ensuring it is securely fastened.
2. Connect the exhaust duct to the wall exhaust adapter, as shown.

**NOTE:** Cover the hole using the adapter cap when not in use.

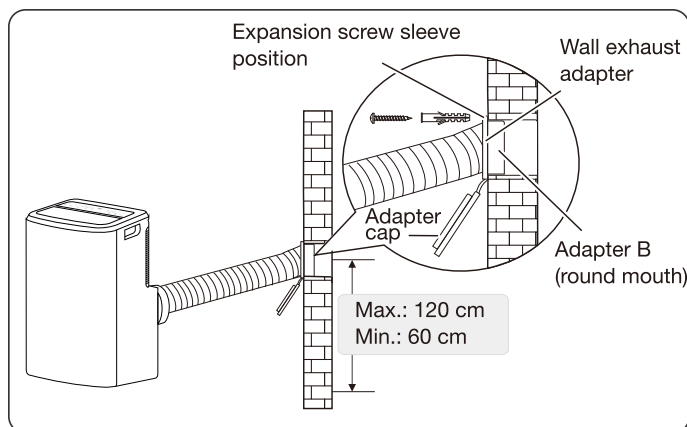


**NOTE:**

1. The duct can be compressed to 270 mm minimum and extended to 1500 mm maximum. It is better to keep the duct length to a minimum.
2. Stretching or bending the duct excessively, will affect the cooling efficiency, as shown in the below figure.

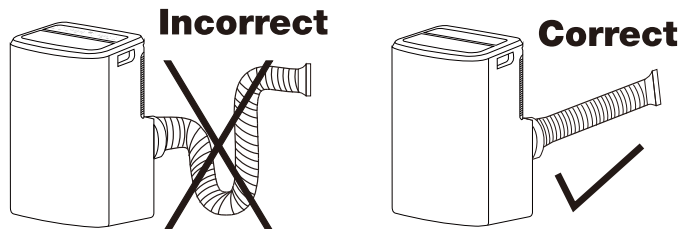


## Drain Hose Installation

1. During Dry mode, remove the upper drain plug from the back of the unit. Attach the drain hose to the hole. Place the other end of the hose into a drain pipe or other appropriate drainage area.

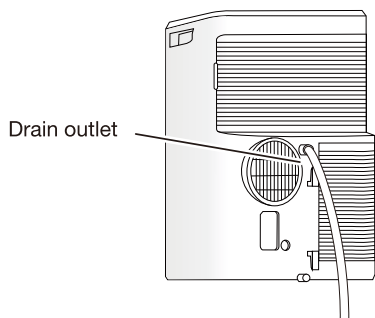

**NOTE:** Make sure the hose is secure, and there are no leaks. Direct the hose toward the drain, making sure that there are no kinks that will obstruct the water flow. Place the end of the hose into the drain and make sure the end of the hose is pointed downwards. Do not direct the hose upward.

2. When the water level of the bottom tray reaches a preset level, the digital display area shows "P1" and the WATER FULL indicator light illuminates. Move the unit to a drain location, remove the bottom plug and let the water drain. Reinstall the bottom drain plug and restart the machine until the "P1" symbol disappears. If the error persists, contact customer service.

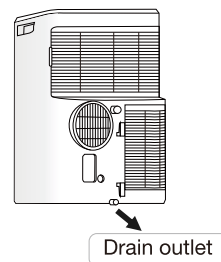

**NOTE:** Be sure to reinstall the bottom drain plug before using the unit.

## USING YOUR AIR CONDITIONER

Fig. A


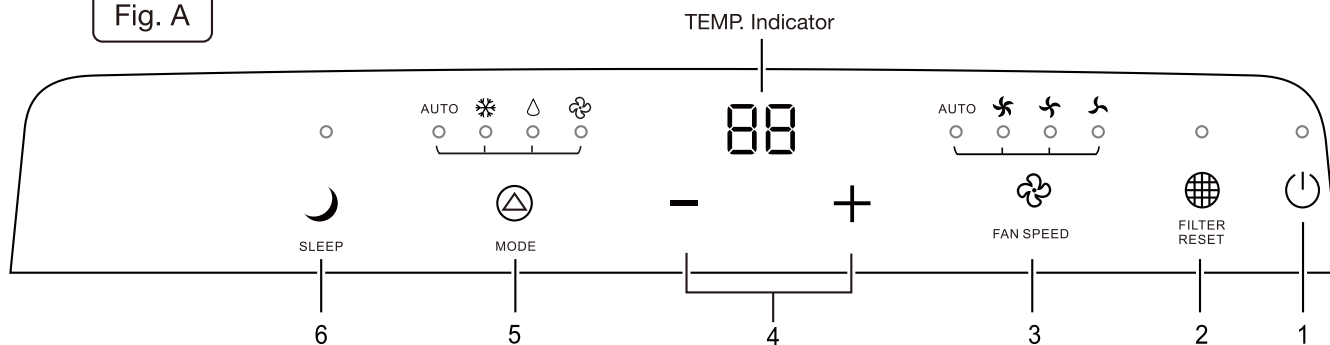


Fig. B

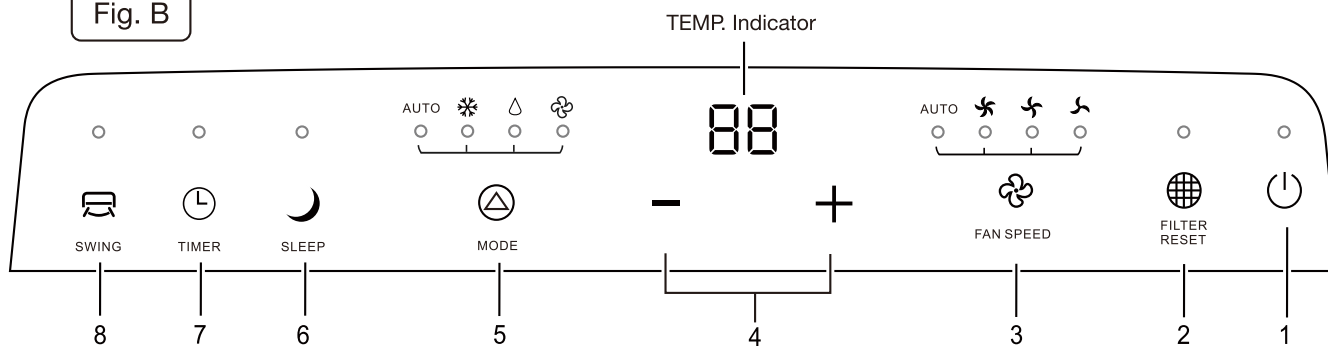

Appearance may vary.

---

## Temperature Indicator

- In cool mode, when the “-” or “+” button is pressed, the temperature setting is displayed and can be adjusted.
- In auto and cool mode, temperature indicator display will show temperature setting options.
- In dry and fan mode, the temperature indicator display will show room temperature options.

---

## Button Functions

### 1. On/Off (⏻) button:

- Press this button to turn the unit on or off.

### 2. Filter Reset (🔄) button:

- When the unit completes 250 hours of operation, the filter reset indicator light will illuminate. Clean the air filter when the indicator light illuminates or turns on.
- Press the “Filter Reset” button when the filter reset indicator light illuminates. The indicator light will stay illuminated until the unit is powered off.

### 3. Fan Speed (🌀) button:

- Press this button, to select the fan speed as follows-

→ Auto → Low → Medium → High →

The fan speed indicator light illuminates under the selected fan speeds.

**NOTE:** In fan mode, the auto fan speed option will not work.

### 4. “-” or “+” button:

- Each time the “+” or “-” button is pressed, the temperature setting will increase or decrease by 1°C or by 1°F.
- The temperature setting ranges from 60°F (16°C)~ 90°F (32°C).

### 5. Mode (⏻) button:

- Press this button to select the running mode as follows-

→ AUTO → COOL → DRY → FAN →

The mode indicator light illuminates under different modes.

### 6. Sleep (🌙) button:

- Press this button to enter sleep mode.
- The unit will exit sleep mode after 8 hours of continuous operation and restore to the previous status.

**NOTE:** The sleep function can not be activated in fan and dry mode.

### 7. Timer (⌚) button:

- Press this button to initiate the timed run setting. The indicator light will illuminate.
- Press the “-” or “+” button to select the desired time.
- Time can be increased or decreased in half hour increments, between 30 minutes and 24 hours.

**NOTE:**

If the Timer function is already activated, pressing the Timer (⌚) button will turn off the timer.

If the Timer function is off, pressing the Timer (⌚) button will turn on the timer.

### 8. Swing (↔) button:

Press this button, the swing indicator light will illuminate, and the fan will move in an up and down motion.

# OPERATION

## ⚠ WARNING



### Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

### Before starting the unit:

1. Make sure the unit is near an electrical outlet.
2. Install the flexible exhaust hose and ensure the end is properly vented through a window or wall exhaust kit.
3. Ensure the unit is placed on even flooring or other appropriate flat surface.

### Cool mode:

1. Press the “MODE” button in the below sequence until the cool indicator is illuminated.

→ AUTO → **COOL** → DRY → FAN →

2. Press the “+” and “-” button to set your desired temperature.
3. Press the “FAN” button to select the fan speed.

### Dry mode:

1. Press the “MODE” button in the below sequence until the dry indicator is illuminated.

→ AUTO → COOL → **DRY** → FAN →

2. The fan will run at a fixed speed in this operating mode.
3. Close windows and doors for optimal performance.

**NOTE:** The temperature setting and fan speed cannot be adjusted when operating in Dry mode. The setting temperature is 75°F (24°C), and the fan speed is low.

### Fan mode:

1. Press the “MODE” button in the below sequence until the fan indicator is illuminated.

→ AUTO → COOL → DRY → **FAN** →

2. Press the “FAN” button to select the fan speed.

**NOTE:** The temperature setting cannot be adjusted in fan mode.


# USING THE REMOTE CONTROL

## Before Use

- Prior to using the remote control, install the batteries and ensure the “+” and “-” poles are correctly positioned.
- Ensure the remote control is pointed to the signal receiving window, and there is no obstruction between the receiver and the remote.
- The effective range of the remote control is within 24 feet of the unit.
- Do not drop or throw the remote control.
- Do not expose the remote control to liquid or moisture.
- Do not expose the remote control directly to the sunlight or excessive heat.
- If the remote control does not function normally, remove the batteries for 30 seconds before reinstalling them. If that doesn't work, replace the batteries.
- When replacing batteries, do not mix new batteries with old batteries.
- If the remote control will not be used for a long period, remove the batteries as leakage can damage the remote.
- Ensure you properly dispose of batteries after usage.

**NOTE:** This is a universal remote control that includes several function buttons. Depending on the specific air conditioner you have purchased, some functions may not be applicable to your unit.

## Button Functions

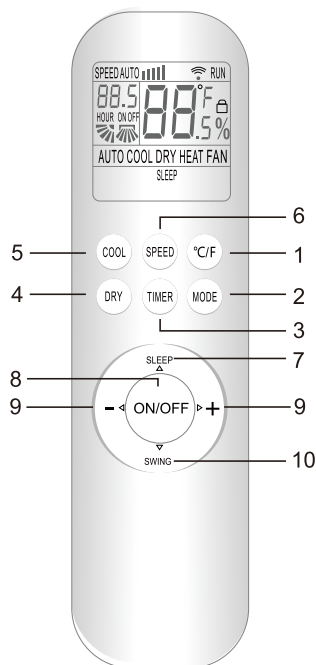

**NOTE:** All function indicators illuminate during the power sequence. Individual icons illuminate when the corresponding functions are activated.

### 1. TEMPERATURE DISPLAY :

- Press this button to toggle between Fahrenheit and Celsius.

### 2. MODE :

- Each time you press this button, a mode is selected in the sequence outlined below.

→ AUTO → COOL → DRY → FAN →

### 3. TIMER :

- Press this button once, the “ON/OFF” will flash. Press “+” or “-” to set the number of hours in which the unit will be turned ON/OFF, with an interval of in half hour increments, between 30 minutes and 24 hours.
- Press the timer button again to confirm the setting. The “ON/OFF” will stop flashing.
- If the timer button is not pressed within 10 seconds after the “ON/OFF” starts flashing, the time setting will be exited.
- If the Timer function is already activated, pressing the Timer () button will turn off the timer. If the Timer function is off, pressing the Timer () button will turn on the timer.

### 4. DRY MODE :

- Press this button to enter DRY mode.

### 5. COOL MODE :

- Press this button to enter COOL mode.

### 6. SPEED :

- Press this button to select the fan speed as follows:

→ Low → Mid → High → Auto  
() () () (AUTO)

**NOTE:** Auto air speed is not available in FAN or DRY mode.

### 7. SLEEP:

- Press this button to enter SLEEP mode.
- After 8 hours of continuous operation the unit will exit the SLEEP mode and restore to the previous setting.

**NOTE:** The SLEEP function can not be activated in FAN or AUTO mode.

### 8. ON/OFF:

- Press this button to turn the unit ON/OFF.
- This will clear the existing TIMER and SLEEP settings.

#### 9. “+” or “-” button:


- Each time the “+” is pressed, the temperature setting will increase by 1°C or by 1°F and each time the “-” is pressed, it will decrease 1°C or by 1°F.
- The temperature setting ranges from 60°F (16°C)~ 90°F (32°C).  
**NOTE:** The temperature can not be set in AUTO or FAN mode.

#### 10. SWING:

- Press this button to activate up/down swing and press it again to fix the swing position.

## Usage

### Installing and replacing batteries:

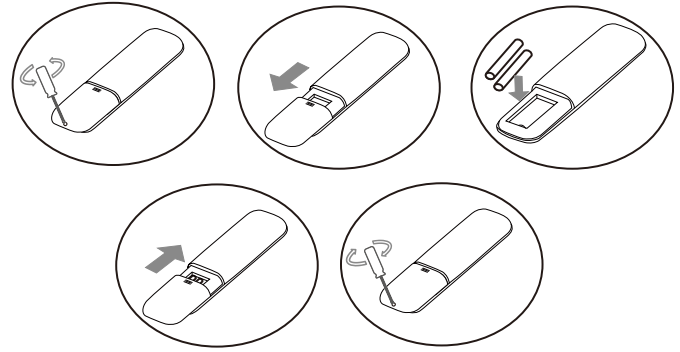

1. Use the screwdriver to remove the cover from the housing. Rotate the screwdriver counter-clockwise to remove the screw.
2. Slide the cover from housing as indicated above.
3. Inset two brand new batteries (AAA), and place them in the correct position (+ and -).
4. Slide the cover back over the housing.
5. Insert the screw to lock the cover. Rotate the screwdriver clockwise to tighten the screw.

### Auto operation mode:

1. Press the “MODE” button, select the Auto operation mode.
2. Pressing “SPEED” button will not change the fan speed in Auto operation mode. Fan speed will be changed automatically in Auto operation mode.

**NOTE:** In Auto Mode, the temperature setting is not operational.

### Cool operation mode:

1. Press the “MODE” button, select the Cool operation mode.
2. Press the “+” or “-” button, to set the temperature range from 60°F (16°C) ~ 90°F (32°C). The display will change as you touch the button.
3. Press the “SPEED” button, to select the fan speed from LOW, MID, HIGH, AUTO.

### Fan operation mode:

1. Press the “MODE” button, select the fan operation mode.
2. Press the “SPEED” button, to select the fan speed from LOW, MID, HIGH.

**NOTE:** Temperature settings are not available in Fan mode.

### Dry operation mode:

1. Press the “MODE” button, select the dry operation mode.
2. Press the “+” or “-” button, to set the temperature range from 60°F (16°C) ~ 90°F (32°C).

**NOTE:** Speed settings are not available in Dry mode.

---

# CARE AND CLEANING

- Do not use gasoline, benzene, thinner, liquid insecticide, or any other chemicals on the air conditioner, as these substances may adversely impact the unit, and may form cracks, or result in deformation of plastic parts.
- Never attempt to clean the unit by pouring water directly over any of the surface areas, as this will cause deterioration of electrical components and wiring insulation.

---

## Cleaning the Unit

When cleaning the exterior of the unit, use a warm, damp towel.




---

## Cleaning the Air Filters

### 1. Remove the upper air filter.

**NOTE:** To remove the upper air filter, first remove the grille cover. Refer to the figure below.

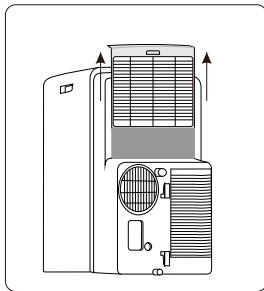


### 2. Clean the upper air filter.

Use a vacuum cleaner to clean the air filter. If the air filter is very dirty, wash it in warm water (below 104°F (40°C)) with a mild detergent, and then dry the filter in a shaded area.



### 3. Reinstall the upper air filter and grille to the air conditioner.

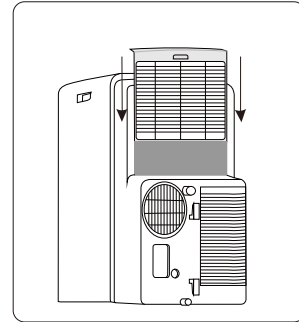

### 4. Clean the lower air filter.

Use a vacuum cleaner to clean the lower air filter.

**NOTE:** Removing the lower air filter from the air conditioner is not required.

# SPECIFICATIONS

Model	WHAP081BWC	WHAP101BWC	WHAP131BWC
Voltage/Frequency	115 V/60 Hz	115 V/60 HZ	115 V/60 HZ
Current/Amperage	9.5 A	11 A	11 A
Cooling Capacity(BTUs/hour)	8000	10000	13000
Seasonally Adjusted Cooling Capacity (SACC)(BTUs/hour)	5500	6500	8000
Coolant Type	R410A	R410A	R410A
Timer	24-hour	24-hour	24-hour
Dimensions W x D x H	13.2" x 16.1" x 27.6" 33.5 x 40.9 x 70.1 cm	13.2" x 16.1"x 27.6" 33.5 x 40.9 x 70.1 cm	18.7" x 15.2" x 28" 47.5 x 38.6 x 71.1 cm
Weight	60.6 lbs 27.5 kg	62.8 lbs 28.5 kg	69.5 lbs 31.5 kg

# TROUBLESHOOTING

First try the solutions suggested here to possibly avoid the cost of a service call.

If you experience	Possible Causes	Solution
Unit will not operate	The power switch available on the unit is switched off.	Switch on the power.
	A household fuse has blown.	Replace the fuse by a qualified electrician.
	A household circuit breaker has tripped.	Reset the circuit breaker.
Unit will not cool	The temperature setting is not set to a cool enough setting.	Set a proper temperature, temperature setting should be lower than ambient temperature.
	The air filter is blocked by dust.	Clean the air filter.
	The air inlet or outlet of the machine is blocked.	Locate and clear the obstruction.
	Room temperature is too high.	Allow appropriate time for the unit to cool the room as cooling time can vary, depending on initial room temperature and other factors.
	Cooling capacity is insufficient.	Verify that the product specifications are appropriate room dimensions.
	Windows or doors to the outside are open.	Close the doors and windows.
Noise or Vibration	The ground is not level or not flat enough.	Place the unit on flat, level ground if possible.
Remote control not working	Remote control batteries are drained.	Check the battery level display on the remote. If necessary, replace the batteries.
	Remote control is not pointed towards the air conditioner.	Make sure the remote is pointed at the air conditioner and that nothing is blocking the remote sensor window on the control panel.

---

# ASSISTANCE OR SERVICE

Before calling for assistance or service, please check “Troubleshooting.” It may save you the cost of a service call. If you still need help, follow the instructions below.

When calling, please know the purchase date and the complete model and serial number of your appliance. This information will help us to better respond to your request.

---

## In the USA

Call XLS Products Customer Service toll free:

**1-800-207-1156.**

Our consultants provide assistance with:

- Features and specifications on our full line of appliances.
- Installation information.
- Use and maintenance procedures.
- Accessory and repair parts.
- Specialized customer assistance.
- Referrals to local dealers, repair parts distributors, and service companies. XLS Products designated service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States.

### For further assistance:

If you need further assistance, you can write to XLS Products with any questions or concerns at:

XLS Products, Inc.  
Customer Service  
P.O. Box 16262  
Philadelphia, PA 19114-0262

Please include a daytime phone number in your correspondence.

---

## In Canada

Call the XLS Products Customer Service toll free:

**1-800-207-1156.**

Our consultants provide assistance with:

- Features and specifications on our full line of appliances.
- Use and maintenance procedures.
- Accessory and repair parts.
- Referrals to local dealers, repair parts distributors, and service companies. XLS Products designated service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in Canada.

### For further assistance:

If you need further assistance, you can write to XLS Products with any questions or concerns at:

XLS Products, Inc.  
Customer Service  
P.O. Box 16262  
Philadelphia, PA 19114-0262

Please include a daytime phone number in your correspondence.

# XLS PRODUCTS WARRANTY FOR WHIRLPOOL® PORTABLE AIR CONDITIONER

## ONE YEAR LIMITED WARRANTY

For one year from the date of purchase, when this product is operated and maintained according to instructions attached to or furnished with the product, XLS Products will pay for replacement parts and repair labor to correct defects in materials or workmanship or replace the product at our discretion. Service must be provided by a XLS Products designated service company. This warranty does not cover the air filter.

### ITEMS XLS PRODUCTS WILL NOT PAY FOR

1. Service calls to correct the installation of your product, instruct you how to use your product, to replace house fuses or reset circuit breakers, replace or clean filters, or correct house wiring.
2. Service calls to repair or replace air filters. Those consumable parts are excluded from warranty coverage.
3. Repairs when your product is used for other than normal, single-family household use.
4. Damage resulting from accident, alteration, misuse, abuse, fire, flood, acts of God, improper installation, installation not in accordance with electrical or plumbing codes, or use of products not approved by XLS Products.
5. Replacement parts or repair labor costs for units operated outside the United States or Canada
6. Pickup and delivery. This product is designed to be repaired in the home.
7. Repairs to parts or systems resulting from unauthorized modifications made to the appliance.
8. Expenses for travel and transportation for product service in remote locations.
9. The removal and reinstallation of your appliance if it is installed in an inaccessible location or is not installed in accordance with published installation instructions.

### DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR AS PROVIDED HEREIN. IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW. XLS PRODUCTS SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS, SO THESE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY, FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Outside the 50 United States and Canada, this warranty does not apply. Contact your authorized XLS Products dealer to determine if another warranty applies.

If you need service, first see the "Troubleshooting" section of the Use & Care Guide. After checking "Troubleshooting," additional help can be found by checking the "Assistance or Service" section or by calling XLS Products. In the U.S.A., call 1-800-207-1156. In Canada, call 1-800-207-1156.

Keep this book and your sales slip together for future reference. You must provide proof of purchase or installation date for in-warranty service.

Write down the following information about your Portable Air Conditioner to better help you obtain assistance or service if you ever need it. You will need to know your complete model number and serial number. You can find this information on the model and serial number label located on the product.

Dealer name \_\_\_\_\_  
Address \_\_\_\_\_  
Phone number \_\_\_\_\_  
Model number \_\_\_\_\_  
Serial number \_\_\_\_\_  
Purchase date \_\_\_\_\_