

 


LITTLE GREEN® CORDLESS PORTABLE CARPET AND UPHOLSTERY CLEANER MODELS 3682, 3734, 3732

Assembly and Charging.....	3	Using the HydroRinse™ Tool (select models)	6
Filling the Clean Water Tank.....	4	Cleaning and Storing Your Machine	7
Using Your Machine.....	5	Warranty	7
Emptying the Dirty Water Tank.....	6		

Product Overview

1. Control Panel
 - A. Battery Status Indicator
 - B. Power Button
 - C. BatteryBoost+ Mode Selector
2. Dirty Tank Lid
3. Dirty Tank Handle
4. Dirty Tank (Float Stack inside)
5. Carry Handle
6. Clean Tank Handle
7. Charging Port
8. Hose Release Latch
9. Clean Water Tank

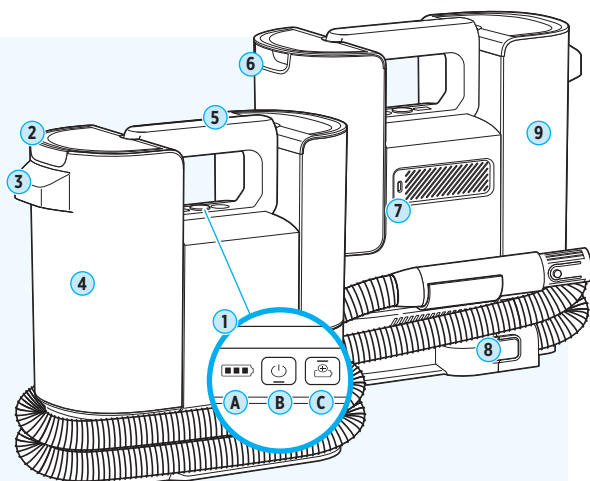

Meet your new BISSELL® product!

Go to support.BISSELL.com for a walkthrough of your new purchase, including videos, tips, support, and more. Want to get started right away? This guide has all the information you need to set up your new product. Let's take a look...

IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
- Unplug charger from outlet when not in use and before servicing.
- Do not expose to rain. Store indoors.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in the user guide.
- Use only manufacturer's recommended attachments.
- Do not use with damaged charger, cord or plug.
- Do not immerse in water or liquid.
- If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water: do not attempt to operate it and have it repaired at an authorized service center.
- Do not pull or carry charger by the cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord.
- Keep charger away from heated surfaces.
- Do not unplug charger by pulling on cord.
- To unplug, grasp the plug, not the cord.
- Do not handle charger, including charger plug and charger terminal, with wet hands.
- Do not put any object into openings.
- Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use appliance in an enclosed space filled with vapors given off by oil-based paint, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Prevent unintentional starting. Ensure the switch is in the OFF-position before picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that can turn the switch on invites accidents.
- Do not use appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C/265°F may cause explosion.
- Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the appliance except as indicated in the instructions for use and care.
- Keep the temperature range of between 4-40°C/40-104°F when charging battery, storing machine or during use.
- Only use with the following chargers; Mass Power Electronic Ltd., Model S030-1B297100HU or Sunstrong International Industrial Ltd., Model SSC-297100US.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- Liquid must not be directed towards equipment containing electrical components.
- Use only BISSELL cleaning products intended for use with this appliance to prevent internal component damage. See the Cleaning Formulas section of this guide.
- Do not charge the unit outdoors.
- Do not incinerate the appliance even if it is severely damaged. The batteries can explode in a fire.
- The appliance must be disconnected from the supply mains when removing the battery.
- Dispose of used batteries promptly.
- Use extra care when cleaning on stairs
- Keep appliance on a level surface.
- Do not carry the vacuum cleaner while in use.
- Turn off all-control, including the Power Switch and disconnect charger from electrical outlet before making any adjustments, performing maintenance, troubleshooting, changing accessories or storing appliance. Such preventative safety measures reduce the risk of starting the appliance accidentally.
- Do not apply liquid directly to any person or animal.
- Battery pack, charging port on the appliance and charger output are not to be short-circuited.
- Do not turn your machine ON until you are familiar with all instructions and operating procedures.
- This appliance contains batteries that are non-replaceable.
- The battery must be removed from the appliance before it is scrapped.
- Plastic tanks are not dishwasher safe. Do not put tanks in dishwasher.

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY.

COMMERCIAL USE OF THIS UNIT voids THE MANUFACTURER'S WARRANTY.



WARNING


This product contains Lithium-Ion rechargeable batteries. DO NOT mix Lithium-Ion batteries with general household waste. According to Federal and State regulations, removal and proper disposal of Lithium-Ion batteries is required. For specific battery disposal instructions please contact Cal2Recycle at 877-723-1297 or visit www.cal2recycle.org. For full instructions on battery removal for recycling visit support.BISSELL.com.



SUPPLIER'S DECLARATION OF CONFORMITY 47 CRF SECTION 2.1077 COMPLIANCE INFORMATION Charger adapter for BISSELL product. CONTACT: BISSELL Homecare Inc., 2345 Walker Ave. NW, Grand Rapids, MI 49544. This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/TV technician for help.

TOOLS INCLUDED IN BOX WILL DIFFER BY MODEL

To see what's included with your purchase, check the "Carton Contents" list on the top flap of the box.

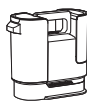


Machine




Hose Clip



 Hose



Charger

 


Tools
(vary by model)




Trial Formula(s)
(vary by model)

Assembly and Charging

 
Important: Plug in the machine immediately upon receiving. For maximum run time (up to 30 minutes in BatteryBoost+), charge for 4 hours before use.

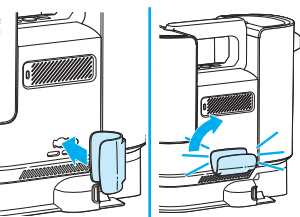

 
1. To install hose clip, insert into back of machine and rotate clockwise until it clicks.

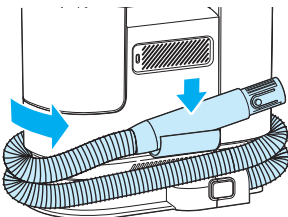

2. Wrap hose around bottom of machine and place on hose clip.

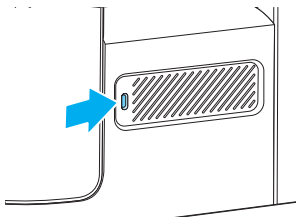

3. Turn machine OFF. The charging port door slides out of the way when charger is inserted. Insert charger into port. Plug charger into a wall outlet.

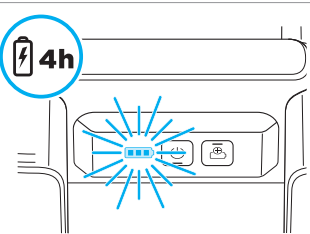


4. The battery status indicator lights will illuminate when charging.

Filling the Clean Water Tank


This machine is compatible with BISSELL® formulas made for portable carpet cleaners. For optimal performance, use genuine BISSELL formulas in your machine. Other formulas or household cleaners may cause defects or damage to the machine.




1. Choose your formula.*

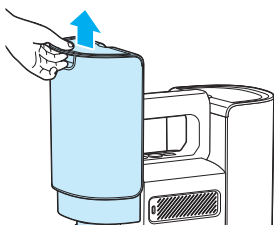

2. Lift clean water tank up to remove.

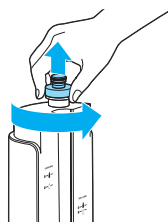


3. Unscrew cap.

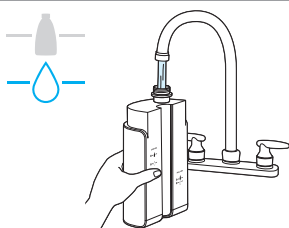


4. Add warm tap water (140°F/60°C max) to fill line based on size of your mess.

Small Area: 14 oz
Large Area: 28 oz

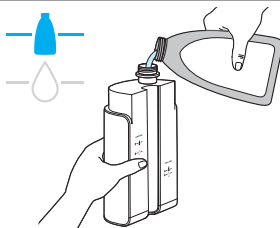

5. Add formula to fill line based on the size of your mess.

Small Area: 2 oz
Large Area: 4 oz

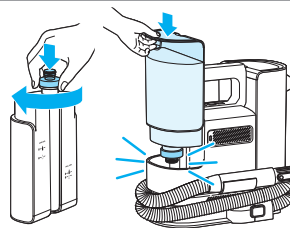

6. Tighten cap back into place. Align clean tank with groove on machine and slide down until it clicks.

***Compatible BISSELL formulas include:** PET PRO Oxy Spot & Stain, Advanced PET Spot & Stain, OXYGEN BOOST, Simply Spot & Stain Pet, Little Green Formula with Oxy







⚠ WARNING To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning formula intended for use with this machine.

Using Your Machine

Before You Clean

- Ensure your machine is fully charged.
- Vacuum to remove loose dirt from areas to be cleaned.
- Spray any BISSELL stain pretreat formula on soiled areas and allow to sit for a few minutes.
- Tip: For upholstery, work in small sections until area is clean.

Attaching and Using the Tools

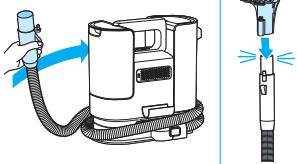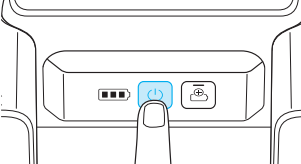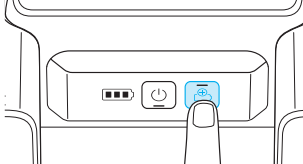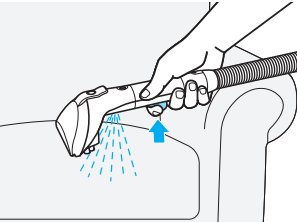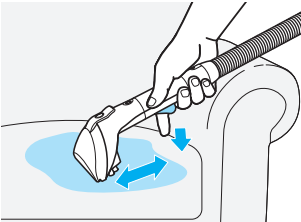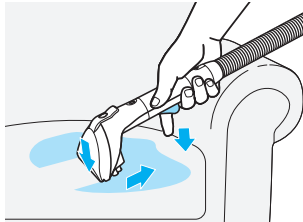		
1. Unwrap hose. Attach your desired tool to end of hose grip until it clicks.	2. Press power button ON.	3. Select cleaning mode . See below for more information. Note: Machine defaults to Standard Mode.
		
4. Point tool above stain and press and hold trigger to spray solution over affected area.	5. Release spray trigger and gently scrub stain using bristles.	6. Release the trigger and make “dry passes” to remove moisture. Apply firm pressure and slowly pull the tool toward you to remove the stain. The motor ramps up to optimal suction when the tool contacts the surface. Repeat until no water is visible in the nozzle.

Cleaning Modes



BatteryBoost+ Mode

ENERGY-EFFICIENT POWER

The light will be solid green when BatteryBoost+ mode is ready. The motor idles until the tool contacts the surface, then ramps up to optimal suction. Run time up to 30 minutes. Note: If the light flashes, wait until it stops to start cleaning.




Standard Mode


HIGHEST SUCTION POWER

Motor remains with optimal suction power for a run time of up to 20 minutes.


Emptying the Dirty Water Tank

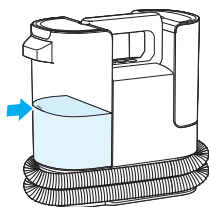

1. Empty dirty water tank when it reaches “MAX” line. **Do not let water level fill above the MAX line.**

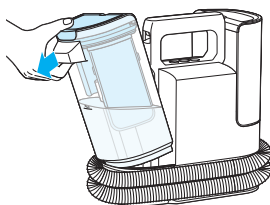

2. Remove tank by tilting outward and carry to a disposal area.

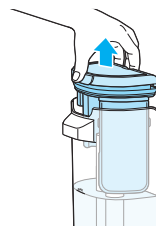


3. Pull up on tank lid to remove.



4. Pour out dirty water and rinse tank.




5. Reinstall tank lid.

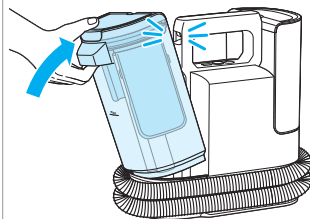

6. Insert bottom of tank first and push top of tank toward machine until it clicks into place.

Using the HydroRinse™ Tool (select models)

Use HydroRinse tool to clean out your hose after each use.

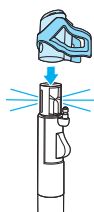


1. Attach tool to end of hose grip until it clicks.




2. Hold hose and tool in an upright position with machine ON. Hold down trigger for 30 seconds. Be sure to empty dirty water tank after use.


Cleaning and Storing Your Machine

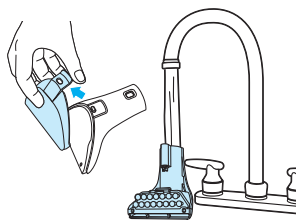


1. Remove and rinse tools under clean, running water. Allow tools to dry.

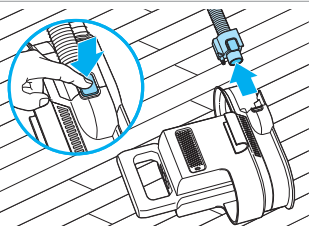


2. Press release latch on hose to remove from machine.

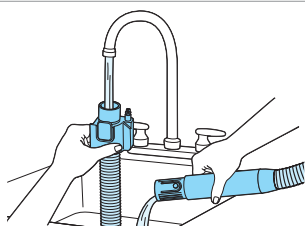

3. Rinse hose with clean water. Lift end of hose and stretch to ensure all water is removed.

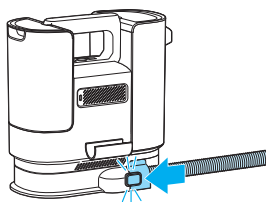

4. Let hose dry completely before reattaching. It will click into place.

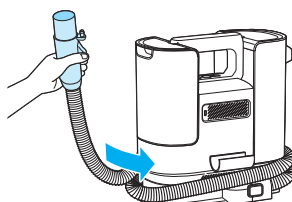

5. Wrap hose for storage. Store indoors in a secure, dry location. If planning to store for over 6 months, ensure battery is fully charged before storage.

Note: Other maintenance or service not included in this manual should be performed by an authorized service representative.

Warranty

Limited 2-year warranty, may vary by state. Visit support.BISSELL.com or call 1-800-237-7691 for complete warranty information.

Terms and Conditions

Your purchase is subject to the BISSELL® Terms and Conditions, which includes dispute resolution through arbitration and class waiver. For complete terms or to opt out from arbitration or class waiver, visit BISSELL.com/terms-of-use or call 1-800-237-7691.

NOTICE

Disconnecting the battery will destroy the appliance and invalidate the warranty.

NOTICE: To reduce the risk of a leaking condition, do not store where freezing may occur. Damage to internal components may result. Store machine in protected, dry area at room temperature (40°F - 104°F).



BISSELL proudly supports BISSELL Pet Foundation® and its mission to help save homeless pets. When you buy a BISSELL® product, you help save pets, too. We're proud to design products that help make pet messes, odors and pet homelessness disappear.

Visit **[BISSELLsavespets.com](https://www.bissellsavespets.com)** to learn more.

Need more support?

Head to **[support.BISSELL.com](https://support.bissell.com)** to troubleshoot, register your product, order spare parts, view your warranty, and more.



REGISTER



INFO



VIDEOS



PARTS



SUPPORT



©2024 BISSELL Inc. All rights reserved.
Part Number 1644386 08/24 v5