




POWERCLEAN® FURFINDER™ CORDED

STICK VACUUM
4282 SERIES

Important Safety Instructions2
Warranty3
Assembly 4
Using Your Vacuum..... 4
Above-Floor Cleaning.....5
Emptying the Dirt Tank.....5
Cleaning and Replacing the Filters.....6
Maintaining the Brush Roll7
Troubleshooting.....7

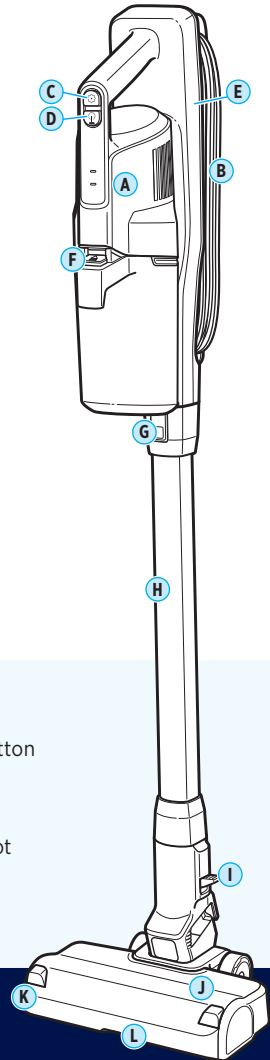

Product Overview

- A. Hand Vacuum
- B. Power Cord
- C. Mode Button
- D. Power Button
- E. SMARTSEAL® Filter
- F. Dirt Tank Release Button
- G. Hand Vacuum Release Button
- H. Extension Wand
- I. Wand Release Foot Lever
- J. Motorized Tangle-Free Foot
- K. Brush Roll Release Button
- L. FurFinder™ Headlights



Meet your new BISSELL® product!

Go to support.BISSELL.com for a walkthrough of your new purchase, including videos, tips, support, and more. Want to get started right away? This guide has all the information you need to set up your new product. Let's take a look...

IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Do not leave appliance when it is plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not use motorized nozzle on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not use for any purpose other than described in this user guide. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorized service center.
- Do not pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the "Name optional" plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
- Turn OFF all controls before plugging or unplugging appliance.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without filters in place.
- Risk of injury from moving parts. Rotating brush may start unexpectedly.
- Unplug before cleaning or servicing.
- Do not turn your appliance ON until you are familiar with all instructions and operating procedures.
- Keep appliance on a level surface.
- Do not use appliance in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.)
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY. COMMERCIAL USE OF THIS UNIT voids THE MANUFACTURER'S WARRANTY.

THIS APPLIANCE HAS A POLARIZED PLUG

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not change the plug in any way.

IMPORTANT INFORMATION

- Brush roll continues to turn while product is turned on and rotating brush tools are attached. To avoid damage to carpet, rugs, furniture and flooring, avoid tipping cleaner or setting it on furniture, fringed area rugs, or carpeted stairs during tool use.
- With brush roll on, do not allow cleaner to sit in one location for an extended period of time, as damage to floor can result.
- When finished using the product, wrap cord around cord wrap for storage. Store unit indoors in a dry location in an area where the product is not likely to get damaged.

Warranty

Limited 3-year warranty, may vary by state. Visit support.BISSELL.com or call 1-800-237-7691 for complete warranty information.

Terms and Conditions

Your purchase is subject to the BISSELL® Terms and Conditions, which includes dispute resolution through arbitration and class waiver. For complete terms or to opt out from arbitration or class waiver, visit BISSELL.com/terms-of-use or call 1-800-237-7691.

TOOLS INCLUDED IN BOX WILL DIFFER BY MODEL


To see what's included with your purchase, check the "Carton Contents" list on the top flap of the box.




Hand Vacuum




Extension Wand

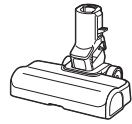

Motorized Foot

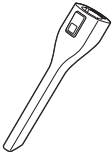

Crevice Tool

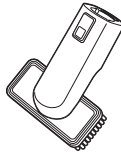

Dusting Brush




Mesh Bag



Upholstery Tool

Assembly

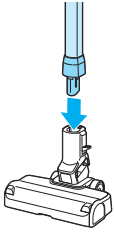


1. Install extension wand into foot until it clicks into place.




2. Install hand vacuum into extension wand until it clicks into place.

Using Your Vacuum

This vacuum can be used as a stick vacuum, hand vacuum, or extended reach with a hand vacuum and wand.

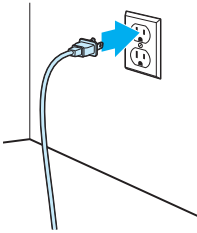

1. Plug machine into outlet.

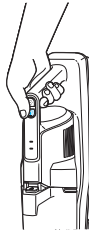

2. Press power button to turn machine ON. Machine will start in High mode.




3. Choose your cleaning mode for your task and surface type. Press the mode button to switch between two modes:

Low: For smaller/light messes.
High: For heavy messes that require maximum suction power.



4. Step gently on motorized foot and pull the handle back to recline. **Note:** The brush roll shuts OFF when vacuum is locked in upright position.



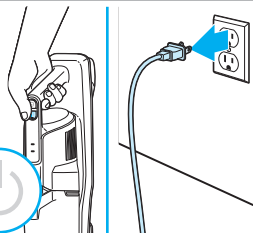


5. Turn machine OFF and unplug

When finished using the machine, wrap cord around cord wrap for storage. Store unit indoors in a dry location in an area where the product is not likely to get damaged.




Above-Floor Cleaning

Using the Hand Vacuum

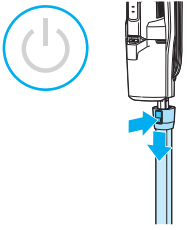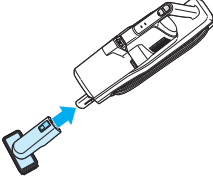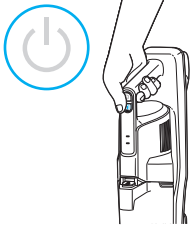
		
<p>1. Turn machine OFF. Press release button to remove extension wand or tools.</p>	<p>2. Attach your desired tool until it clicks into place. Note: The hand vacuum has a built-in crevice tool.</p>	<p>3. Press power button to turn machine ON.</p>

	<p>4. Use upholstery tool to clean furniture, stairs or other surfaces.</p>
--	--


Using the Extension Wand

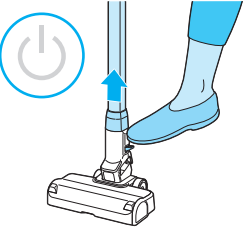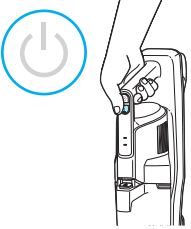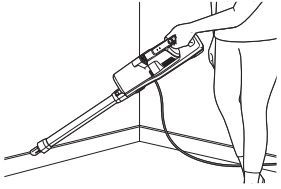		
<p>1. Turn machine OFF. Use your foot to gently press the wand release lever. Pull up on hand vacuum to remove.</p>	<p>2. Press power button to turn machine ON.</p>	<p>3. The extension wand has a built-in crevice tool.</p>


Emptying the Dirt Tank

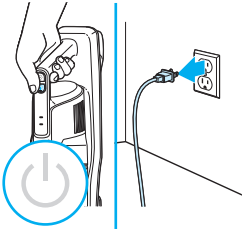


1. Turn machine OFF and unplug.

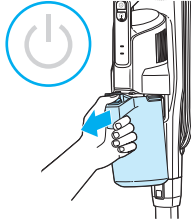

2. Press dirt tank release button and pull outward to remove.

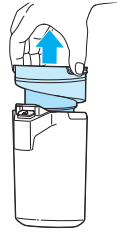


3. Remove separator from dirt tank.

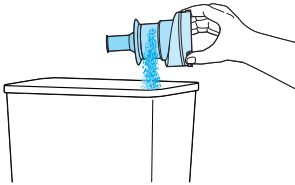


4. Tap separator on waste bin to remove debris.



5. Empty debris into waste bin.

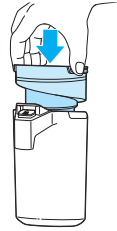

6. Install separator.



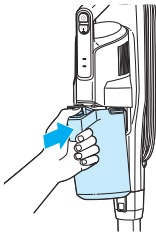



7. Install dirt tank by aligning the bottom of the tank with the notch on the hand vacuum. Press the tank inward until it clicks into place.

Cleaning and Replacing the Filters

Pre-Motor Filter

		
<p>1. Turn machine OFF and unplug.</p>	<p>2. Remove dirt tank.</p>	<p>3. Pull pre-motor filter down to remove.</p>

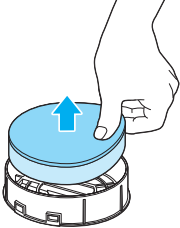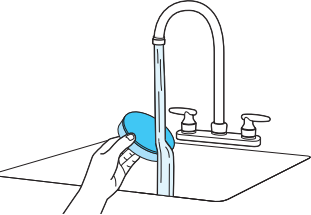
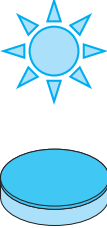


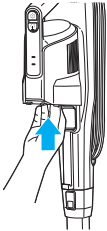
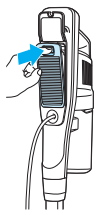
		
<p>4. Remove pre-motor filter from filter basket.</p>	<p>5. Rinse under warm water.</p>	<p>6. Let parts dry completely before installing. Note: A wet or damp filter will affect suction performance.</p>


<p>7. Place filter back into basket with the foam filter on the bottom. Install the filter basket into the hand vacuum by aligning the basket clip with the groove near the vacuum's spine. Push the basket upward firmly until it clicks into place.</p>







Cleaning and Replacing the Filters

Post-Motor Filter

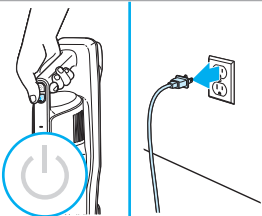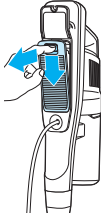For optimal performance, replace the filter every 3 months.

		
<p>1. Turn machine OFF and unplug.</p>	<p>2. Press down on vent cover release button to remove vent cover.</p>	<p>3. Press tab on top of post-motor filter and pull out to remove from vacuum.</p>
		
<p>4. Remove debris from filter by tapping on the side of a waste receptacle wiped with a cloth to clean off any debris. Note: Pleated filter should NOT be washed.</p>	<p>5. When reassembling, be sure to lock the filter back into place by aligning the bottom of the filter first, then clicking the top tab into place.</p>	<p>6. Install the vent cover, by aligning the bottom of the cover first, then while holding the button down install the top until it clicks into place.</p>

Maintaining the Brush Roll

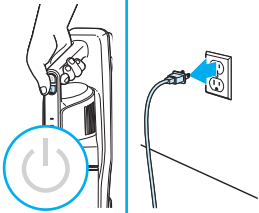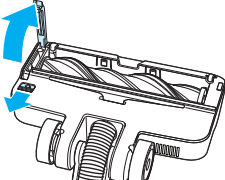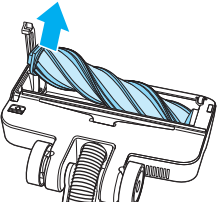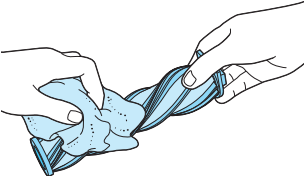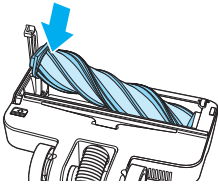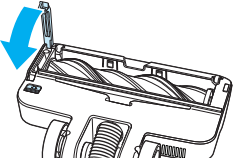		
<p>1. Turn machine OFF and unplug.</p>	<p>2. Remove foot from extension wand. Press brush roll release button.</p>	<p>3. Remove brush roll.</p>
		
<p>4. Wipe brush roll and chamber with a dry cloth.</p>	<p>5. Install brush roll into foot, ensuring flat surface faces out.</p>	<p>6. Lower the brush roll latch until it clicks into place.</p>

Note: Any other maintenance or servicing not included in this manual should be performed by an authorized service representative.

Troubleshooting

🔍 Below are some of the issues you may run into. If you don't see the issue you're experiencing below, visit support.BISSELL.com.

Problem	Possible Cause	Remedies
Machine won't turn ON	Clogged Vacuum.	Power OFF. Remove the Foot/Wand and check for debris or obstructions.
Dust discharges from the exhaust	Filter is damaged.	Order replacement filter.
	Filter is incorrectly installed.	Remove and install filter.
	Filter is dirty.	Clean or order replacement filter.
Loss of suction	Filter is clogged.	Clean or order replacement filter.
	Dirt tank is full.	Empty tank.
The LED power mode lights flash three times, and the motor turns OFF.	Complete air blockage.	Check for clogs in extension wand and filter.
Foot lights blinking	Clogged brush roll.	Turn machine OFF. Remove the foot and check for debris or obstructions.
	Stalled brush roll.	Check cleaning surface. Use a lower mode setting to avoid small rugs/carpet from stalling brush roll.
Blinking error lights	Various reasons.	Turn machine OFF and allow to cool before turning back ON. If this does not work, contact BISSELL Consumer Care.



Every purchase makes it possible for BISSELL to continue our support of BISSELL Pet Foundation® and its mission of saving pets in need. Since 2011, BISSELL has donated over \$26 million in support of BISSELL Pet Foundation®. When you purchase a BISSELL® product, you help save pets, too. Our products are engineered to clean even the toughest messes so pets can stay at home and out of shelters.

Visit [BISSELLsavespets.com](https://www.bissellsavespets.com) to learn more.

Need more support?

Head to [support.BISSELL.com](https://support.bissell.com) to troubleshoot, register your product, order spare parts, view your warranty, and more.



INFO



REGISTER



VIDEOS



PARTS



SUPPORT



©2026 BISSELL Inc. All rights reserved.
Part Number 1650822 11/25 v2