

Roomba® Electro Plus Wet-Dry Vacuum


Owners Guide

Getting Started

What's in the Box

1. Roomba® Electro Plus Wet-Dry Vacuum main unit
2. Clean water tank
3. Dirty water tank with filter
4. Roller brush and roller cover
5. Handle
6. Cleaning brush
7. Charging / self-clean dock and power adapter


Make sure all parts are present before first use.

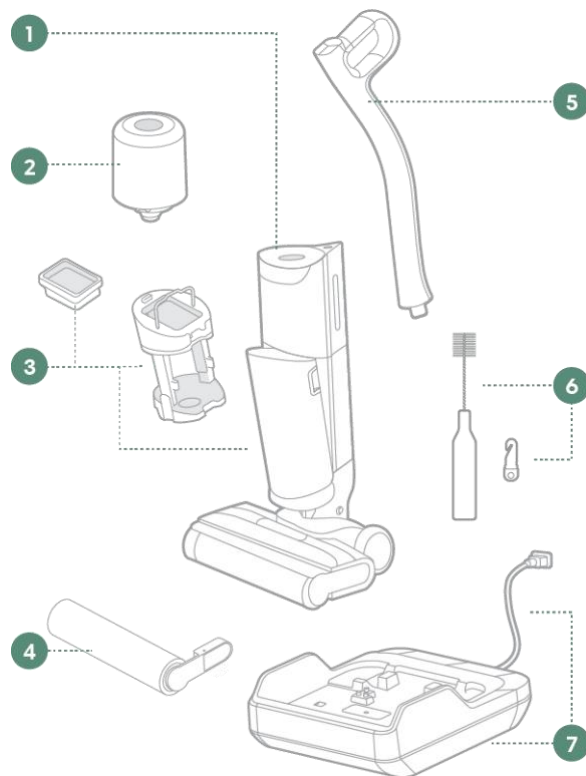

Before First Use


1. Fully charge the vacuum for **4–5 hours** before first use, as shown in the Quick Start Guide.

NOTE: For shipping safety, the battery may arrive partially charged.

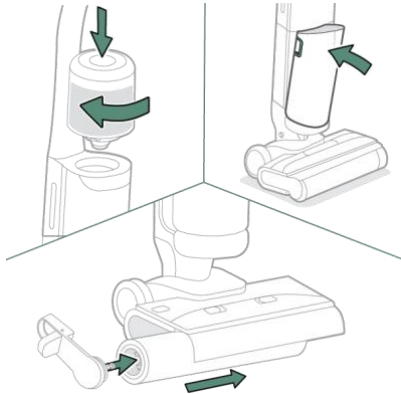

2. Confirm that the following parts are securely installed:

- Clean water tank
- Dirty water tank
- Roller brush and roller cover

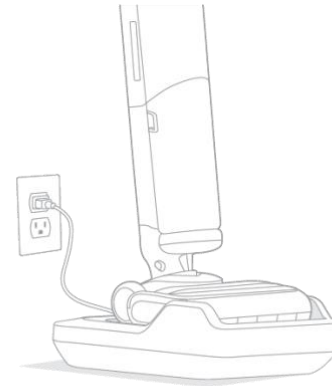


4-5 hours

Handle Installation

1. Align the handle with the opening on the main unit.




2. Push down firmly until you hear a **click**.

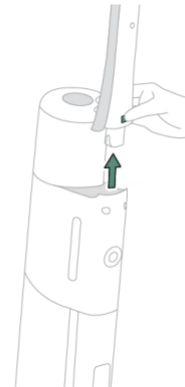


3. To remove the handle, press the release button on the back of the unit and pull the handle upward.


Charging the Vacuum

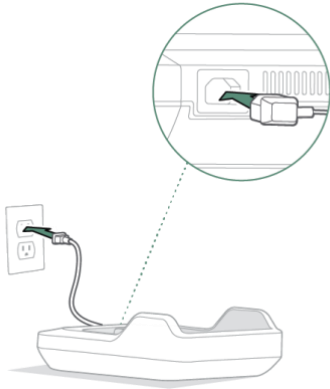

1. Connect the power adapter to the charging dock and plug it into a wall outlet.

2. Place the vacuum onto the dock.

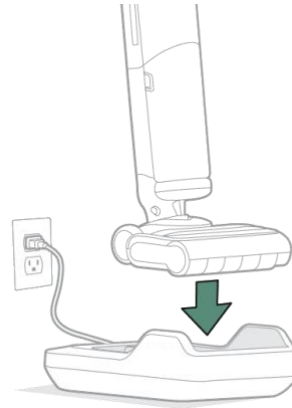

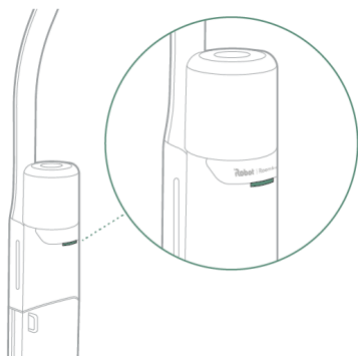


3. The indicator light shows charging status.

4. Charging is complete after approximately **4–5 hours**.

NOTE:

- ***Do not charge the product when the ambient temperature exceeds 45°C (113°F).***
- ***Battery capacity will gradually decrease over time due to normal lithium-ion battery aging.***

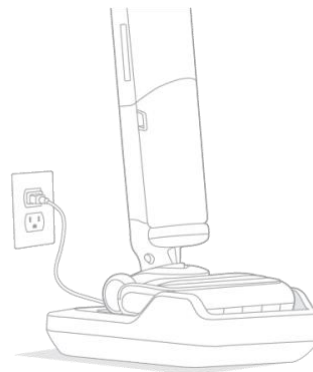

4–5 hours

Important Safety Tips

- Use only on **sealed hard floors** such as tile, marble, and sealed wood.
- Do **not** vacuum foamy, soapy, or sudsy liquids.
- Do not lift, shake, or carry the unit while it is operating. This helps prevent dirty water from entering the motor.

About the Product

The **Roomba®** Electro Plus Wet-Dry Vacuum is a cordless floor-cleaning system that **washes, cleans, and sanitizes** hard floors in one step. It uses a rotating roller brush and **electrolyzed tap water** to help disinfect floors while separating clean and dirty water.

Key Features

- Separate clean and dirty water tanks
- **Eco** and **Turbo** cleaning modes (as shown in the Quick Start Guide)
- Floor **sanitization through electrolysis of ordinary tap water**
- Self-cleaning system for the roller brush
- Dock for charging, storage, and self-cleaning


Basic Operation

Control Buttons

- **Power** – Turns the vacuum on or off
- **Mode** – Switches between Eco and Turbo cleaning modes
- **Self-Clean** – Starts the self-cleaning cycle when docked

Cleaning and Disinfection Modes


- **Eco Mode** – Everyday cleaning with optimized water and power use
- **Turbo Mode** – Stronger cleaning performance for heavier messes
- **Sanitize & Clean Operation** –
 - Uses **electrolyzed tap water** to help sanitize floors while cleaning
 - No additional detergents required unless specified by iRobot
- **Self-Clean Mode** –
 - Cleans internal water pathways
 - Washes the roller brush
 - Helps maintain hygiene after each use

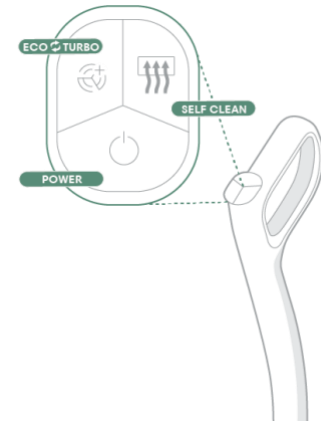


For best hygiene, run Self-Clean after every use, as recommended in the Quick Start Guide.

Filling the Clean Water Tank

1. Remove the clean water tank from the unit.

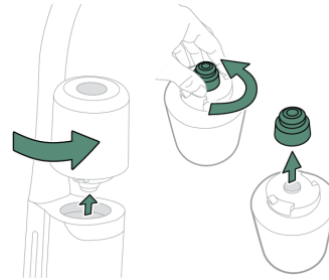


2. Fill with ordinary tap water.

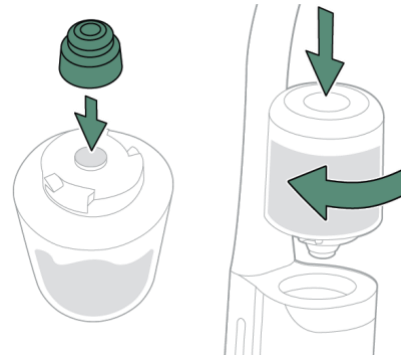

3. Reinsert the tank until it is fully seated.

Starting Cleaning and Disinfection


1. Step gently on the floor brush and tilt the handle back.
2. Press **Power** to start cleaning.
3. Select **Eco** or **Turbo** mode as needed.
4. The vacuum will **clean and sanitize floors simultaneously** during operation.

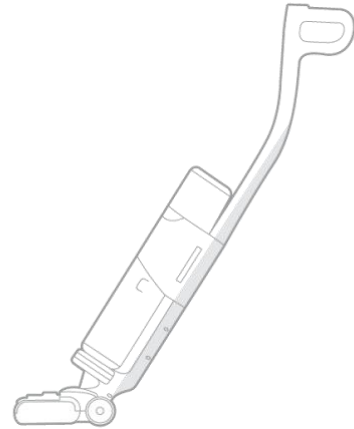

Operating Positions

1. **Upright (80°–95°)** – Cleaning disabled; for storage.
2. **Normal Cleaning (25°–80°)** – Full cleaning and sanitizing performance.
3. **Lie-Flat (0°–25°)** – Reduced power for reaching low areas.

Do not twist the unit sideways to enter lie-flat mode.


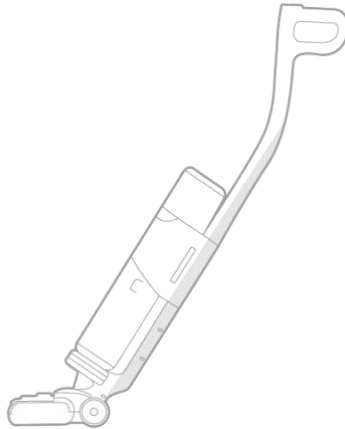


Care and Maintenance

Cleaning the Dirty Water Tank

The vacuum automatically stops when the dirty water tank is full.

1. Remove the dirty water tank.

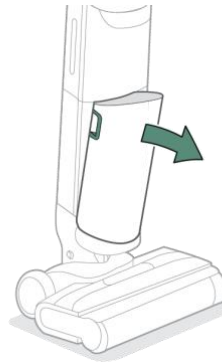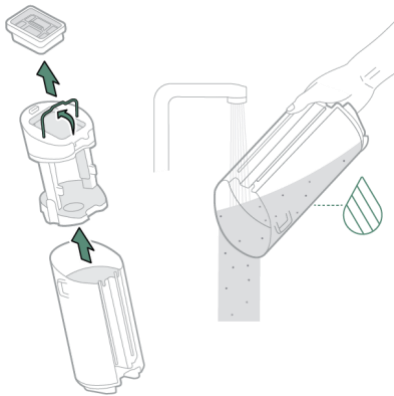


2. Open the cover and empty the tank.

3. Remove and rinse the filter.





4. Rinse the tank and cover with clean water.

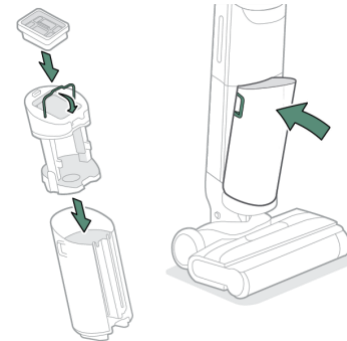


5. Allow all parts to dry fully before reinstalling.

Cleaning the Roller Brush


1. Remove the roller cover.

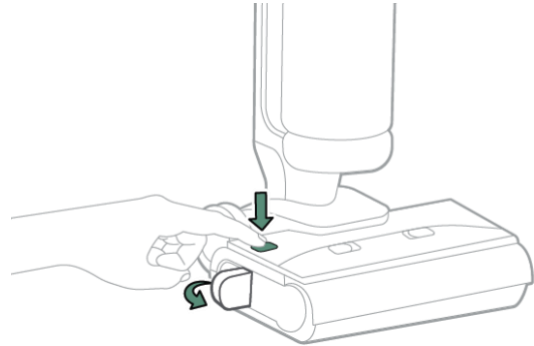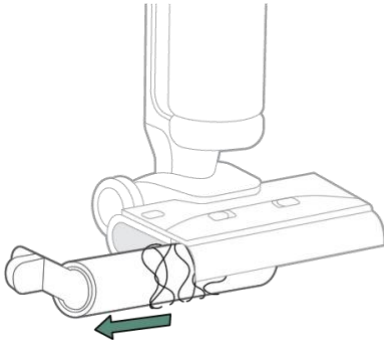


2. Pull out the roller brush.

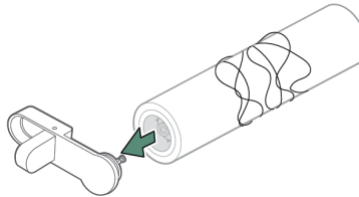

3. Use the cleaning brush to remove hair and debris.

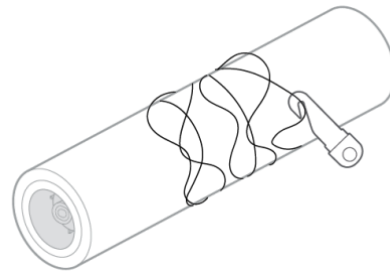


4. Rinse the roller brush and allow it to dry completely.

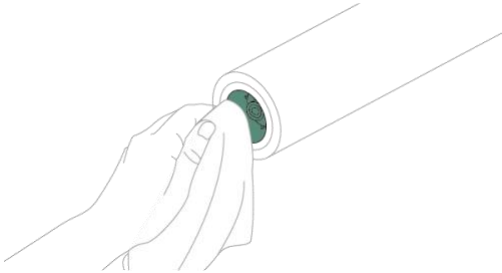

5. Wipe the suction inlet with a dry cloth.



NOTE: Do not rinse the floor head housing with water.

6. Reinstall the roller brush and cover.

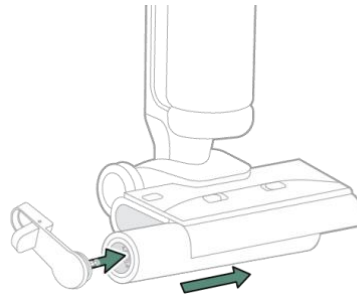

Running Self-Clean

1. Place the vacuum on the dock.

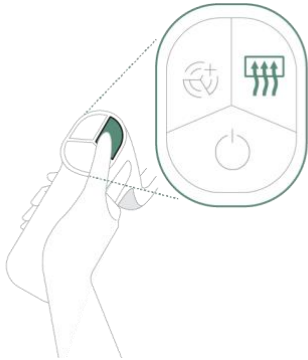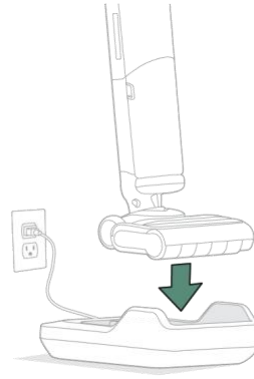


2. Press **Self-Clean**.

*Run this cycle **after every use** to maintain cleaning performance and hygiene.*


Cleaning the Dock

- Wipe the dock with a dry cloth only.
- Do **not** rinse or immerse the dock in water.

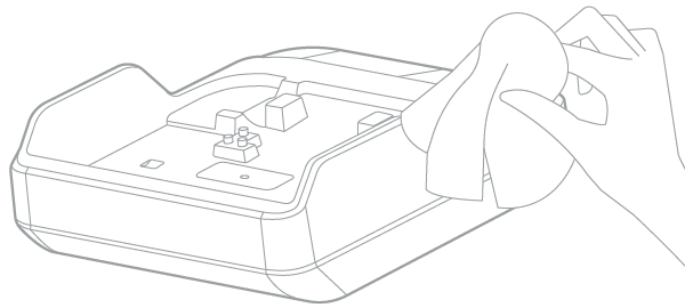

Storing the Vacuum

For best performance and hygiene between uses:

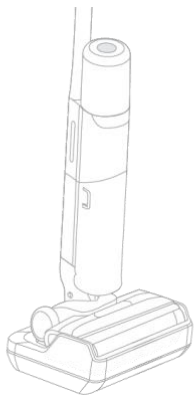

- Place the vacuum **upright on the charging dock** when not in use.
- **Empty the dirty water tank** after each cleaning session.
- Run **Self-Clean** and allow the roller brush and tanks to **dry completely** before storage.
- Store the product **indoors**, away from direct sunlight and moisture.
- Keep the unit assembled and locked in the **upright position** to prevent leaks.

Troubleshooting

The Vacuum Will Not Start

- Ensure the battery is charged.
- Confirm the unit is not fully upright.

Self-Clean Will Not Start

- Make sure the vacuum is correctly placed on the dock.
- Recharge the battery if needed.

The Vacuum Stops During Use

- The dirty water tank may be full. Empty and clean it before resuming.

Reduced Cleaning or Sanitizing Performance

- Check the roller brush for buildup or debris.
- Ensure the clean water tank is filled and properly installed.
- Run a Self-Clean cycle.



©2026 iRobot Corporation. 8 Crosby Drive, Bedford, MA 01730 USA. All rights reserved. iRobot, Roomba, and PerfectEdge are registered trademarks of iRobot Corporation. AutoEmpty, AutoWash, StayClean, and PrecisionVision are trademarks of iRobot Corporation. Wi-Fi and the Wi-Fi logo are registered trademarks of Wi-Fi Alliance. Apple and App Store are trademarks of Apple Inc., registered in the U.S. and other countries. Google Play is a trademark of Google LLC.

Roomba® Electro Plus Wet-Dry Vacuum