

1HP Portable Dust Collector with Wall Mount



Operator's Manual

Record the serial number and date of purchase in your manual for future reference.

Serial Number: _____ Date of purchase: _____

For technical support or parts questions, email techsupport@rikontools.com or call toll free at (877)884-5167

TABLE OF CONTENTS

Specifications	2
Safety Warnings.....	3-6
Electrical Requirements	5
Dust Collector Safety Rules	6
Contents of Package	7
Assembly	8-11
Operation.....	11
Dust Hazards and Safety.....	6, 11
Parts Diagram	12
Parts List	13
Wiring Diagram.....	14
Trouble Shooting.....	14
Maintenance	15
Warranty	15

SPECIFICATIONS

Motor	1HP, TEFC
Motor Speed (no load).....	3,450 RPM
Volts	115 V / 230 V
Amps, Hertz	7.5 A / 3.75 A, 60 Hz
Dust Collection Velocity CFM	660
Blower Impeller	9" Diameter, Steel
Sound Rating @ 3 Feet	<78 dB
Cloth Bag Filtration	2 Microns
Bag Diameter	16"
Bag Length	22"
Bag Capacity	2.4 Cu. Ft.
Dust Ports / Hose Connections	1 @ 4"
Intake Funnel Size	9" x 4-3/4"
Maximum Funnel Height	55"
Dust Hose Size	9' Long x 4" Diameter
Overall Size (LxWxH) Collector Only	18" x 14-1/2" x 19"
Net Weight	48 lbs.

NOTE: The specifications, photographs, drawings and information in this manual represent the current model when the manual was prepared. Changes and improvements may be made at any time, with no obligation on the part of Rikon Power Tools, Inc. to modify previously delivered units. Reasonable care has been taken to ensure that the information in this manual is correct, to provide you with the guidelines for the proper safety, assembly and operation of this machine.

SAFETY INSTRUCTIONS

IMPORTANT! Safety is the single most important consideration in the operation of this equipment. **The following instructions must be followed at all times.** Failure to follow all instructions listed below may result in electric shock, fire, and/or serious personal injury.

There are certain applications for which this tool was designed. We strongly recommend that this tool not be modified and/or used for any other application other than that for which it was designed. If you have any questions about its application, do not use the tool until you have contacted us and we have advised you.

SAFETY SYMBOLS



SAFETY ALERT SYMBOL: Indicates DANGER, WARNING, or CAUTION. This symbol may be used in conjunction with other symbols or pictographs.



Indicates an imminently hazardous situation, which, if not avoided, could result in death or serious injury.



Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.



Indicates a potentially hazardous situation, which, if not avoided, could result in minor or moderate injury.

NOTICE: Shown without Safety Alert Symbol indicates a situation that may result in property damage.

GENERAL SAFETY

KNOW YOUR POWER TOOL. Read the owner's manual carefully. Learn the tool's applications, work capabilities, and its specific potential hazards.

BEFORE USING YOUR MACHINE

To avoid serious injury and damage to the tool, read and follow all of the Safety and Operating Instructions before operating the machine.

1. **CAUTION** Some dust created by using power tools contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints.
- Crystalline silica from bricks, cement, and other masonry products.
- Arsenic and chromium from chemically treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

2. **READ** the entire Owner's Manual. **LEARN** how to use the tool for its intended applications.

3. **GROUND ALL TOOLS.** If the tool is supplied with a 3 prong plug, it must be plugged into a 3-contact electrical receptacle. The 3rd prong is used to ground the tool and provide protection against accidental electric shock. **DO NOT** remove the 3rd prong. See Grounding Instructions on the following pages.

4. **AVOID A DANGEROUS WORKING ENVIRONMENT.** **DO NOT** use electrical tools in a damp environment or expose them to rain.

5. **DO NOT** use electrical tools in the presence of flammable liquids or gases.

6. **ALWAYS** keep the work area clean, well lit, and organized. **DO NOT** work in an environment with floor surfaces that are slippery from debris, grease, and wax.

7. **KEEP VISITORS AND CHILDREN AWAY. DO NOT** permit people to be in the immediate work area, especially when the electrical tool is operating.

8. **DO NOT FORCE THE TOOL** to perform an operation for which it was not designed. It will do a safer and higher quality job by only performing operations for which the tool was intended.

9. **WEAR PROPER CLOTHING. DO NOT** wear loose clothing, gloves, neckties, or jewelry. These items can get caught in the machine during operations and pull the operator into the moving parts. The user must wear a protective cover on their hair, if the hair is long, to prevent it from contacting any moving parts.

10. **CHILDPROOF THE WORKSHOP AREA** by removing switch keys, unplugging tools from the electrical receptacles, and using padlocks.

11. **ALWAYS UNPLUG THE TOOL FROM THE ELECTRICAL RECEPTACLE** when making adjustments, changing parts or performing any maintenance.

SAFETY INSTRUCTIONS

12. KEEP PROTECTIVE GUARDS IN PLACE AND IN WORKING ORDER.

13. AVOID ACCIDENTAL STARTING. Make sure that the power switch is in the “OFF” position before plugging in the power cord to the electrical receptacle.

14. REMOVE ALL MAINTENANCE TOOLS from the immediate area prior to turning “ON” the machine.

15. USE ONLY RECOMMENDED ACCESSORIES. Use of incorrect or improper accessories could cause serious injury to the operator and cause damage to the tool. If in doubt, check the instruction manual that comes with that particular accessory.

16. NEVER LEAVE A RUNNING TOOL UNATTENDED. Turn the power switch to the “OFF” position. **DO NOT** leave the tool until it has come to a complete stop.

17. DO NOT STAND ON A TOOL. Serious injury could result if the tool tips over, or you accidentally contact the tool.

18. DO NOT store anything above or near the tool where anyone might try to stand on the tool to reach it.

19. MAINTAIN YOUR BALANCE. DO NOT extend yourself over the tool. Wear oil resistant rubber soled shoes. Keep floor clear of debris, grease, and wax.

20. MAINTAIN TOOLS WITH CARE. Always keep tools clean and in good working order. Keep all blades and tool bits sharp, dress grinding wheels and change other abrasive accessories when worn.

21. EACH AND EVERY TIME, CHECK FOR DAMAGED PARTS PRIOR TO USING THE TOOL. Carefully check all guards to see that they operate properly, are not damaged, and perform their intended functions. Check for alignment, binding or breaking of moving parts. A guard or other part that is damaged should be immediately repaired or replaced.

22. DO NOT OPERATE TOOL WHILE TIRED, OR UNDER THE INFLUENCE OF DRUGS, MEDICATION OR ALCOHOL.

23. SECURE ALL WORK. Use clamps or jigs to secure the work piece. This is safer than attempting to hold the work piece with your hands.

24. STAY ALERT, WATCH WHAT YOU ARE DOING, AND USE COMMON SENSE WHEN OPERATING A POWER TOOL.

A moment of inattention while operating power tools may result in serious personal injury.

25. ALWAYS WEAR A DUST MASK TO PREVENT INHALING DANGEROUS DUST OR AIRBORNE PARTICLES, including wood dust, crystalline silica dust and asbestos dust. Direct particles away from face and body. Always operate tool in well ventilated area and provide for proper dust removal. Use dust collection system wherever possible. Exposure to the dust may cause serious and permanent respiratory or other injury, including silicosis (a serious lung disease), cancer, and death. Avoid breathing the dust, and avoid prolonged contact with dust. Allowing dust to get into your mouth or eyes, or lay on your skin may promote absorption of harmful material. Always use properly fitting NIOSH/OSHA approved respiratory protection appropriate for the dust exposure, and wash exposed areas with soap and water.

26. USE A PROPER EXTENSION CORD IN GOOD CONDITION. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. The table on the following page shows the correct size to use depending on cord length and nameplate amperage rating. If in doubt, use the next heavier gauge. The smaller the gauge number, the larger diameter of the extension cord. If in doubt of the proper size of an extension cord, use a shorter and thicker cord. An undersized cord will cause a drop in line voltage resulting in a loss of power and overheating.
USE ONLY A 3-WIRE EXTENSION CORD THAT HAS A 3-PRONG GROUNDING PLUG AND A 3-POLE RECEPTACLE THAT ACCEPTS THE TOOL’S PLUG.

27. ADDITIONAL INFORMATION regarding the safe and proper operation of this product is available from:

- Power Tool Institute
1300 Summer Avenue
Cleveland, OH 44115-2851
www.powertoolinstitute.org
- National Safety Council
1121 Spring Lake Drive
Itasca, IL 60143-3201
www.nsc.org
- American National Standards Institute
25 West 43rd Street, 4th Floor
New York, NY 10036
www.ansi.org
- ANSI O1.1 Safety Requirements for Woodworking Machines and the U.S. Department of Labor regulations
www.osha.gov

28. SAVE THESE INSTRUCTIONS. Refer to them frequently and use them to instruct others.

SAFETY INSTRUCTIONS

ELECTRICAL SAFETY

⚠ WARNING: THIS TOOL MUST BE GROUNDED WHILE IN USE TO PROTECT THE OPERATOR FROM ELECTRIC SHOCK.

IN THE EVENT OF A MALFUNCTION OR BREAKDOWN, grounding provides the path of least resistance for electric current and reduces the risk of electric shock. This tool is equipped with an electric cord that has an equipment grounding conductor and requires a grounding plug (not included). The plug **MUST** be plugged into a matching electrical receptacle that is properly installed and grounded in accordance with **ALL** local codes and ordinances.

DO NOT MODIFY ANY PLUG. If it will not fit the electrical receptacle, have the proper electrical receptacle installed by a qualified electrician.


IMPROPER ELECTRICAL CONNECTION of the equipment grounding conductor can result in risk of electric shock. The conductor with the green insulation (with or without yellow stripes) is the equipment grounding conductor. **DO NOT** connect the equipment grounding conductor to a live terminal if repair or replacement of the electric cord or plug is necessary.

CHECK with a qualified electrician or service personnel if you do not completely understand the grounding instructions, or if you are not sure the tool is properly grounded when installing or replacing a plug.

USE ONLY A 3-WIRE EXTENSION CORD THAT HAS THE PROPER TYPE OF A 3-PRONG GROUNDING PLUG THAT MATCHES THE MACHINE'S 3-PRONG PLUG AND ALSO THE 3-POLE RECEPTACLE THAT ACCEPTS THE TOOL'S PLUG. *

REPLACE A DAMAGED OR WORN CORD IMMEDIATELY.

This tool is intended for use on a circuit that has an electrical receptacle as shown in **FIGURE A**. It shows a 3-wire electrical plug and electrical receptacle that has a grounding conductor. If a properly grounded electrical receptacle is not available, an adapter as shown in **FIGURE B** can be used to temporarily connect this plug to a 2-contact ungrounded receptacle. The adapter has a rigid lug extending from it that **MUST** be connected to a permanent earth ground, such as a properly grounded receptacle box. **THIS ADAPTER IS PROHIBITED IN CANADA.**

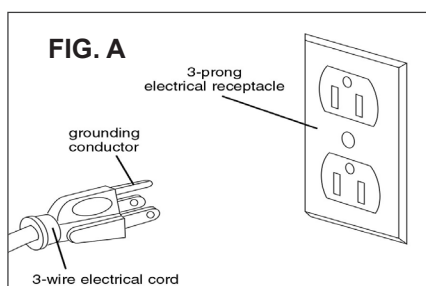

EXTENSION CORDS

⚠ WARNING: THE USE OF AN EXTENSION CORD WITH THIS MACHINE IS NOT RECOMMENDED. For best power and safety, plug the machine directly into a dedicated, grounded electrical outlet that is within the supplied cord length of the machine.

If an extension cord needs to be used, it should only be for a limited operation of the machine. The extension cord should be as short as possible in length, and have a minimum gauge size of 14AWG.

⚠ WARNING: Check extension cords before each use. If damaged replace immediately. Never use a tool with a damaged cord, since touching the damaged area could cause electrical shock, resulting in serious injury.

Use a proper extension cord. Only use cords listed by Underwriters Laboratories (UL). Other extension cords can cause a drop in line voltage, resulting in a loss of power and overheating of tool. When operating a power tool outdoors, use an outdoor extension cord marked "W-A" or "W". These cords are rated for outdoor use and reduce the risk of electric shock.


MINIMUM RECOMMENDED GAUGE FOR EXTENSION CORDS (AWG)

120 VOLT OPERATION ONLY				
	25' LONG	50' LONG	100' LONG	150' LONG
0 to 6 Amps	18 AWG	16 AWG	16 AWG	14 AWG
6 to 10 Amps	18 AWG	16 AWG	14 AWG	12 AWG
10 to 12 Amps	16 AWG	16 AWG	14 AWG	12 AWG

⚠ WARNING: Keep the extension cord clear of the working area. Position the cord so that it will not get caught on lumber, tools or other obstructions while you are working with your power tool.

* Canadian electrical codes require extension cords to be certified SJT type or better.

** The use of an adapter in Canada is not acceptable.

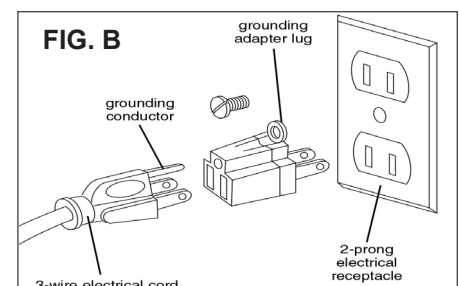

SAFETY INSTRUCTIONS

SPECIFIC SAFETY INSTRUCTIONS FOR DUST COLLECTORS

This machine is intended for the collection of chips, shavings and dust from the surfacing, cutting and sanding of natural wood, plywood, plastics and other man-made wood based composites. It is for collecting DRY materials only. Any other use not as specified, including modification of the machine or use of parts not tested and approved by the equipment manufacturer, can cause unforeseen damage and invalidate the warranty.

ATTENTION: Use of this dust collector still presents risks that cannot be eliminated by the manufacturer. Therefore, the user must be aware that wood working machines are dangerous if not used with care and all safety precautions are adhered to.

1. Do not operate this machine until you have read all of the following instructions.
2. Do not attempt to operate this machine until it is completely assembled.
3. Do not turn ON this machine if any pieces are missing or damaged.
4. If you are not familiar with the operation of the machine, obtain assistance from a qualified person.
5. It is highly recommended that this machine be placed on a level surface.
6. This machine must be properly grounded.
7. Always wear approved protective eye, hearing and respiratory protection when operating this machine.
8. Always make sure the power switch is in the OFF position prior to plugging in the machine.
9. Always make sure the power switch is in the OFF position and the machine is unplugged when doing any cleaning, assembly, setup operations, or when not in use.
10. DO NOT use the dust collector for collecting liquids, substances impregnated with liquids, metals, gasoline or potentially flammable or combustible substances.
11. DO NOT use the dust collector to dissipate fumes or smoke. NEVER pick up any material that is burning or smoking, such as cigarettes, matches or hot ashes.
12. DO NOT use the dust collector without a filter bag and collector bag securely in place.
13. DO NOT use the dust collector with unused intake ports uncapped. Always cover exposed intake ports.
14. Always wear a dust mask when cleaning or working near a dust collector.
15. Make sure all machine parts, hose connections and bags are securely tightened before operating the machine. Periodically check bags and hoses for rips or tears. If present, repair or replace immediately.
16. The use of any accessories or attachments not recommended may cause injury to you and damage your machine.
17. Never reach inside of a running machine. Always keep your hands, body parts and clothing clear of openings and moving parts such as impellers, fans and hose intake openings.
18. Do not clear any hose blockage while the machine is running. Stop the machine, unplug it from the power source, and then remove the blockage in the hose.
19. Do not expose the machine to rain or use in damp locations.
20. Keep these instructions for future reference.

This owner's manual is not a teaching aid and is intended to show assembly, adjustments, and general use.





CALIFORNIA PROPOSITION 65 WARNING



WARNING: Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the State of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection. For more information go to www.P65Warnings.ca.gov/wood


CONTENTS OF PACKAGE

When unpacking, check to make sure the following parts are included. If any parts are missing or broken, please call RIKON Power Tools (877-884-5167) as soon as possible for replacements.

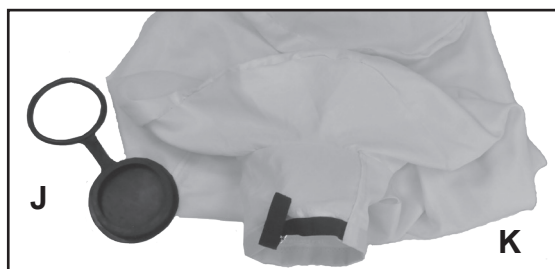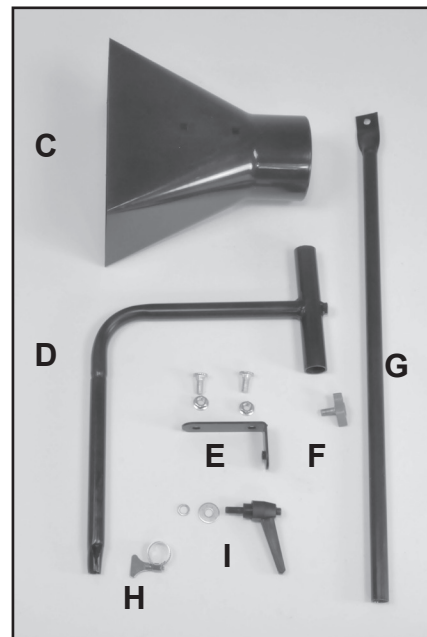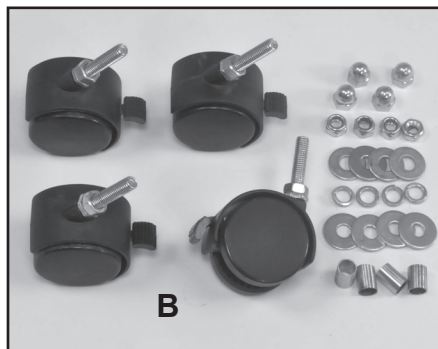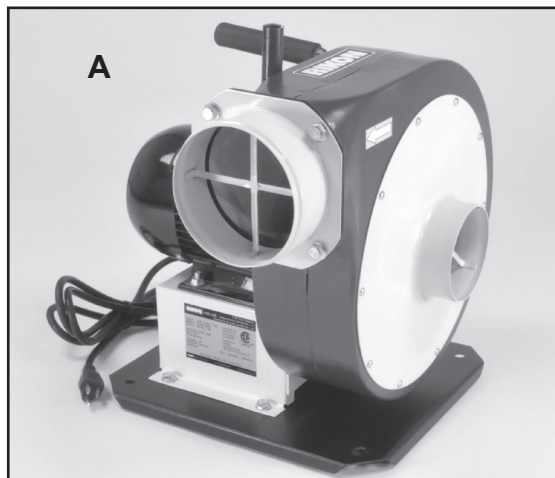

- A Motor & Base Assembly
- B Base Casters (4) & Hardware
- C Intake Funnel
- D 'L' Support Pipe
- E Funnel Mounting Hardware
- F Knob for 'L' Support Pipe
- G Funnel Support Pipe
- H Clamp for 'L' Support Pipe
- I Handle & Hardware for Funnel

- J Cap for Intake Port
- K Dust Bag - 2 Microns
- L 4" Diameter x108" Long Hose
- M 5" Hose Clamp
- N 4" Hose Clamp (2)
- O Wall Mounting Bracket
- P Mounting Bracket Hardware
- Q Manual & Warranty Card
(not shown)

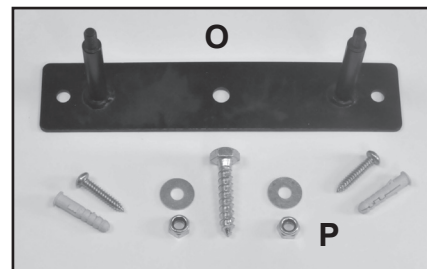

Parts Diagram and
Parts List are listed
on Pages 12 and 13.

Model 60-105 1HP Portable Dust Collector is shipped complete in one box.

Unpacking and Clean-up

1. Carefully remove all contents from the shipping carton. Compare the contents with the list of contents to make sure that all of the items are accounted for, before discarding any packing material. Place parts on a protected surface for easy identification and assembly. If any parts are missing or broken, please call RIKON Customer Service (877-884-5167) as soon as possible for replacements. DO NOT turn your machine ON if any of these items are missing. You may cause injury to yourself or damage to the machine.
2. Report any shipping damage to your local distributor. Take photographs for any possible insurance claims.
3. Clean any rust protected surfaces with ordinary house hold type grease or spot remover. Do not use; gasoline, paint thinner, mineral spirits, etc. These may damage painted surfaces.
4. Set packing material and shipping carton aside. Do not discard until the machine has been set up and is running properly.

ASSEMBLY

INSTALL THE CASTERS ON THE BASE PLATE

NOTE: See page 10 on wall mounting the collector, as pending use, installing the casters may not be necessary if the collector is to be permanently mounted on the wall for dedicated use to a machine.

Locate Parts Bag 4 which includes;

- A 4 swivel Casters (Parts Diagram #34)
- B 4 Bushings (#41)
- C 8 Flat Washers (#6)
- D 4 Locking Spring Washers (#7)
- E 4 Hex Nuts (#32)
- F 4 Hex Cap Nuts (#42)

Assemble the caster and hardware onto the base plate according to the order shown in Figure 1.

1. Place a Bushing and Flat Washer onto the threaded stem of the Caster and insert the stem through one of the four holes in the corner of the base plate.
2. Onto the caster's threaded stem, place a Flat Washer, Locking Spring Washer and Hex Nut.
3. Tighten the Hex Nut to secure the caster to the base plate.
4. Place a Hex Cap Nut onto the threaded stem and then tighten it in place.
5. Repeat steps 1 to 4 for installing the remaining three swivel casters.

INSTALL THE FILTER BAG ON THE COLLECTOR

The cloth Filter Bag (#11) mounts onto the large 5" Exhaust Port (#14), and is held in position with its built-in strap and the 5" Hose Clamp (#12).

1. Slip the 5" Hose Clamp onto the small, connection sleeve of the filter bag.
2. Install the Dust Bag's connection sleeve and Hose Clamp onto the Exhaust Port. Figure 3A.
3. Tighten the dust bag's nylon strap to secure the bag in place. Then tighten the hose clamp with a #2 Phillips screwdriver, 10mm or adjustable wrench. The dust bag is now secured onto the dust collector.

NOTE: The Dust Bag does NOT have to be removed from the machine for emptying when it becomes filled with sawdust and shavings. The large end of the bag has a zipper for easy removal of this debris. Fig. 3B.

⚠ WARNING

THE MACHINE MUST NOT BE PLUGGED IN AND THE POWER SWITCH MUST BE IN THE OFF POSITION UNTIL ASSEMBLY IS COMPLETE.

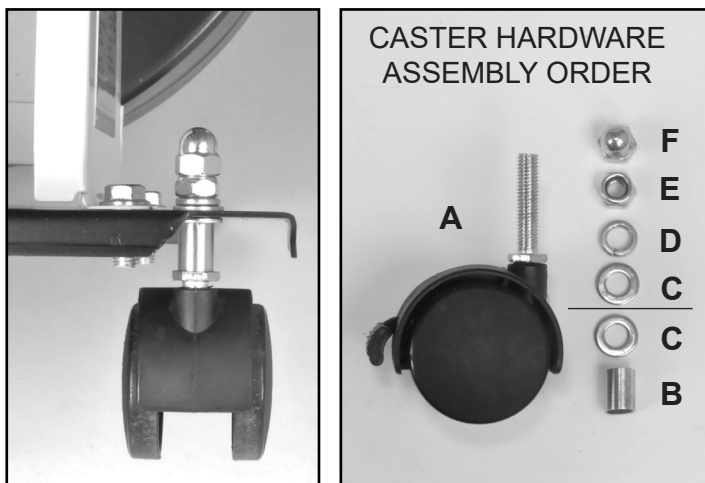


FIG. 1


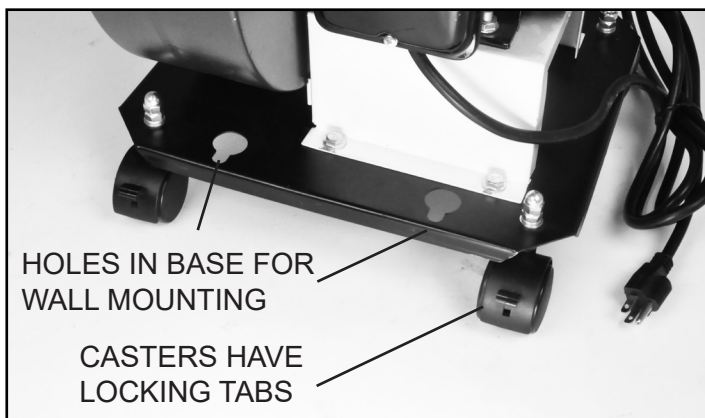


FIG. 2

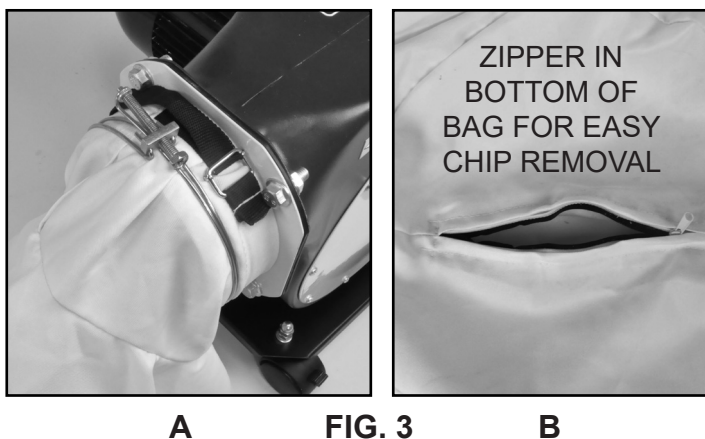

A

FIG. 3

B

The 60-105 Portable Dust Collector can be used *with or without* the vertical arm Support Pipes and Intake Funnel. Instructions for setting up your machine in both configurations are as follows.

ASSEMBLY

INSTALL THE 4" DUST HOSE

Locate the 4" Hose (#17) and two 4" Hose Clamps (#16).

1. Slip a hose clamp (A) over both ends of the hose.
2. Place one end of the hose over the 4" inlet on the fan's Housing Cover (#20) and tighten the hose clamp with a slotted screwdriver or wrench. Figure 4.
3. The other end of the hose can be installed directly to the dust port onto one of your shop woodworking machines (bandsaw, sander, planer, etc.). Tighten the hose in place with the hose clamp.

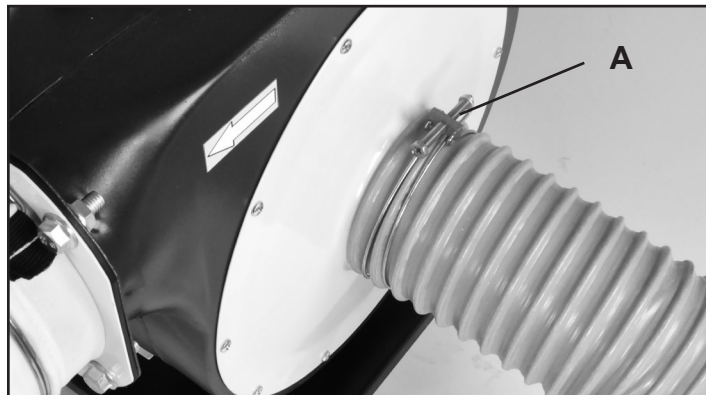


FIG. 4

NOTE: The hose can also be attached to the Intake Funnel (#1) which is fastened to the adjustable, verticle pipe support system. This system allows the dust collector funnel to be positioned high for debris collection with lathes, drill presses, workbenches or even positioned downward for floor sweeping!

ASSEMBLE & INSTALL THE VERTICLE SUPPORT DUST COLLECTION SYSTEM

ASSEMBLE THE INTAKE FUNNEL TO THE PIPE

1. Attach the Intake Fastening Plate (#3) onto the straight end of the Intake Support Pipe (#5) with the Flat Washer (#6), Spring Washer (#7) and Locking Lever Handle (#8). Figure 5.
2. Install the Fastening Plate onto the bottom of the Funnel (#1) with the two supplied Carriage Bolts (#2) and Hex Nuts (#4). Make sure that the short 'L' end of the plate faces the rear, 4" diameter round end of the funnel. Figure 6.



FIG. 5



FIG. 6

INSTALL THE VERTICLE SUPPORT ASSEMBLY

1. Locate the Clamp (#40) with thumb screw and fit it over the support pipe end that is welded to the side of the fan housing. Figure 7.
2. Fit the end of the 'L' shaped pipe Support (#10) into the support pipe end and secure it in place with the clamp. Figure 7.
3. Install the Knob (#9) onto the connection end of the pipe support. Figure 8.



FIG. 7

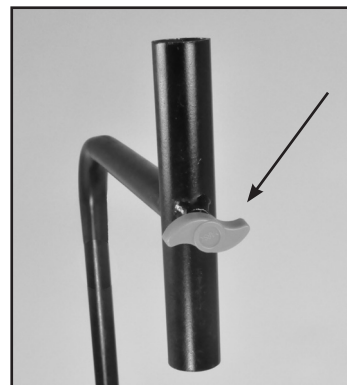


FIG. 8

CONTINUED ON PAGE 10

ASSEMBLY

INSTALL THE VERTICLE SUPPORT ASSEMBLY - CONTINUED

4. Install the straight Support Pipe (#5) with the attached Intake Funnel through the connection end of the 'L' pipe support. Attach the hose to the back end of the funnel with the 4" hose clamp. Figure 9.

This adjustable positioning system allows the intake funnel to be raised, lowered or swung away from the collector housing to set it where needed to collect dust and chips from your operating machines or hand work. See cover photo or Parts Diagram on page 12.

NOTE: By reversing or removing the straight support pipe in the 'L' support, the funnel can be positioned down to the floor for use when sweeping up debris! Figure 10.

INSTALL THE WALL MOUNTING BRACKET FOR HANGING THE DUST COLLECTOR FOR USE

The 60-105 Portable Dust Collector includes a bracket for mounting the collector onto a wall for dedicated use to a machine, work area, bench, or for storage.

NOTE: For permanent wall mounting, the casters do not have to be installed onto the dust collector.

If casters have been installed on the dust collector, check to make sure that the casters do not interfere with the hanging of the collector on the bracket. A spacer, or backing board may be necessary to be installed behind the mounting bracket to increase the distance behind the bracket to allow for the casters.

INSTALL THE MOUNTING BRACKET

Position the Mounting Bracket (#38) on a sturdy wall at a height for the dust collector's bag to freely hang down without harm, by an electrical outlet so that an extension cord is not used, and near a machine(s) so that a long dust hose is not need which can reduce the suction efficiency of the dust collector.

1. Once the position of the bracket on a wall is determined, use a pencil to mark the wall with the locations of the 3 holes in the mounting plate. If possible, locate the center hole where there is a stud.
2. For solid, plywood or masonry walls, fasteners can be used to directly attach the plate to the wall. For wallboard, the use of molleys are recommended.
3. The plate's outer 2 holes are for the Phillips Screws (#37), the center hole for the large Hex Screw (#36). Figure 11.

CONTINUED ON PAGE 11



FIG. 9

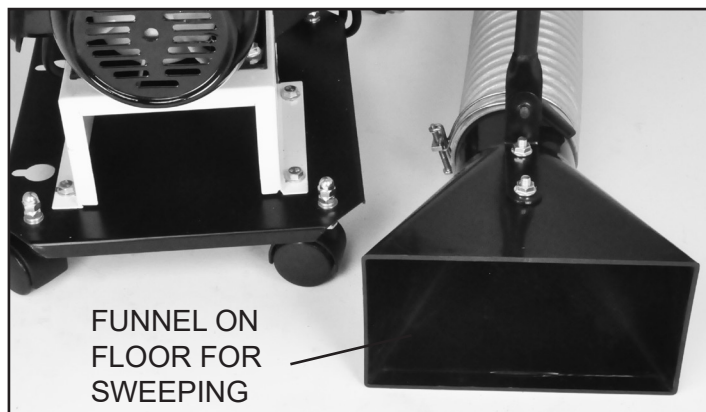


FIG. 10

⚠ WARNING THE MACHINE MUST NOT BE PLUGGED IN AND THE POWER SWITCH MUST BE IN THE OFF POSITION UNTIL ALL ADJUSTMENTS ARE COMPLETE.

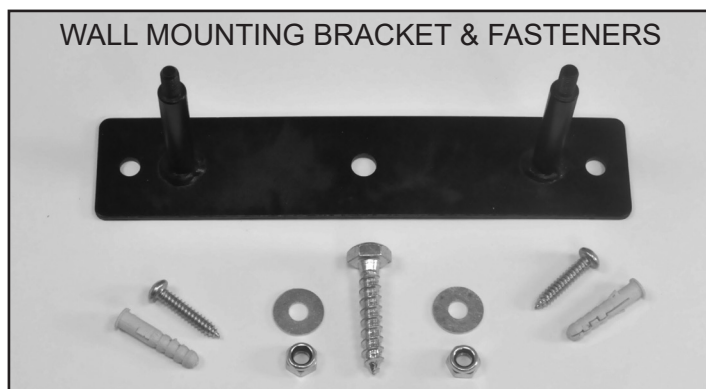


FIG. 11

ASSEMBLY

INSTALL THE MOUNTING BRACKET - CONTINUED

4. Once the mounting bracket is installed, the dust collector can be hung on the bracket's 2 posts. The base of the dust collector has 2 mounting holes in the base plate near the on/off switch for this purpose.

5. To secure the dust collector on the mounting bracket, attach a large Washer (#39) and Hex Nut (#35) to the bracket's threaded end. Figure 12.



FIG. 12

OPERATION

ON/OFF LOCKING SAFETY SWITCH

CAUTION: Make sure that the On/Off locking switch is in the “Off” position before plugging the dust collector into a power source.

The On/Off Locking Switch has a center Safety Key (A) that can be used to prevent unauthorized use of the dust collector. The switch needs to have the center key inserted before the machine can be used. Figure 13.

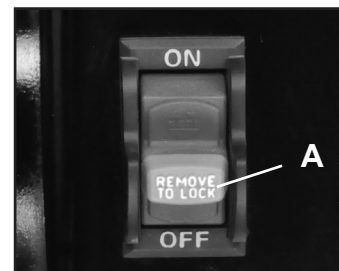


FIG. 13

USE OF THE INLET CAP

A rubber Inlet Cap (#19) is provided to safely cover/plug the 4” inlet port on the Housing Cover (#20) when the hose is disconnected, or for dust collector storage.



FIG. 14



DUST HAZARDS AND SAFETY

EMPTYING & CLEANING THE DUST COLLECTOR

See page 8 for information. **CAUTION:** Make sure the dust collector is unplugged before cleaning or servicing. Always wear a dust mask or respirator while emptying the collector bags or cleaning the dust collector. Please refer to the California Proposition 65 warning on page 6 of this manual regarding hazards from exposure to wood dust. For more detailed information visit www.rikontools.com or www.oehha.ca.gov.

GROUNDING THE DUCT WORK

NOTE: For permanent dust collector set-ups, the following instructions are recommended. For the occasional use of the 60-105 Portable Dust Collector, care must none-the-less be taken to keep the hose and bag clean.


Dust particles moving through flexible or rigid plastic duct work can cause static electricity build-up. The duct work must be properly grounded to ensure that static discharge does not ignite fine dust particles causing an explosion or fire.

To properly ground *plastic* duct work, simply run a small gauge bare copper wire through the ducting and have it emerge from the hose at the dust collector and at each dust producing machine. The bare copper wire should be bonded to the metal shell of each machine by means of a metal screw. The screw must be threaded into the metal shell to ensure a good connection.

The grounding of *metal* duct work is similar, the only difference is that there is no need to run the bare copper wire inside the ducting. It can be wrapped along the out side of the ducting and should be bonded to each machine as described above.

PARTS DIAGRAM

60-105 PORTABLE DUST COLLECTOR

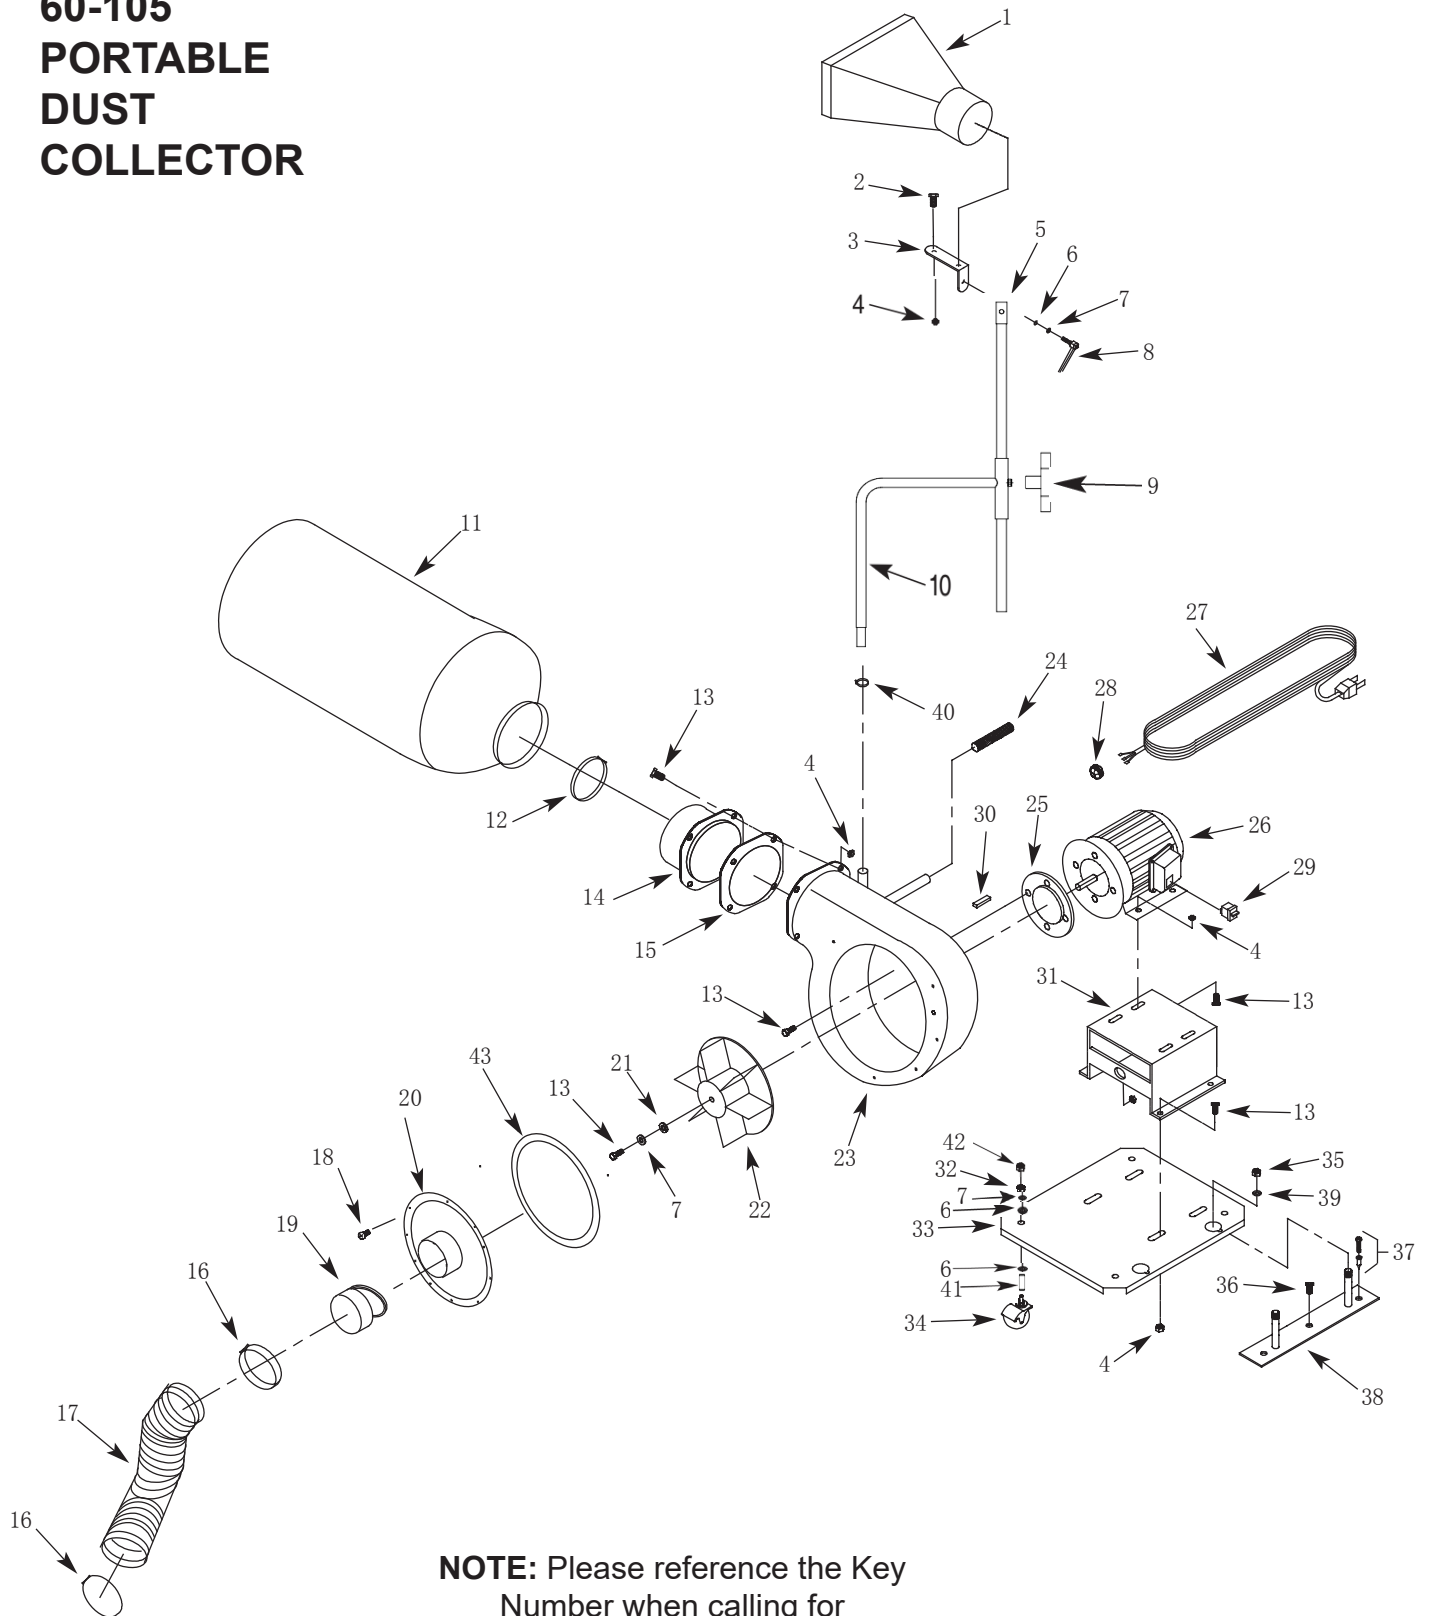


NOTE: Please reference the Key Number when calling for Replacement Parts.
For Parts under Warranty, the Serial Number of your machine is required.

PARTS LIST

60-105 PORTABLE DUST COLLECTOR

KEY NO.	DESCRIPTION	QTY.	PART NO.
1	Intake funnel	1	P60-105-1
2	Carriage bolt M8X20	2	P60-105-2
3	Intake fastening plate	1	P60-105-3
4	Hex nut M8	15	P60-105-4
5	Intake support pipe	1	P60-105-5
6	Flat washer D8	9	P60-105-6
7	Spring washer D8	6	P60-105-7
8	Locking handle	1	P60-105-8
9	Knob	1	P60-105-9
10	Intake support assembly	1	P60-105-10
11	Collector bag 2 Micron	1	60-903
12	5" Hose clamp	1	P60-105-12
13	Hex head bolt M8x20	17	P60-105-13
14	Exhaust assembly	1	P60-105-14
15	Gasket	1	P60-105-15
16	4" Hose clamp	2	P60-105-16
17	4" x 108" Flexible hose	1	P60-105-17
18	Thread framing screw ST4.2x12.7	10	P60-105-18
19	Inlet cap	1	P60-105-19
20	Blower housing cover	1	P60-105-20
21	Flat washer	1	P60-105-21
22	Impeller	1	P60-105-22
23	Blower housing assembly	1	P60-105-23
24	Handle grip	1	P60-105-24
25	Motor gasket	1	P60-105-25
26	Motor	1	P60-105-26
27	Electric cord & plug	1	P60-105-27
28	Strain relief fitting	1	P60-105-28
29	ON / OFF Switch with safety key	1	P60-105-29
30	Key C6*25	1	P60-105-30
31	Motor base	1	P60-105-31
32	Hex nut M8	4	P60-105-32
33	Base	1	P60-105-33
34	Caster Φ50	4	P60-105-34
35	Hex nut M8	2	P60-105-35
36	Hex thread forming screw ST9.5*50	1	P60-105-36
37	Plastic molleys & Phillips screws ST6.3*32	2	P60-105-37
38	Wall mount bracket	1	P60-105-38
39	Flat washer Φ8	2	P60-105-39
40	Pipe clamp	1	P60-105-40
41	Bushing	4	P60-105-41
42	Cap screw M8	4	P60-105-42
43	Blower gasket	1	P60-105-43

WIRING DIAGRAM

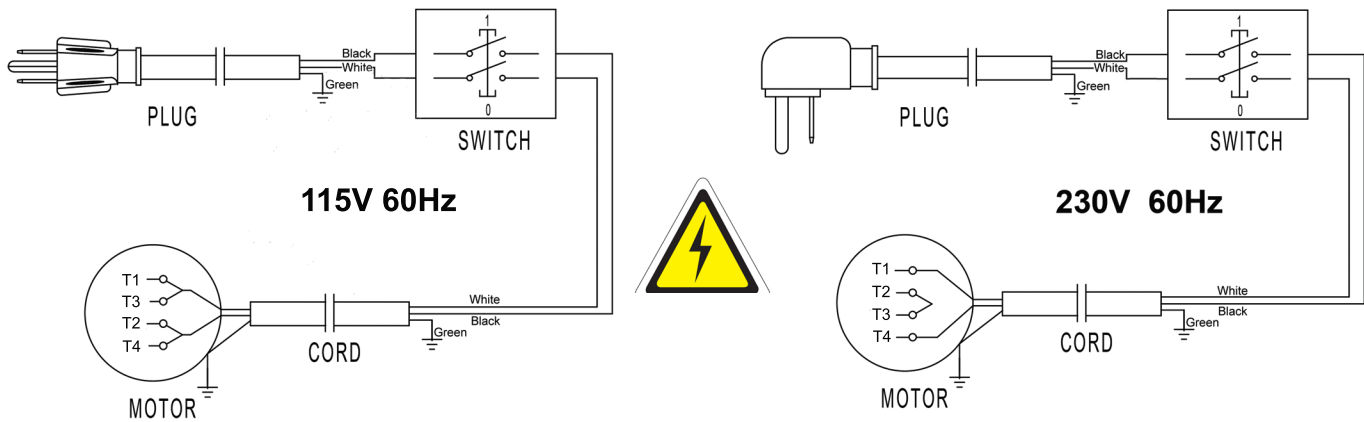

WARNING: This machine must be grounded. Replacement of the power supply cable should only be done by a qualified electrician. See page 5 for additional electrical information.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Motor does not start	1. Machine not plugged in. 2. Power switch in 'OFF' position. 3. Power switch or cord is faulty. 4. Fuse or circuit breaker are open. 5. Low line voltage. 6. Defective motor capacitor. 7. Motor does not work.	1. Plug cord into electrical outlet. 2. Lift switch to 'ON' position. The safety key must be in place. See page 11. 3. Replace switch or cord. 4. Correct overloaded electrical circuit. 5. Correct low line voltage condition. 6. Replace motor capacitor. 7. Repair or replace the motor.
Motor runs hot	1. Restricted air flow due to dirty filter bag or blockage in the hoses. 2. Motor overloaded. 3. Extension cord is used. 4. Machine used for extended time. 5. Poor air flow in work area.	1. Clean filter and hoses for maximum air flow through the system. 2. Reduce load on the motor. 3. Do not use an extension cord. Plug the collector directly into an outlet. 4. Reduce run time of machine. 5. Reposition machine for better air flow.
Motor stalls or does not have full power	1. Incorrect line voltage. 2. Motor capacitor has failed. 3. Extension cord is being used. 4. Impeller is clogged with debris.	1. Have qualified electrician check circuit for proper line voltage. 2. Replace motor capacitor. 3. Do not use an extension cord. Plug the collector directly into an outlet. 4. Clean debris from blocked impeller.
Reduction of dust collection suction power	1. Malfunction of the bag cleaning system. 2. Plugged hose lines. 3. Retaining of dust in the collector due to low density. 4. Wetting of filter bags. 5. Bag is dirty or permeability of the cloth has increased.	1. Check all system components. 2. Check and clean inlets and hoses for obstructions. 3. Clean or replace filter bags and check all connections for leakage. 4. Control intake of moisture. Dry wet bags for re-use. 5. Clean or replace bags.
Loud or unusual noises from motor or fan	1. Motor, fan housing, base or parts of the frame are loose. 2. Impeller fan is rubbing the housing. 3. Motor bearings are loud. 4. Impeller fan is loose, unbalanced, or damaged.	1. Inspect and tighten all parts or replace as needed. 2. Check position of the fan and adjust or replace any loose/damaged parts. 3. Replace worn bearings. 4. Secure fan on motor shaft, and replace if any damage is found.

MAINTENANCE

⚠ WARNING: Turn the power switch “OFF” and disconnect the plug from the outlet prior to adjusting or maintaining the machine. DO NOT attempt to repair or maintain the electrical components of the motor. Contact a qualified service technician for this type of maintenance.

1. Before each use:

- Check the power cord and plug for any wear or damage.
- Check for any loose screws or hardware.
- Check the area to make sure it is clear of any misplaced tools, lumber, cleaning supplies, etc. that could hamper the safe operation of the machines being used.

2. To avoid a build-up of wood dust, regularly clean all parts of your machines using a soft cloth, brush or compressed air. A general cleaning should be done after every use to avoid future problems and ensure the machines are in ready condition for the next time that they are used.

WARNING: If blowing sawdust, wear proper eye protection to prevent debris from blowing into eyes.

3. Check the duct work and hoses to make sure that there are no loose connections. Making sure that they are in proper operating condition will ensure that the dust collection will be the best possible.

4. Clean the upper filtering bag, or canister, on a regular basis to prevent the build-up of dust for better dust collection and air filtration. Check for abrasion, tears or damage.

WARNING: Always wear a dust mask or respirator while emptying the collector bags or cleaning the dust collector. Please refer to the California Proposition 65 warning on page 6 of this manual regarding hazards from exposure to wood dust. For more detailed information visit www.rikontools.com or www.oehha.ca.gov.

5. The motor does not need any maintenance as it is equipped with sealed, lubricated ball bearings.

WARRANTY

RIKON
POWER TOOLS®

5-Year Limited Warranty

RIKON Power Tools Inc. (“Seller”) warrants to only the original retail consumer/purchaser of our products that each product be free from defects in materials and workmanship for a period of five (5) years from the date the product was purchased at retail. This warranty may not be transferred.

This warranty does not apply to defects due directly or indirectly to misuse, abuse, negligence, accidents, repairs, alterations, lack of maintenance or normal wear and tear. Under no circumstances will Seller be liable for incidental or consequential damages resulting from defective products. All other warranties, expressed or implied, whether of merchantability, fitness for purpose, or otherwise are expressly disclaimed by Seller. This five-year warranty does not cover products used for commercial, industrial or educational purposes. The warranty term for these claims will be limited to a two-year period.

This limited warranty does not apply to accessory items such as blades, drill bits, sanding discs, grinding wheels, belts, guide bearings and other related items.

Seller shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special, or consequential damages arising from the use of our products.

To take advantage of this warranty, proof of purchase documentation must be provided which has the date of purchase and an explanation of the complaint.

The Seller reserves the right to effect at any time, without prior notice, those alterations to parts, fittings, and accessory equipment which they may deem necessary for any reason whatsoever.

To register your machine online, visit RIKON at www.rikontools.com/warranty

To take advantage of this warranty, or if you have any questions, please contact us at 877-884-5167 or email warranty@rikontools.com



For more information:
25 Commerce Way
North Andover, MA 01845

877-884-5167 / 978-528-5380
techsupport@rikontools.com



LINK TO RIKON WEBSITE