




# **OWNER'S MANUAL**

## **HIGH VELOCITY FLOOR FAN**

MODELS: CF-18, CF-20

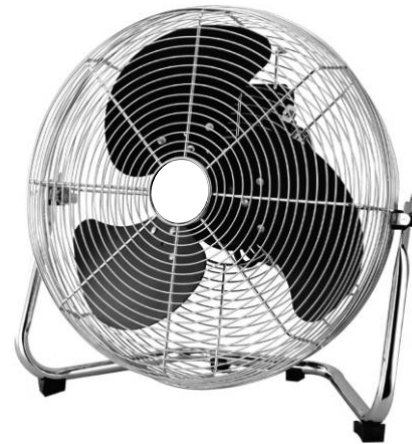

## **READ AND SAVE THESE INSTRUCTIONS**

**CAUTION:** Read and follow all instructions before Operating Fan. Do not use fan if any part is damaged or missing.

**WARNING:** To reduce the risk of fire or electrical shock, do not expose to water or rain.

To reduce the risk of fire or electrical shock, do not use this fan with any solid state speed control device.

Automatically operated device - To reduce the risk of injury disconnect from power supply before servicing.

If the supply cord is damaged, it must be replaced by a special cord or service agent or a similarly qualified person in order to avoid a hazard.

### **RULES FOR SAFE OPERATION:**

1. Never insert fingers or any other objects through the grill guard when fan is in operation.
2. Disconnect the fan when moving from one location to another.
3. Disconnect the fan when removing guards for cleaning.
4. Be sure fan is on a stable, flat surface when in operation.
5. Do not use fan in windows. Rain and moisture may create electrical hazard.
6. Close supervision is necessary when this fan is used near children, the elderly and pets.
7. Do not place the fan near an open flame, cooking or heating appliance, or hot surface.
8. This fan should not be operated outside.

**CAUTION:** Do not alter the fan's assembly.

**WARNING:** Be sure front and rear guard screws are completely screwed down in locking position before operation.

### **OPERATING INSTRUCTIONS**

**TO ADJUST AIRFLOW UPWARD OR DOWNWARD:** Tilt fan head to the desired angle. This high velocity fan can be used alone or in conjunction with air conditioning. Rotating the fan head upward serves to pull air from the floor and circulate it throughout the entire room.

**SPEED CONTROL:** Rotate SWITCH to **LOW** 、 **MIDDLE** and **HIGH** speeds for respective air velocity.

It is normal for the motor to feel warm to touch after continuous operation. This fan features a thermostat that will automatically shut off should it overheat for any reason. If this happens, immediately unplug the fan from the outlet.

### **CLEANING**

**WARNING:** Unplug from electrical supply source before cleaning:

- Use soft damp cloth to clean. Then wipe with dry cloth.
- Do not use a cleaning solution that is harmful to paints or plastics.

IMPORTANT: SURGES IN ELECTRICAL POWER OR EXCESSIVE HEAT MAY CAUSE THE FAN TO TURN OFF. WAIT APPROXIMATELY 15 MINUTES FOR THE FAN TO RESUME OPERATION.

Model	WATTS (W)			AMPS (A)			VOLTS
	LOW	MIDDLE	HIGH	LOW	MIDDLE	HIGH	
<b>CF-18</b>	95	110	145	0.85	0.95	1.45	120V~ 60Hz
<b>CF-20</b>	140	160	185	1.25	1.4	1.65	

For additional information on TPI Products or replacement parts, call TPI Customer Service Department at 1-800-251-0382 or write the address below.

