


TPI CORPORATION. WARRANTY

TPI warrants every new fan to be free of defects and workmanship to the extent that, within 1 year from the date of purchase TPI shall either repair or replace at their option, any unit or part thereof, returned to TPI freight pre-paid and found to be defective. A return authorization must be obtained prior to any warranty work and a proof of purchase may be required.

This warranty does not include any labor or transportation cost incidental to the removal and reinstallation of the unit at the user's premises. Components repaired or replaced are warranted through the remainder of the original warranty period only. This warranty applies to the original purchaser-user only.

Purchaser is responsible for and shall maintain and use the equipment pursuant to TPI's recommendations. No parts will be covered due to the neglect of maintenance on equipment, nor due to electrical surges or lightning or other acts of nature. The purchaser shall hold TPI harmless from any claim or loss. Claims may be filed under this warranty and obligations to make repairs shall begin only after the product is paid. This warranty does not cover loss of time, inconvenience, loss of revenue, livestock, poultry, or other consequential damages of any kind.


The limited warranty is given in partial consideration of the time of purchase and is the only warranty offered. There shall be no other warranty either expressed or implied which apply to this purchase.

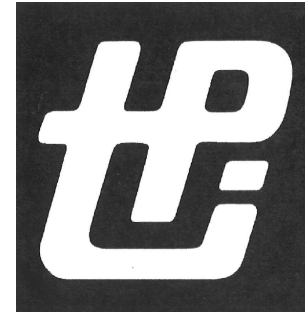

OWNERS MANUAL

READ AND SAVE THESE INSTRUCTIONS

**18" Premium Fan
MODEL:U18TE-HD**

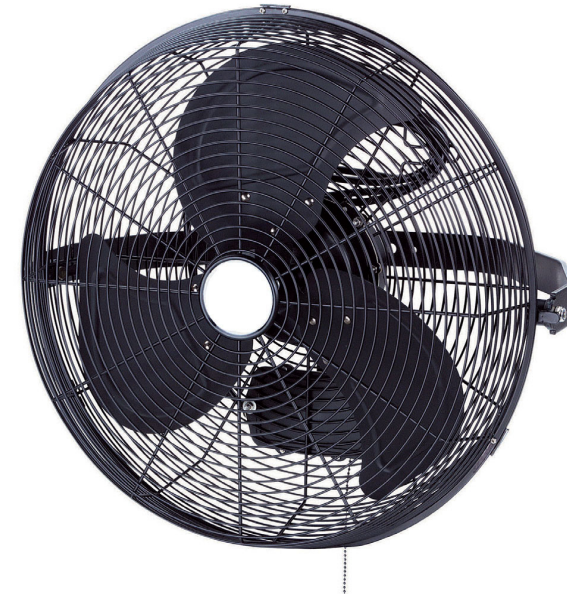

Assembly & Operating Instructions

18" Air Circulators

CAUTION: Read and follow all instructions before operating fan. Do not use fan if any part is damaged or missing.

WARNING

- 1) To reduce the risk of electrical shock, do not use this fan with any solid state speed control device.
- 2) To Reduce The Risk of Electric Shock, Do Not Expose to Water or Rain.
- 3) For Use in Agricultural Buildings.

This appliance has a 3-prong grounded plug and must be inserted into a matching grounded GFI outlet for safe operation and to reduce the risk of electrical shock.

Rules for Safe Operation

- Never insert fingers or any other objects through the grill guard when fan is in operation.
- Unplug the fan when moving from one location to another.
- Unplug the fan when removing guards for cleaning.
- Do not use with an extension cord.
- Do not place fan or any parts near an open flame, cooking or other heating appliance.
- DO NOT use fan in windows.

ASSEMBLY INSTRUCTIONS

Wall Mounting - Permanent Mounting Only

- 1) Locate solid wall stud. Mark the center of the beam. If you do not have a solid structural framing member at that location then you must provide an adequate alternative for mounting the fan.
- 2) Drill pilot hole for 3/8" lag bolt.
- 3) Secure with the hardware provided.

NOTE: Plug fan into a GFI outlet to ensure safety.

OPERATION INSTRUCTIONS

To adjust airflow upward or downward: Tilt the fan head to the desired angle. This high velocity fan can be used alone or in conjunction with air conditioning. Rotating the fan head upward serves to pull air from the floor and circulate it throughout the entire room.

Speed Control: Pull Switch to Low or High speeds for respective air velocity.

It is normal for the motor to feel warm to touch after continuous operation. This fan features a thermostat that will automatically shut off should it overheat for any reason. If this happens, immediately unplug the fan from the outlet.

CLEANING

WARNING: Unplug from electrical supply source before cleaning. After servicing, any safety device (including grills and blades) must be reinstalled or remounted as previously installed. Use soft damp cloth then wipe with dry cloth. Do not use harmful cleaners. Do not bend the blades. The motor bearings are permanently sealed and do not require additional lubrication.