

SeaHawk

User Manual



US STEAM®

2440 Chamber Street, Ste A

Venus, TX 76083

www.ussteam.net

(817) 297-7745



Table of Contents

Components _____	3
Quick Start – Add Water _____	4
Steam and Vacuum Controls _____	5
Adjusting Steam Pressure _____	6
Troubleshooting _____	8
Extraction _____	10
Accessories _____	11
Maintenance _____	12
De-scaling _____	13
Notices _____	14
Warranty & Repair _____	15

WARNING

USE only a Heavy- Duty extension cord

- 10 or 12 Gauge
- 15 AMP / 125V
- 25-50 FT in length



- DO NOT leave the steam cleaner unattended while plugged in
- Turn off all controls and unplug the electrical cord when not in use
- DO NOT use with a damaged cord or plug
- If the steam cleaner is not working as it should, has been dropped, damaged, left outdoors or dropped into water, call for service before using
- NEVER attempt to disassemble this steamer
- DO NOT handle the electrical plug with wet hands
- DO NOT use near children
- DO NOT pull or carry by power cord
- Keep cord away from heated surfaces
- ALWAYS set safety switch on hose handle into the locked position when not in use
- Not setting safety switch to locked position could result in an injury
- Keep body, hands, and feet away from accessories or nozzle when steam is in active use
- ALWAYS test a small area before cleaning a large area on any type of surface to make sure no damage will occur
- The steam cleaner should be the only appliance plugged into an outlet
- Any alteration of electrical cord supply on this steam cleaner will void all warranties

Components



**External Reservoir Tank
Extraction / Detergent**

Vacuum Button

Steam Button

**Steam Pressure
Control Knob**

Water Fill Tank

Lid Clamps

Vacuum Collection Tank

ON / OFF



Quick Start – Add Water

1) REMOVE VACUUM COLLECTION TANK AND ADD WATER TO THE FILL LINE

- Lift both silver handles to remove lid
- Remove Collection Tank
- ADD WATER TO FILL LINE



2) FILL RESERVIOR TANK AND EXTRACTION TANK WITH TAP WATER




3) PLUG INTO ELECTRICAL OUTLET

- The SeaHawk should be the only appliance plugged into the power outlet
- It will take 5 minutes for the SeaHawk to heat and be ready to use



USE only a Heavy-Duty extension cord

- 10 or 12 Gauge
- 15 AMP / 125V
- 25-50 FT in length

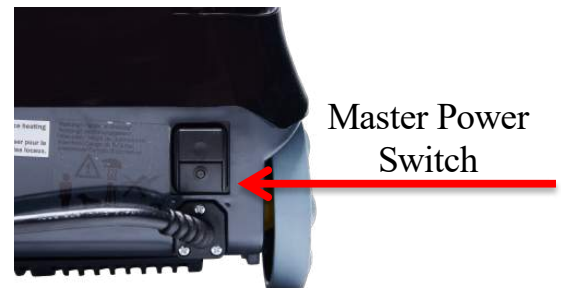

Quick Start

4) HOSE CONNECTION

- Lift silver lid and insert hose
- Listen for a “click” when attaching



5) ON/OFF – Push BOTH the STEAM & VACUUM Buttons






Vacuum ON/OFF

- Push button to turn ON the vacuum
- If the lights are blinking, push the button again until they go solid
- One solid light = LOW vacuum
- Two lights = MEDIUM vacuum
- ***Vacuum will only operate on Low & Medium when using with steam***
- **MAX Vacuum** can only be used when used steam is OFF.

Steam Button

- Push button to start building steam pressure
- Orange blinking light = boiler is heating
- Orange light will turn solid when ready
- Orange light will blink during use. This means boiler is heating
- **RED BLINKING LIGHT** = low water


➤ ***Vacuum will only operate on Low & Medium when using with steam***

- Press the vacuum button  on the hose handle to activate
- To turn the vacuum OFF, push the  button on the handle
- PUSH and HOLD  button on hose handle to increase / decrease vacuum suction



Quick Start – Adjusting Steam Pressure

6) STEAM PRESSURE ADJUSTMENT

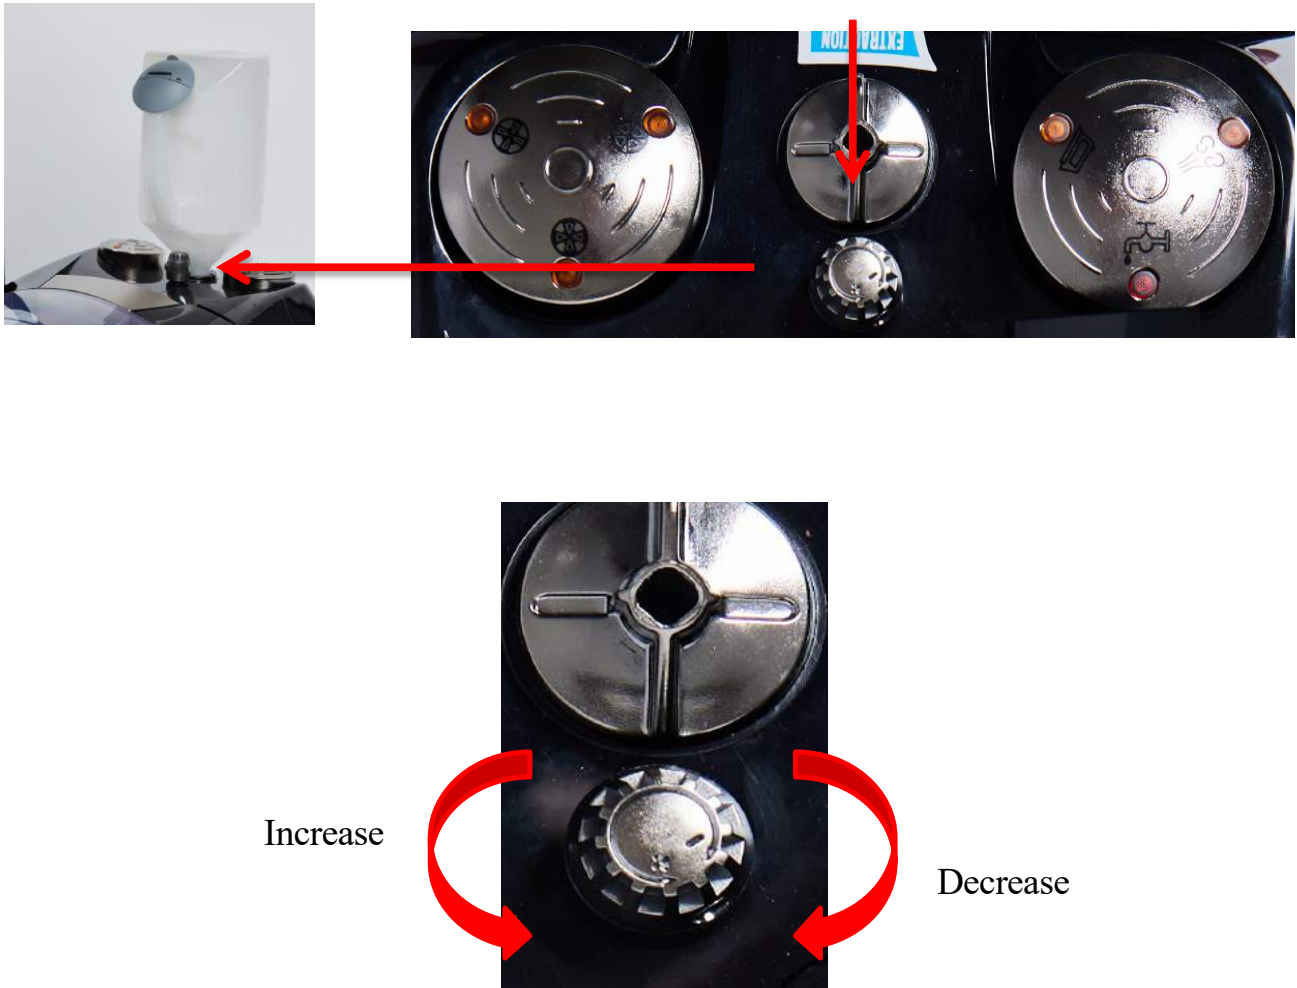

Turning the dial all the way to (-) is the lowest possible setting and ***NO steam will be released from the hose***

Quick Start


7) BLEED THE HOSE

Pull the trigger on the hose handle for 10 seconds to **BLEED** excess water from the hose. Hold over sink to catch excess water.

- When only steam is released from the hose, your SeaHawk is ready to use

8) EXTRACTION

When activated, the extraction feature sprays hot water along with steam for deep cleaning.

- Fill extraction bottle with water and connect to the back of the SeaHawk.
- Activate: Push and hold the  button on the hose handle
- The light on the handle turns ON during extraction mode



9) REFILLING

- When your SeaHawk runs low on water, the **Red** indicator water light will flash and start beeping
- Refill the reservoir and extraction tank

Troubleshooting

PROBLEM	SOLUTION
Beeping / Blinking Lights	<ol style="list-style-type: none"> 1) The steam tank or the extraction bottle is out of water <ul style="list-style-type: none"> ➤ Refill both tanks 2) The vacuum collection tank is full <ul style="list-style-type: none"> ➤ Empty and refill tank to proper levels 2) Extraction bottle is NOT attached correctly <ul style="list-style-type: none"> ➤ The fill cap should be facing forward ➤ Remove and replace extraction bottle ➤ Push down on the bottle to set it in place
No power	<ol style="list-style-type: none"> 1) Check master power switch on back of SeaHawk. 2) The SeaHawk should be the ONLY appliance plugged into the electrical outlet: <ul style="list-style-type: none"> ➤ Check the fuse box for tripped circuit breaker <p>If using an extension cord, it must meet the following requirements:</p> <ul style="list-style-type: none"> ➤ Use Minimum 12 gauge / 15AMP / 125V ➤ 25 ft. max length
No steam coming out of hose	<ol style="list-style-type: none"> 1) Is the orange indicator light still blinking <ul style="list-style-type: none"> ➤ It takes 8-10 for fully heat and be ready for use 2) Is the steam control adjustment knob turned to the closed position 3) Check the red lock on the hose handle
No response from buttons on hose handle	<ul style="list-style-type: none"> ➤ Reconnect the hose
During the warm-up phase the alarm signals	<p>The boiler has pulled all the water from the reservoir tank</p> <ul style="list-style-type: none"> ➤ Refill
Orange light is blinking	<ul style="list-style-type: none"> ➤ The orange light will blink indicating the boiler is heating ➤ It will stop when the boiler reaches max pressure ➤ It will blink during use
Vacuum power is insufficient	<p>Empty and replace water in vacuum collection tank</p> <ul style="list-style-type: none"> ➤ Check the hose and accessory connections ➤ Check the hose and accessories for particle blockage

Shut Down & Helpful Hints

SHUT DOWN

- 1) Push ON/OFF button.
- 2) Remove the vacuum collection tank and clean. Remove the yellow nebulizers for additional cleaning. Rinse with hot water until all residue and stains have been removed.
- 3) Clean the exterior of the SeaHawk with a wet cloth.
 - Do not use solvents or detergents that could damage the plastic surface
 - Use hot soapy and water to clean brushes and nozzles

If you have been cleaning a dirty or greasy surface, it is recommended that you clean the vacuum hose before shutting down.

- Clean vacuum hose by activating the vacuum mode and suck water through the hose

After each cleaning, prepare the SeaHawk for its next use, by refilling the water and vacuum tanks.

HELPFUL HINTS

- 1) Set steam control to low or medium steam pressure for most cleaning applications. High steam pressure is best utilized for only extreme stains or dirty areas.
- 2) Use tap water for quicker heating. You may use distilled water, but the SeaHawk will take longer to heat.
- 3) Use steam only when sanitizing a surface area.
- 4) Extraction is best used for deep cleaning including floors and upholstery.

HOW TO USE THE EXTRACTION

The SeaHawk uses a separate reservoir tank to inject water or detergent into the steam. Combine the extraction function with the vacuum for deeper cleaning on any surfaces.

- Use the extraction nozzle for cleaning furniture, curtains, mattress, windows, walls, and floors.
- After cleaning, use the vacuum to remove excess water for faster drying.

Activate by pushing and holding the button on the hose handle, until the light turns on.



Extraction Nozzle



NO ATTACHMENT



Carpet / Curtains / Furniture
Mattresses / Soft Surfaces

Squeegee / Brush Insert



All hard surfaces

Squeegee Insert

Windows / Mirrors / Walls

Accessories (to order visit www.ussteam.net)



Hose
(Part # SV6312)



Extraction Bottle
(#SEA5168)



Floor Brush (# SV0596)

Extension Wands
(Part # SV1594)



Small Extraction Nozzle
(Part # SV8151)



Squeegee / Brush Insert (SV7326)



Squeegee Insert / (SV#7329)



Brushes

- 1" Round Nylon
- 1" Round Brass
- 3" Round Nylon
- 3" Round Brass

Vacuum Attachment
(Part # SV5645)

Short Jet Nozzle
(Part # SV5435)

Long Jet Nozzle
(Part # SV5439)

Maintenance

AFTER EACH USE

- 1) Use hot, soapy water to clean brushes and nozzles.
- 2) Clean vacuum hose by activating the vacuum mode and suck water through the hose.
- 3) Clean the exterior of the SeaHawk with wet cloth.
 - Do not use solvents or detergents that could damage the plastic surface
- 4) Clean Vacuum Collection Tank:
 - Remove the tank and drain water from the vacuum and reservoir tanks
 - Clean the tank and remove the yellow nebulizers for additional cleaning
 - Rinse with hot water until all residue and stains on the tank wall have been removed

WARNING

The yellow nebulizers may be removed for cleaning but must be replaced before using. Using the SeaHawk without nebulizer filters could lead the serious damage.

EVERY 6 MONTHS

- De-Scale the boiler


YEARLY

- Replace the O-Rings on hose handle and extension wands

Hose Handle



Extension Wands

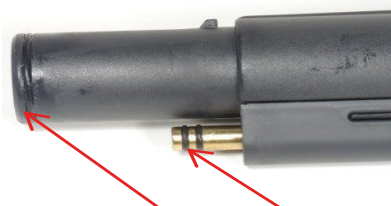

De-Scaling

To extend the life of your SeaHawk, we recommend de-scaling the boiler and the electronic sensor every 6 months. After prolonged periods of activity, lime scale deposits build up in the boiler and can make the boiler unusable.

How to De-Scale:

- 1) Unplug from the wall.
 - The SeaHawk should be cooled to room temperature
 - Remove the vacuum collection tank and empty
- 2) Turn the steamer upside down, identifying the boiler cap.
 - Unscrew by turning counter-clockwise and remove
 - Clean the sensor on the boiler cap with a scouring pad removing any encrusted deposits
- 3) De-scaling the boiler:
 - Pour de-scaling solution consisting of 1 cup of vinegar and 1 cup of water into the boiler and replace the cap by turning clockwise until tight
- 4) Turn the SeaHawk ON for approximately 1 minute, then turn off.
 - *Leave de-scaling solution in the boiler for at least 60 minutes*
- 6) Empty the de-scaling solution from the boiler by turning over the SeaHawk and removing cap draining the excess de-scaling solution.
- 7) Fill boiler with tap water to rinse.
- 8) If the rinse water is clear of mineral deposits, then the SeaHawk is ready for use.
 - You may need to re-rinse the boiler if the water is not clear

Notices

Read all instructions before using this steam cleaner.

WARNING: STEAM GENERATED BY THE STEAM CLEANER IS EXTREMELY HOT AND WILL CAUSE INJURY IF IT COMES IN CONTACT WITH THE SKIN OR EYES. USE AS DIRECTED BY THE MANUAL AND ONLY AIM THE STEAM HANDLE AT THE CLEANING AREA.



- DO NOT leave the steam cleaner plugged in while unattended
- Turn off all controls and unplug the electrical cord when not in use
- DO NOT use with a damaged cord or plug
- NEVER attempt to disassemble this product in a way not instructed in this manual
- DO NOT handle the electrical plug with wet hands
- DO NOT use near children
- DO NOT pull or carry by cord
- Keep body, hands, and feet away from nozzle or brush steam / Steam can cause burns
- ALWAYS set safety switch on hose handle into the locked position when not in use
- Not setting safety switch to locked position could result in an injury
- ALWAYS test a small area before cleaning a large area on any type of surface to make sure no damage will occur
- DO NOT expose machine to freezing temperatures while not in use
- DO NOT store gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance

ELECTRICAL CONNECTIONS

The steam cleaner uses 110 Volts and will pull 13.1 Amps. It should be the only appliance plugged into an outlet.

- *Use only a 12 gauge / 15AMP rated or higher extension cord*
- Any alteration of electrical cord supply on this steam cleaner will void all warranties
- Make sure all switches on front of unit are in the off position before plugging unit into electrical outlet
- For circuit breaker protection, plug the unit into an outlet isolated from other equipment or turn the other equipment off while using the steam cleaner
- The combined electrical amperage of other equipment and the steam cleaner together may cause a circuit breaker to trip.
- Always press the power button to OFF before you unplug the unit
- Removing the ground prongs from the power cord will void any and all warranties and can cause risk of shock or injury

In order to reduce the risk of fire, electric shock, personal injury or damage to property, follow these instructions carefully. When using electrical appliances, basic safety precautions should be followed.

KEEP FOR YOUR RECORDS. THIS MANUAL MUST BE RETAINED FOR FUTURE REFERENCE. PLEASE READ, UNDERSTAND AND FOLLOW THE INSTRUCTIONS AND WARNINGS CONTAINED IN THIS MANUAL BEFORE USING THIS VAPOR STEAM CLEANER.

Warranty & Repair

SERVICE AND SUPPORT

Many issues can be resolved by calling our service center at **(817) 888-8313** / Monday-Thursday 9-5 p.m. CST, and Friday 8-12 p.m.

All repairs must have an RMA.

RMA's can be requested from the website: <https://ussteam.net/repair>

Steps for Repair:

1. Request RMA.
2. RMA number will be emailed along with a shipping label.
3. Box up your steamer and include Repair Form.
4. Go to FedEx for drop off.
5. DO NOT SEND IN A REPAIR WITHOUT AN RMA.

WARRANTY

Your steamer comes with a warranty which becomes effective on the date of purchase from US STEAM and is granted to the initial customer and is nontransferable. Any claims under this warranty must be made before the end of the applicable warranty period.

Your steamer is warrantied for a period of 1-year from original date of purchase for defective material, parts, and workmanship. The warranty EXCLUDES accessories, attachments and normal wear parts, when used in accordance with operating instructions under normal and reasonable use.

During the term of the warranty, all labor and parts to place your product in proper operating condition will be a covered service. You have an EXTENDED warranty covering 2 additional years for defective boiler or heating element. Extended warranty does not include labor cost and return shipping. US STEAM's responsibility is limited to repair, replacement, credit or refund, any of which may be selected by US STEAM at its sole discretion.

The limited warranty covers only defects arising from normal use and does not include malfunctions or failures arising from: misuse, abuse, neglect, alteration, usage not in accordance with user manual and instructions, depletion of consumables, acts of nature, or damage caused by repairs where such repairs were made without US STEAM's express approval.

Warranty is Void:

- Damage due to misuse, abuse, negligence, and normal wear related to the product usage
- Any repair or attempted repairs outside of the US STEAM Service Center will void all warranties
- Lack of proper maintenance or use not in accordance with the provided instructions and/or owner's manual
- Disassembly or attempted disassembly of your steamer
- If the steamer is designated for residential but utilized in a commercial application
- Using an improper electrical source such as using an extension cord that is not at least *12 gauge / 15AMP rated or higher extension cord*
- Adding chemicals or cleaning solution to the boiler or reservoir tank
- Parts subject to wear and tear not determined defective or items such as O-rings, brushes, hoses, accessories

GOVERNING LAW, JURISDICTION AND COSTS

All disputes arising out of or related to the warranty shall be governed by the laws of the State of Texas. In the event the customer and US STEAM® LLC are unable to resolve any customer dispute, and any collection action, suit, or other judicial proceeding is commenced, the prevailing party in any such action, suit, or proceeding shall be entitled to recover any cost and attorney fees incurred.

Restaurant	Floors, Kitchen, Grills & Bathrooms Chemical free cleaning in all food prep and storage areas.
Hospital	Patient Beds, Wheelchairs & Curtains Steam is a proven killer of virus and infection causing germs
Grocery	Delis, Freezers & Butcher Chemical free cleaning in areas of food storage and preparation.
Office	Desk, Tables & Partitions Cleaning with steam guarantees a clean, germ-free work environment increasing productivity, employee retention and reducing sick days.
School	High Touch Areas, Bathrooms, Locker Rooms & Gym Mats Steam kills on contact, no dwell time.
Gym	Equipment, Lockers & Saunas Kill viruses and germs found on workout equipment and gym floors.
Day Care	Toys, Playgrounds & Beds Steam clean high touch areas where kids pass germs. Extreme cleaning with steam can reduce sick days for kids and employees.
Automotive	Seats & Floors Combine steam and extraction into one system for more efficient detailing.

A Better Way to Clean



US STEAM®

2440 Chamber Street, Ste A

Venus, TX 76083

www.ussteam.net

(817) 297-7745