

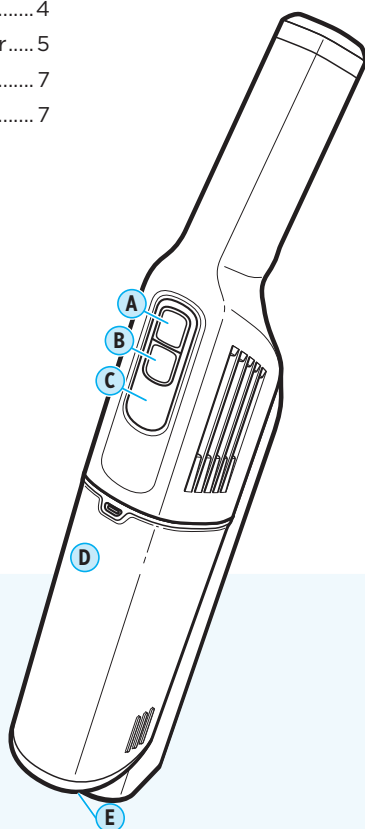


READYCLEAN®

HAND VACUUM

MODELS 5999, 5999A

Important Safety Instructions	2
What's in the Box	3
Charging the Battery	3
Using Your Vacuum	4
Emptying the Dirt Tank & Replacing the Filter.....	5
Troubleshooting.....	7
Warranty	7



Product Overview

- A. Power Button
- B. Mode Button
- C. LED Display
- D. Dirt Tank
- E. Dirt Tank Release Button

IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Do not use on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not use for any purpose other than described in this user guide. Use only manufacturer's recommended attachments.
- Do not charge with damaged charger or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not handle charger, including charger plug and charger terminal with wet hands.
- Do not charge the unit outdoors.
- Do not incinerate the appliance even if it severely damaged. The batteries can explode in a fire.
- Use extra care when cleaning stairs.
- Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- Do not use vacuum cleaner in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use without dust cup or filters in place.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not pull or carry charger by the cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord.
- Prevent unintentional starting. Ensure the switch is in the OFF position before picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not use appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C/265°F may cause explosion.
- Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the appliance except as indicated in the instructions for use and care.
- Keep the temperature range of between 40-104°F when charging battery, storing unit or during use.
- Use only with LUCKY DRAGON charger, Model BLJ15W1G134060P-U.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- Do not plug in your vacuum UNTIL you are familiar with all instructions and operating procedures.
- To reduce the risk of electrical shock, turn power switch OFF and disconnect plug from electrical outlet BEFORE performing maintenance or troubleshooting checks.
- Use only on dry surfaces.
- This appliance contains batteries that are non-replaceable.
- Battery pack, charging port on the appliance and charger output are not to be short-circuited.
- Turn OFF all controls, including the Power Switch and disconnect charger from electrical outlet before making any adjustments, performing maintenance, troubleshooting, changing accessories or storing appliance. Such preventative safety measures reduce the risk of starting the appliance accidentally.
- Unplug charger from electrical socket when not in use, before cleaning maintaining or servicing the appliance.
- The battery must be removed from the appliance before it is scrapped.
- Do not charge with damaged charger or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors or dropped into water, have it repaired by a qualified technician. Do not unplug charger by pulling on cord. To unplug, grasp the charger plug, not the cord.
- Do not expose to rain. Store indoors.

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY. COMMERCIAL USE OF THIS UNIT voids THE MANUFACTURER'S WARRANTY.

SUPPLIER'S DECLARATION OF CONFORMITY 47 CFR SECTION 2.1077 COMPLIANCE INFORMATION

Charger adapter for BISSELL product. CONTACT: BISSELL Homecare Inc., 2345 Walker Ave. NW, Grand Rapids, MI 49544. This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/TV technician for help.

NOTICE Disconnecting the battery will destroy the appliance and invalidate the warranty.

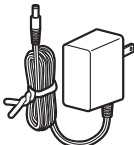
NOTICE Battery should not be placed in household waste.



WARNING This product contains Lithium-Ion rechargeable batteries. DO NOT mix Lithium-Ion batteries with general household waste. According to Federal and State regulations, removal and proper disposal of Lithium-Ion batteries is required. For specific battery disposal instructions please contact Call2Recycle at 877-723-1297 or visit www.call2recycle.org. For full instructions on battery removal for recycling visit support.BISSELL.com.


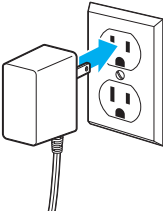
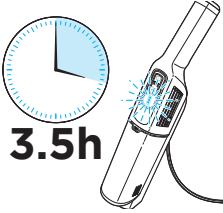


What's in the Box?

		
Hand Vacuum	Charging Adapter Plug	2-in-1 Crevice Tool


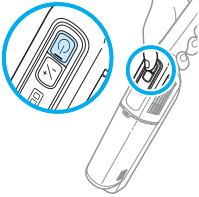
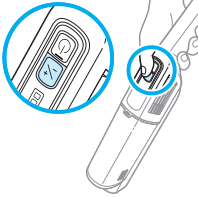
Charging the Battery

IMPORTANT: Turn power OFF prior to charging. Failing to do so may result in battery not fully charging

		
1. Plug charger into charging port on the back of machine.	2. Plug charger into wall outlet.	3. Machine will take up to 3.5 hours to charge. LED lights will turn OFF when fully charged.

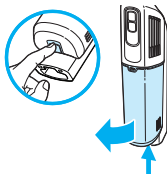
Note: It is normal for adapter to become warm during charging.

Using Your Vacuum

		
1. Remove charger from machine.	2. Press power button ON.	3. Choose your cleaning mode. Press mode button to switch between two modes: Low: For smaller light messes. RUNTIME Up to 30 Mins. High: For heavier messes. RUNTIME Up to 10 Mins.

Emptying the Dirt Tank & Replacing the Filter

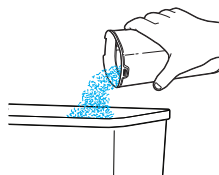
The dirt tank should be emptied before debris reached FULL line.



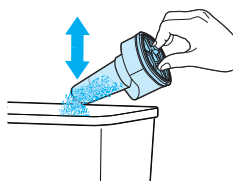
1. Power OFF. Press dirt tank release button on bottom of dirt tank and pull outward to remove.



2. Remove separator from dirt tank.



3. Empty dirt tank.



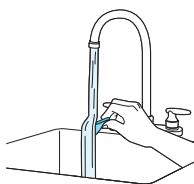
4. To remove debris, tap separator on trash can.



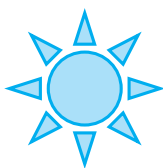
5. Grip filter tabs and pull up to remove filters from separator. The pleated filter assembly should not be washed.



6. Remove foam filter from filter assembly.




7. Rinse foam filter with warm water.



8. Let filter air dry completely before installing.

Note: A wet or damp filter will affect suction performance and damage the machine.



9. Reassemble filters. Install filters into separator until it clicks into place.

Note: For optimal performance, replace the filters every 6 months



10. Install separator into dirt tank. Ensure it is secure.



11. Align groove on front of dirt tank with notch on hand vacuum. When aligned, press the bottom of the tank towards base of hand vacuum until it clicks into place.

WARNING

- To reduce the risk of electric shock, turn power switch OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.
- Do not operate vacuum with damp or wet filters, as well as without filters or the dirt tank in place. Allow components to dry before reassembling the dirt tank.

Troubleshooting

Below are some of the issues you may run into. If you don't see the issue you're experiencing below, visit support.BISSELL.com.

Problem	Possible Cause	Remedies
Hand vacuum won't turn ON	Battery power is low.	Charge machine for 3.5 hours or until fully charged.
Low suction	Dirt tank is full.	Empty dirt tank.
	Dirt tank is not installed properly.	Align dirt tank with notch on hand vacuum and press into machine until it clicks into place.
	Filters are dirty.	Follow filter instructions on page 5.
	Filters are damaged.	Visit BISSELL.com to order replacement filters.
	Battery needs charging.	Charge machine for 3.5 hours or until fully charged.
	Clog in tool.	Remove tool from vacuum. Clear debris from both ends of tool.
Visible dirt escaping from vacuum	Dirt tank is full.	Empty dirt tank.
	Filter is missing or installed incorrectly.	Ensure filter is fully installed.
Vacuum won't charge	Not the correct charger.	Only use charger that came with machine. Correct charger model number is listed on white warning label on hand vacuum
1 blinking white LED	Battery power is low.	Fully charge machine.
3 blinking red LEDs and machine shuts off	Complete air blockage.	Check for clogs in hand vacuum & tool.

Note: Any other servicing should be performed by an authorized service representative.

⚠ WARNING To reduce the risk of electrical shock, turn power switch OFF and disconnect polarized plug from electrical outlet BEFORE performing maintenance or troubleshooting checks.

Warranty

Limited 2-year warranty, may vary by state. Visit support.BISSELL.com or call 1-800-237-7691 for complete warranty information.

Terms and Conditions

Your purchase is subject to the BISSELL® Terms and Conditions, which includes dispute resolution through arbitration and class waiver. For complete terms or to opt out from arbitration or class waiver, visit BISSELL.com/terms-of-use or call 1-800-237-7691.



Thanks to your purchase, we can help
BISSELL Pet Foundation save more pets.

BISSELLsavespets.com



Questions
BISSELL.com/support
1.800.237.7691



Auto Replenish
BISSELL.com/auto-replenishments



My Rewards
BISSELL.com/rewards



Reviews
BISSELL.com



©2026 BISSELL Inc. All rights reserved.
Part Number 1815970



Gracias a su compra, podemos ayudar a la
BISSELL Pet Foundation a salvar más mascotas.

BISSELLsavespets.com

 Questions BISSELL.com/support 1.800.237.7691	 Auto Replenish BISSELL.com/auto-replenishments	 My Rewards BISSELL.com/rewards	 Reviews BISSELL.com
--	---	---	--



©2026 BISSELL Inc. Todos los derechos reservados.
Número de pieza 1815970

Problema		Possible causa	Soluciones
La aspiradora de mano no se enciende	La batería tiene poca carga.	La batería tiene poca carga.	Cargue la máquina durante 3,5 horas o hasta que esté completamente cargada.
	El depósito de suciedad está lleno.	El depósito de suciedad no está instalado correctamente.	Vacíe el depósito de suciedad. Alinee el depósito de suciedad con la muesca en la aspiradora de mano y presione hacia la máquina hasta que encaje en su lugar.
Baja succión	El depósito de suciedad está lleno.	Los filtros están sucios.	Siga las instrucciones del filtro en la página 5.
	El depósito de suciedad está lleno.	Los filtros están sucios.	Visite BISSSELL.COM para solicitar filtros de repuesto.
	El depósito de suciedad está lleno.	La batería necesita carga.	Cargue la máquina durante 3,5 horas o hasta que esté completamente cargada.
	El depósito de suciedad está lleno.	Conecte la herramienta.	Retire la herramienta de la aspiradora. Limpie los residuos de ambos extremos de la herramienta.
	El depósito de suciedad está lleno.	El depósito de suciedad está lleno.	Vacíe el depósito de suciedad.
	El depósito de suciedad está lleno.	El filtro no está presente o está instalado incorrectamente.	Asegúrese de que el filtro esté completamente instalado.
La aspiradora no se carga	La aspiradora no se carga.	No es el cargador correcto.	Solo use el cargador que viene con la máquina. El número de modelo del cargador correcto se encuentra en la etiqueta de advertencia blanca en la aspiradora de mano.
	La batería tiene poca carga.	La batería tiene poca carga.	Cargue completamente la máquina.
	3 Led rojo parpadeando y la máquina se apaga	Obstrucción total del aire.	Verifique si hay obstrucciones en la aspiradora de mano y la herramienta.

Nota: Cualquier otro servicio debe realizarlo un representante autorizado.

**ADVERTENCIA**

Para reducir el riesgo de descarga eléctrica, apague el interruptor de alimentación y desconecte el enchufe polarizado del tomacorriente ANTES de realizar mantenimiento o comprobaciones de solución de problemas.

Garantía

Garantía limitada de 2 años, puede variar según el estado. Visite el centro de **support.BISSSELL.com** o llame al 1-800-237-7691 para obtener información completa sobre la garantía.

Términos y condiciones

Su compra está sujeta a los términos y condiciones de BISSSELL®, que incluyen la resolución de disputas mediante arbitraje y la renuncia a demandas colectivas. Para conocer los términos completos o para renunciar al arbitraje o a la demanda colectiva, visite [BISSSELL.com/terms-of-use](https://www.BISSSELL.com/terms-of-use) o llame al 1-800-237-7691.

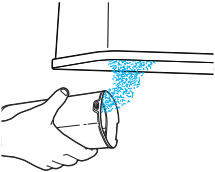
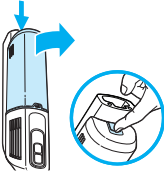
⚠️ ADVERTENCIA

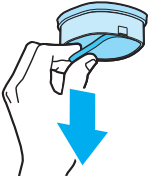
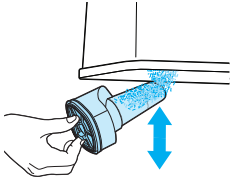
- Para reducir el riesgo de descarga eléctrica, apague el interruptor y desconecte el enchufe del tomacorriente antes de realizar mantenimiento o comprobaciones de solución de problemas.
- No use la aspiradora con los filtros húmedos o mojados, ni sin los filtros o el depósito de suciedad en su lugar. Espere a que los componentes se sequen antes de volver a ensamblar el depósito de suciedad.


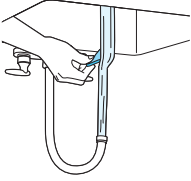
	10. Instale el separador en el depósito de suciedad. Asegúrese de que esté bien sujeto.
	11. Alinee la ranura en la parte frontal del depósito de suciedad con la muesca en la aspiradora de mano. Cuando estén alineados, presione la parte inferior del depósito hacia la base de la aspiradora de mano hasta que encaje en su lugar.


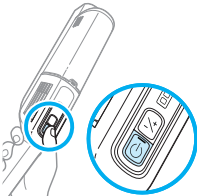
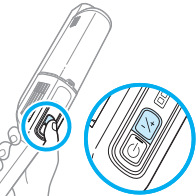
Vaciar el depósito de suciedad y reemplazar el filtro

El depósito de suciedad debe vaciarse antes de que los residuos alcancen la línea FULL.

	2. Retire el separador del depósito de suciedad. 	1. Apague la aspiradora. Presione el botón de liberación del depósito de suciedad en la parte inferior del depósito de suciedad y tire hacia afuera para retirarlo. 
3. Vacíe el depósito de suciedad.		

		4. Para retirar los residuos, toque el separador en la papelera. 
6. Retire el filtro de espuma del conjunto de filtro.	5. Sujete las pestañas del filtro y tire hacia arriba para retirar los filtros del separador. El conjunto de filtro plisado no debe lavarse.	

		7. Enjuague el filtro de espuma con agua tibia. 
9. Vuelva a armar los filtros. Instale los filtros en el separador hasta que hagan clic en su lugar.	8. Deje que el filtro se seque completamente al aire antes de instalarlo. Nota: Un filtro húmedo o mojado afectará el rendimiento de succión y dañará la máquina.	Nota: Para un rendimiento óptimo, reemplace los filtros cada 6 meses.

	1. Retire el cargador de la máquina.
	2. Presione el botón de encendido.
	3. Seleccione su modo de limpieza. Presione el botón del modo para cambiar entre dos modos: Bajo: Para suciedades pequeñas y ligeras. FUNCIONAMIENTO: Hasta 30 minutos. Alto: Para suciedades más pesadas. FUNCIONAMIENTO: Hasta 10 minutos.

AVISO Desconectar la batería destruirá el aparato e invalidará la garantía.

AVISO La batería no debe desecharse en la basura doméstica.

ADVERTENCIA

Este producto contiene baterías recargables de iones de litio. No mezcle las baterías de iones de litio con los residuos domésticos generales. De acuerdo con las normativas federales y estatales, es necesario retirar y desechar correctamente las baterías de iones de litio. Para obtener instrucciones específicas sobre cómo desechar la batería, por favor, póngase en contacto con Call2Recycle en 877-723-7297 o visite www.call2recycle.org. Para obtener instrucciones completas sobre la eliminación de la batería para el reciclaje, visite el servicio de asistencia, BISSELL.com.

¿Qué hay en la caja?		
		Aspiradora de mano
	Enchufe del adaptador de carga	Boquilla para ranuras 2-en-1

Carga de la batería

Importante: Apague la unidad antes de cargarla. Si no lo hace, es posible que la batería no se cargue completamente.

1. Conecte el cargador en el puerto de carga en la parte posterior de la máquina.	2. Conecte el cargador en un tomacorriente de pared.	3. La máquina tardará hasta 3.5 horas en cargarse. Las luces LED se apagaran cuando esté completamente cargada.

Nota: Es normal que el adaptador se caliente durante la carga.

INSTRUCCIONES IMPORTANTES DE SEGURIDAD

LEA TODAS LAS INSTRUCCIONES ANTES DE USAR SU APARATO.

Al usar un electrodoméstico, se deben observar precauciones básicas, incluyendo lo siguiente:

ADVERTENCIA

PARA REDUCIR EL RIESGO DE INCENDIO, DESCARGA ELÉCTRICA O LESIÓN:

- No use en superficies mojadas.
- No permitir que se utilice como un juguete. Preste especial atención cuando un niño utilice el aparato o cuando haya niños cerca durante su funcionamiento.
- No utilice el equipo para ningún otro propósito que no sea el descrito en esta guía. Utilice solamente los accesorios recomendados por el fabricante.
- No lo cargue con un cargador o enchufe dañado. Si el electrodoméstico no funciona correctamente, se ha caído, dañado, o dejado al aire libre o sumergido en agua, llévelo a reparar en el centro de servicio autorizado.
- No introduzca ningún objeto en las aberturas. No lo utilice si alguna de las aberturas está bloqueada; mantenga las aberturas libres de polvo, pelusas, pelos y cualquier otra cosa que pueda reducir el flujo de aire.
- Mantenga el cable y todas las partes del cuerpo lejos de las aberturas y las partes móviles.
- No manipule el cargador, incluyendo el enchufe y el terminal del cargador, con las manos mojadas.
- No cargue la unidad al aire libre.
- No intente el aparato, ni siquiera si está gravemente dañado.
- Las baterías pueden explotar en un incendio.
- Evnaga especial cuidado al limpiar las escaleras.
- gasolina, queroseno, etc.), ni la use en áreas donde puedan estar presentes estos elementos.
- No utilice la aspiradora en un espacio cerrado lleno de vapores que emanen de pintura a base de aceite, diluyente de pintura, algunas sustancias antipolvo, polvo inflamable u otros vapores explosivos tóxicos.
- No utilice para recoger sustancias tóxicas (heja con doro, amoníaco, limpiadores de desgrasantes, etc.).
- No cargue nada que esté ardiendo o humeando, como cigarrillos, fósforos o cenizas calientes.
- No utilice áreas de depósito de polvo o filtros colocados.
- No reciba objetos duros o afilados como vidrio, clavos, tornillos, monedas, etc.
- No tire ni transportar el cargador por el cable, no lo use como asa, no cierre una puerta sobre el cable ni lo tire alrededor de bordes o esquinas afiladas. No pase el electrodoméstico sobre el cable.
- Evite el arranque no intencional. Asegúrese de que el interruptor esté en la posición de apagado antes de levantar o transportar el electrodoméstico. Transportar el electrodoméstico con el dedo sobre el interruptor o encenderlo cuando el interruptor está en posición de encendido puede provocar accidentes.
- Si se produce un contacto accidental, enjuague con agua. Si el líquido entra en contacto con los ojos, busque asistencia médica. El líquido expuesto de la batería puede causar irritación o quemaduras.

GUARDE ESTAS INSTRUCCIONES

ESTE MODELO ES SOLO PARA USO DOMÉSTICO. EL USO COMERCIAL DE ESTA UNIDAD ANULA LA GARANTÍA DEL FABRICANTE.

DECLARACIÓN DE CONFORMIDAD DEL PROVEEDOR 47 CRF SECCIÓN 2.1077 INFORMACIÓN DE CUMPLIMIENTO Adaptador de cargador para el

producto BISSELL.

El funcionamiento está sujeto a las siguientes condiciones: (1) este dispositivo no puede causar interferencias dañinas, y (2) este dispositivo debe aceptar cualquier interferencia recibida, incluida la interferencia que pueda causar un funcionamiento no deseado. Precisión: (c) cualquier cambio o modificación en esta unidad que no esté expresamente aprobado por la parte responsable del cumplimiento podrá anular la autoridad del usuario para operar el equipo. NOTA: Este equipo ha sido probado y se ha comprobado que cumple con los límites para un dispositivo digital de Clase B, de conformidad con la parte 15 de las normas de la FCC. Estos límites están dispuestos para proporcionar una protección razonable contra interferencias dañinas en una instalación residencial. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia y, si no se instala y utiliza de acuerdo con las instrucciones, puede causar interferencias perjudiciales en las comunicaciones de radio. Sin embargo, no hay garantía de que no se produzca interferencia en una instalación en particular. Si este equipo causa interferencias perjudiciales a la recepción de radio o televisión, lo que se puede determinar apagando y encendiendo el equipo, se recomienda al usuario que intente corregir la interferencia mediante una o más de las siguientes medidas: (1) Reorientar o reubicar la antena receptora. (2) Aumentar la separación entre el equipo y el receptor. (3) Conecte el equipo a una toma de corriente en un circuito diferente al que está conectado el receptor. (4) Consulte al distribuidor o a un técnico de radio o televisión experimentado para obtener ayuda.



READYCLEAN®

ASPIRADORA DE MANO

MODELOS 5999, 5999A

2	Instrucciones importantes de seguridad
3	Contenido de la caja
3	Carga de la batería
4	Uso de su aspiradora
5	Vaciado del depósito de polvo y reemplazo del filtro
7	Solución de problemas
7	Garantía

Descripción general del producto

- A. Botón de encendido
- B. Botón de modo
- C. Pantalla LED
- D. Depósito de suciedad
- E. Botón de liberación del depósito de suciedad

