

600W Series

Whole House Air Purifier Unit Set Up

Attach the top


Place the white felt gasket on top of the filters
Place the top and align the holes in the top with
the holes on the 4 brackets without pushing the top
completely down all around
Place one screw with its washer and screw in partially
Fit the top onto the body all around
Screw in the 3 remaining screws
Tighten fully the first screw





Place the elbow over the oval opening on the unit so that the elbow is towards the left when looking from the back of the unit. (The clean air flows out in a clockwise direction) Attach the elbow with the 4 screws provided


Attach standard 5" pipes

Attach standard 5" pipes from the house ventilation system to create a bypass to the air purification system

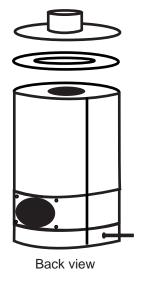

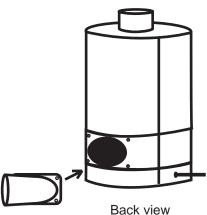

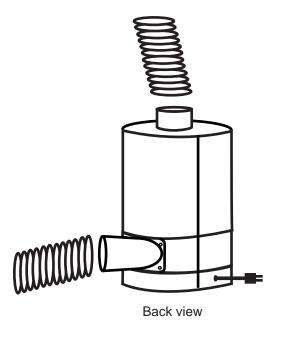

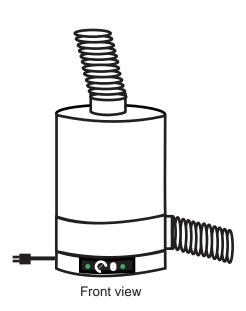



600W Series

Whole House Air Purifier Unit Set Up

Attach the top


Place the white felt gasket on top of the filters Place the top and align the holes in the top with the holes on the 4 brackets without pushing the top completely down all around Place one screw with its washer and screw in partially Fit the top onto the body all around Screw in the 3 remaining screws Tighten fully the first screw

Attach the elbow


Place the elbow over the oval opening on the unit so that the elbow is towards the left when looking from the back of the unit. (The clean air flows out in a clockwise direction) Attach the elbow with the 4 screws provided





Attach standard 5" pipes from the house ventilation system to create a bypass to the air purification system

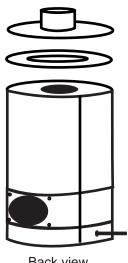

Back view

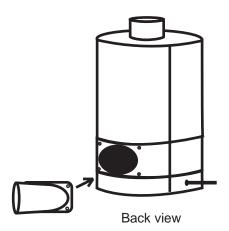

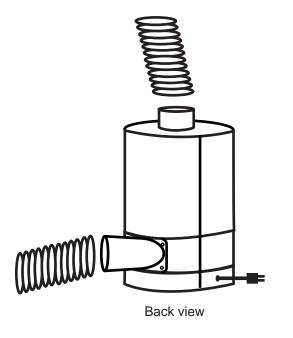

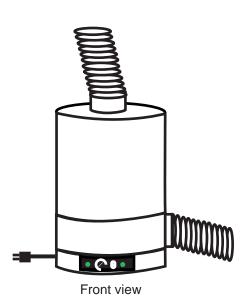



By-pass installation of the Airpura 600-W central air purifier

