


Included Hardware:

1. Qty 1: Allen Wrench
2. Qty 2: Locking screws
3. Qty 4: Driver Mounting Bolts





Unfolding and Assembly of the HLG Tomahawk

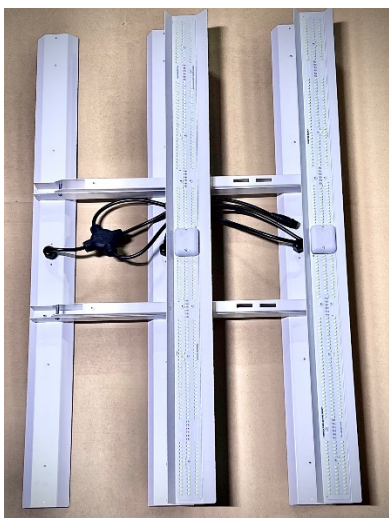

The HLG Tomahawk is folded within the packing box.

Remove lamp and unfold it face down on a level surface

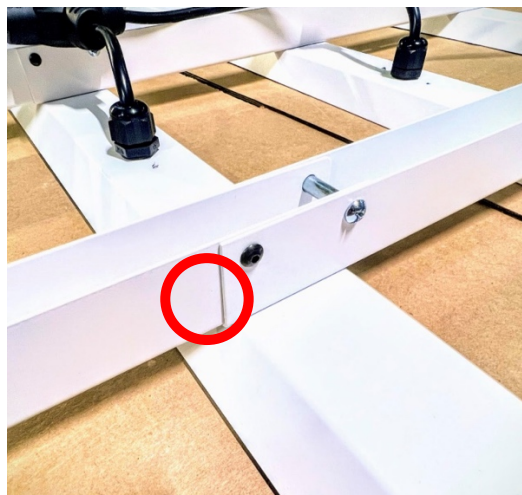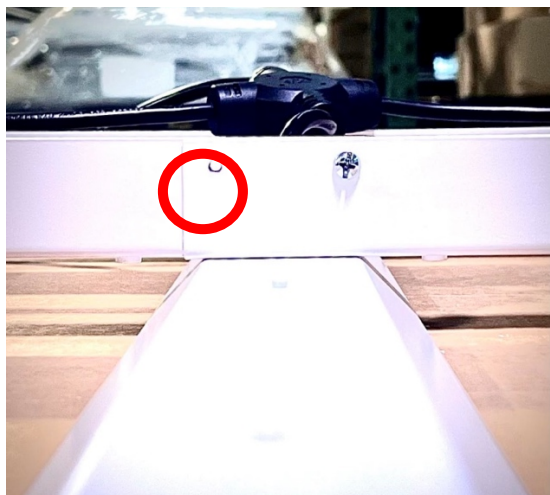

Locate the PEM set locking holes on the rails of the HLG Tomahawk.

Using the Allen Wrench (1), insert the two locking screws (2) in the PEM sets. Tighten each nut completely to secure the lamp open.



Locate the two M16 quick connect wiring harness ends. One is attached to the lamp and the other is attached to the driver.



Connect the M16 ends together and tighten the screwing lock to secure the connection.

Mounting the Driver on the HLG Tomahawk

*Please note: Mounting the driver is not recommended by HLG. This will void the ETL Certification of the lamp. HLG holds no responsibility.



Locate the driver mounting PEM sets inside the rail of the Tomahawk. Align the driver channels with the PEM sets.



Using a Phillips head screwdriver (not included), insert the four driver mounting bolts (3) and tighten to secure the driver.

Tomahawk Driver DC Extension Cord

Available on the HLG.com website

