
INSTALLATION

It is important that the installation instructions below are followed for successful installation of this Portable Air Conditioner. Please call Customer Support if you have any difficulties or queries regarding these installation procedures.

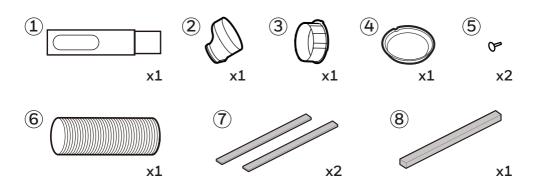


Installation Kit:


Installation Kit:					
1. Window Bracket Kit	(1 Set)	5.	Plastic Pin	(2 Pieces)	
2. Window Bracket Panel Adapter	(1 Piece)	6.	Hose	(1 Piece)	
3. Hose Connector	(1 Piece)	7.	Foam Seal (adhesive)	(2 Pieces)	
4. Drain Pan	(1 Piece)	8.	Foam Seal (non-adhesive)	(1 Piece)	

Installation Steps:

1. Window bracket panel adapter, hose and hose connector are pre-assembled inside the package.




2. Adjust the window bracket as per width or height of your window and insert the plastic pin to fix at the desired position. There is a hole where the hose will be inserted later. Make sure this hole is not blocked.

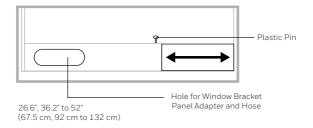

INSTALLATION (CONTINUED)

Note: After setting the window bracket to the size of your window, please remove it from the window and follow the instructions below.

3. Connect the hose to the rear exhaust outlet on the back of the unit. Slide-in the hose connector then rotate clockwise until it is locked in place.

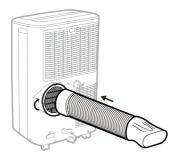

Hose.

Dia. 5.9" (15 cm)

Length: 10.6" to 59" (27 cm to 150 cm)

4. Connect the window bracket to the window bracket panel adapter. Ensure that all connections are tight and installed properly.




5. Cut the Foam Seal (adhesive) to the proper length and attach them to the window sash and frame.




Vertical Sliding Window

INSTALLATION (CONTINUED)

6. Connect the window bracket to the window.

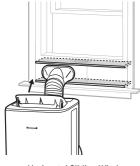




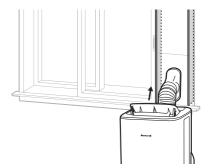


Vertical Sliding Window

7. Cut the Foam Seal (non-adhesive) to the window length. Stuff the Foam Seal (non-adhesive) between the inner window sash and the outer window glass to prevent air and insects from getting into room.

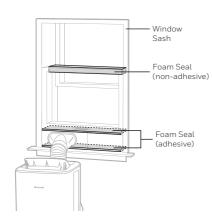

Horizontal Sliding Window

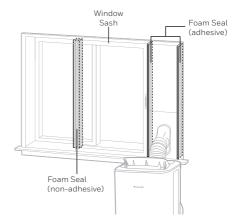

Vertical Sliding Window

8. The Portable Air Conditioner is now ready to use.