


INSTALLATION

It is important that the installation instructions below are followed for successful installation of this Portable Air Conditioner. Please call Customer Support if you have any difficulties or questions regarding these installation procedures.

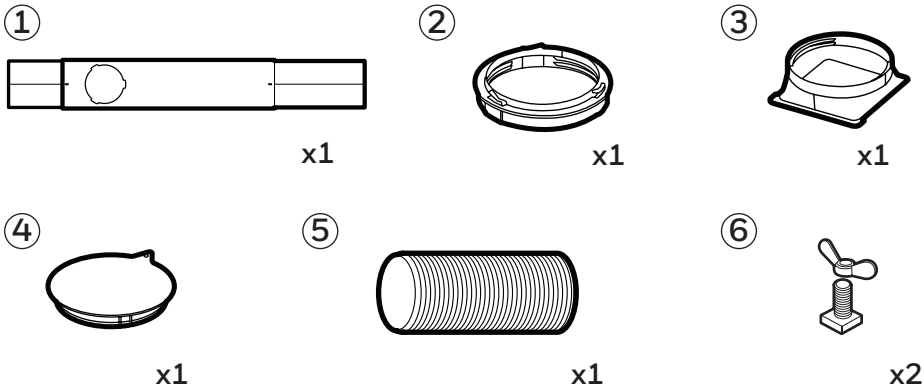


Installation Kit:

- | | | | |
|---------------------------------|-----------|---------------------|------------|
| 1. Window Bracket Kit | (1 Set) | 4. Hole Cover | (1 Piece) |
| 2. Window Bracket Panel Adapter | (1 Piece) | 5. Exhaust Hose | (1 Piece) |
| 3. Exhaust Hose Connector | (1 Piece) | 6. Butterfly Screws | (2 Pieces) |

Installation Steps:


1. The Exhaust Hose Connector, Exhaust Hose and Window Bracket Panel Adapter are pre-assembled inside the package.

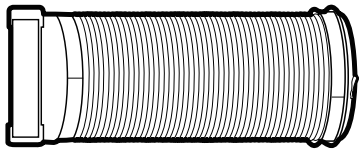

Exhaust Hose:
Length: 12" to 47" (30 cm to 120 cm)

INSTALLATION (CONTINUED)


2. There are 3 varying lengths to the window bracket, 19.7 inches (50 cm), 38.2 inches (97 cm) and 47.2 inches (1.2 m). For sizes smaller than the listed size please bring the panel to your local hardware shop to be cut to the length you need. The bracket can be installed horizontally or vertically.

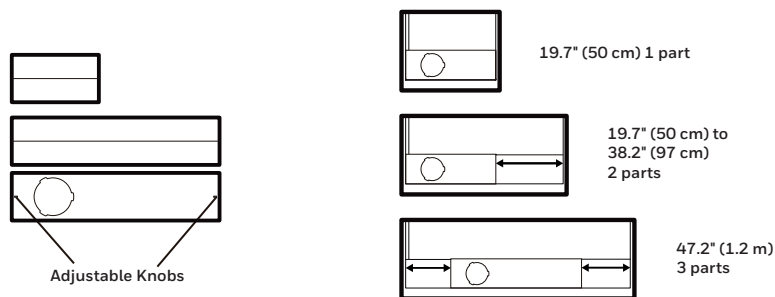


Adjust the length of the window bracket in accordance with the height or width of the window frame. When the length is set, tighten the Adjustable Knobs (preinstalled on the window bracket) to ensure the window bracket is secured in the desired position. Use one or all three pieces of the window bracket as needed.

Note: After setting the window bracket to the size of your window, please remove it from the window and follow the instructions below.


3. Connect the Exhaust Hose to the rear exhaust outlet on the back of the unit. Slide in the Hose Connector from up to down.

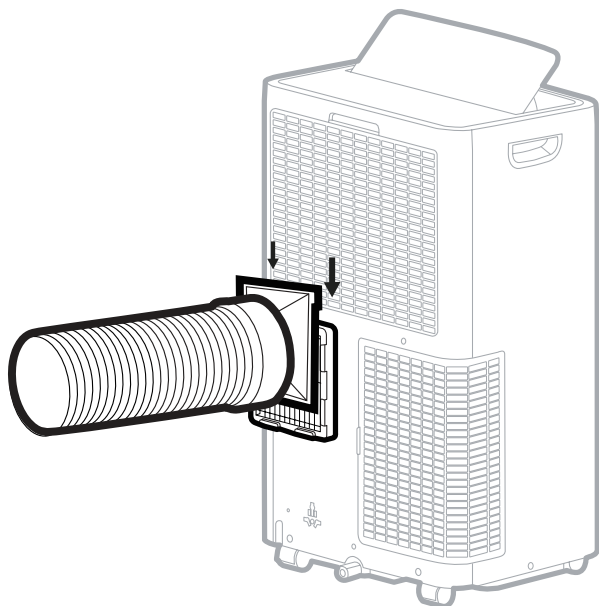

4. Connect the window bracket to the window bracket panel adapter. Slide in the window bracket panel adapter then rotate clockwise until it is locked in place.

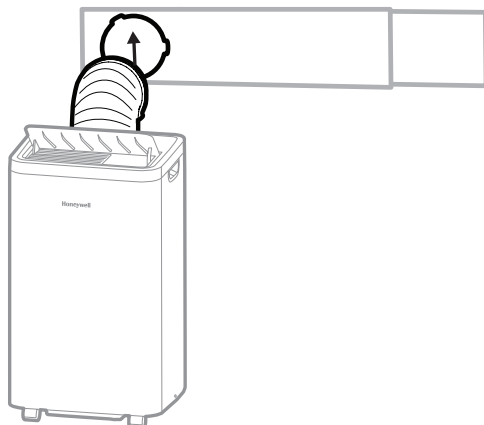

5. Connect the window bracket to the window.

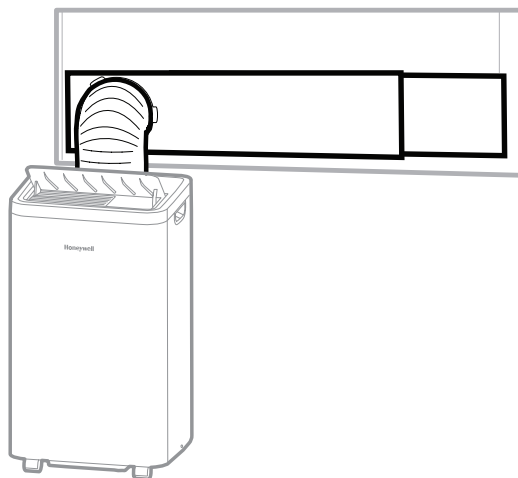

6. The Portable Air Conditioner is now ready to use.