


INSTALLATION

It is important that the installation instructions below are followed for successful installation of this Portable Air Conditioner. Please call Customer Support if you have any difficulties or questions regarding these installation procedures.

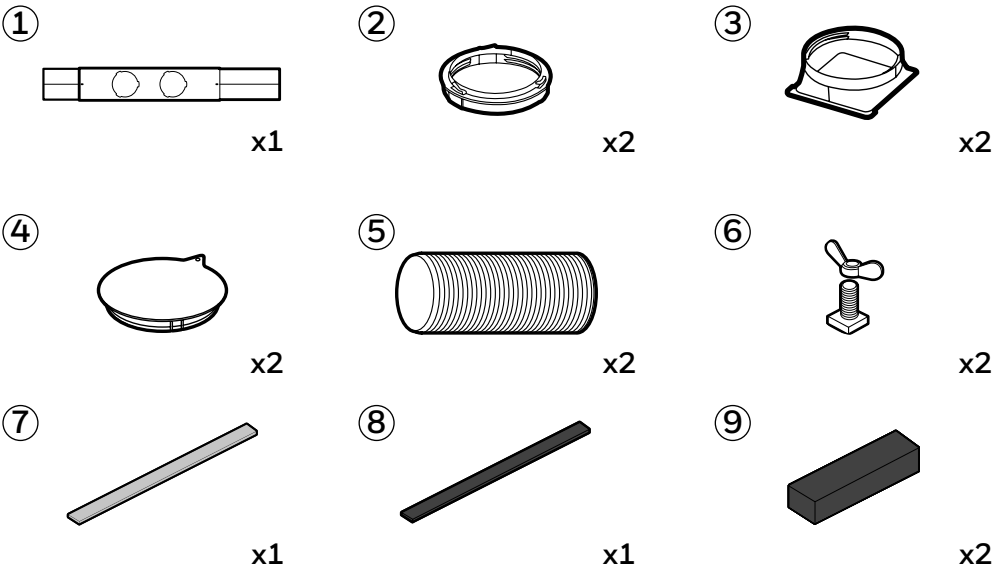

Installation Kit:

- | | | | |
|---------------------------------------------|------------|----------------------------------------|------------|
| 1. Window Bracket Kit | (1 Set) | 5. Exhaust Hoses | (2 Pieces) |
| 2. Window Bracket Panel Adapters (2 Pieces) | | 6. Butterfly Screws | (2 Pieces) |
| 3. Exhaust Hose Connectors | (2 Pieces) | 7. Insulation Tape (gray, adhesive) | (1 Piece) |
| 4. Hole Covers | (2 Pieces) | 8. Insulation Tape (black, adhesive) | (1 Piece) |
| | | 9. Foam Insulation Pads (non-adhesive) | (2 Pieces) |


INSTALLATION (CONTINUED)

Installation Steps:

1. The Exhaust Hose ⑤ and Window Bracket Panel Adapter ② are pre-assembled inside the package.
2. The Exhaust Hose ⑤ and Exhaust Hose Connector ③ require assembly.
Please follow the below steps:


- a. Expand the unassembled end of the Exhaust Hoses 4" to 8", then carefully thread the Hose Connector ③ onto the Hose.
- b. Rotate the Hose connector counter clockwise for 3 or 4 turns, or until Hose Connector is secured tightly onto the Hose.

1.

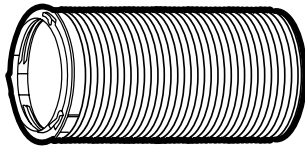


Exhaust Hose:
Length: 12" to 47" (30 cm to 120 cm)

2.

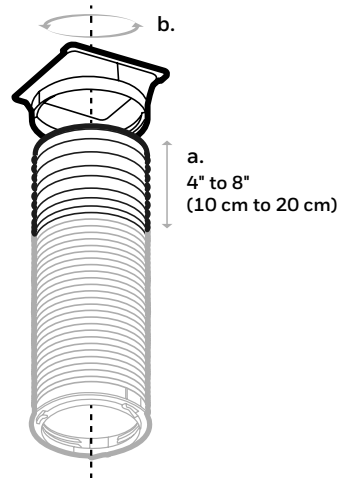

INSTALLATION (CONTINUED)


2. There are 3 varying lengths to the window bracket, 19.7 inches (50 cm), 38.2 inches (97 cm) and 47.2 inches (1.2 m). For sizes smaller than the listed size please bring the panel to your local hardware shop to be cut to the length you need. The bracket can be installed horizontally or vertically.

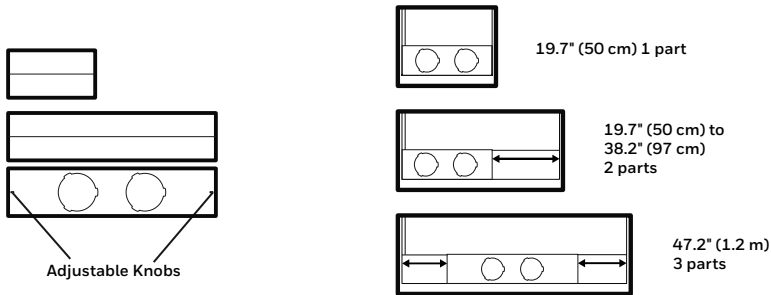

Adjust the length of the window bracket in accordance with the height or width of the window frame. When the length is set, tighten the Adjustable Knobs (preinstalled on the window bracket) to ensure the window bracket is secured in the desired position. Use one or all three pieces of the window bracket as needed.


Note: After setting the window bracket to the size of your window, please remove it from the window and follow the instructions below.

3. Connect each of the Exhaust Hoses to the rear air exhaust and air inlet on the back of the unit. Slide the Hose Connectors downwards into the slots of the outlets. Make sure all sides are secured within the outlet slots.

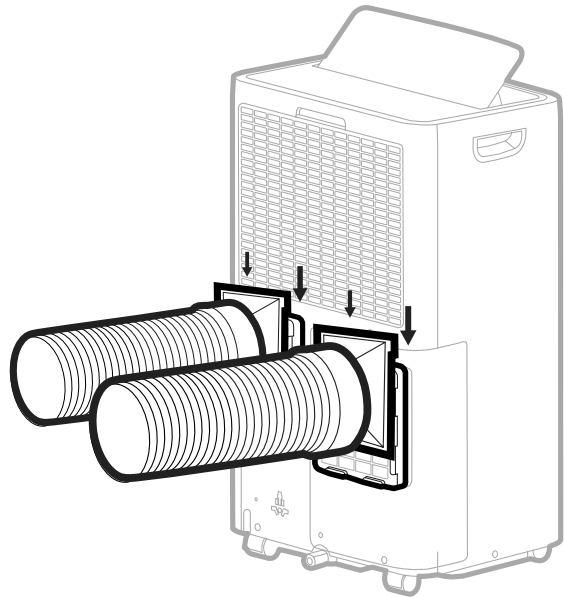


INSTALLATION (CONTINUED)


4. Connect the window bracket to the window bracket panel adapter by sliding the panel adapter into the holes of the window bracket, then rotate clockwise until it is locked in place.

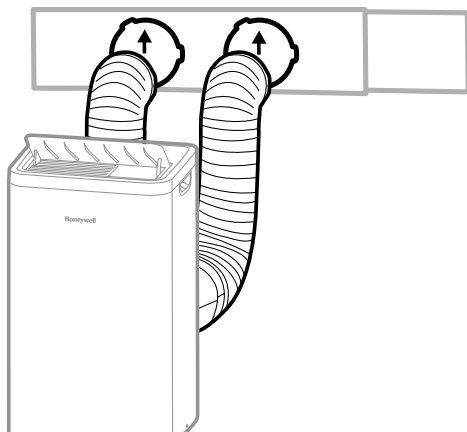


5. Measure and cut the Foam Insulation Tapes to the full length of your window sash and frame. Peel off the adhesive backing and slowly attach them to the window sash and frame. The gray tape should attach to the movable window sash.

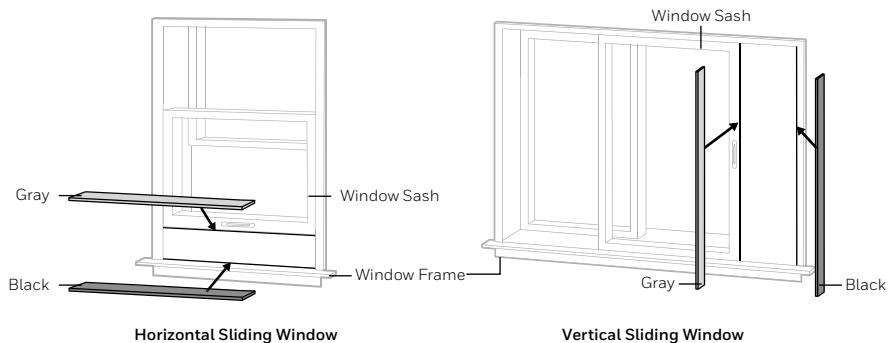


6. Connect the window bracket to the window.

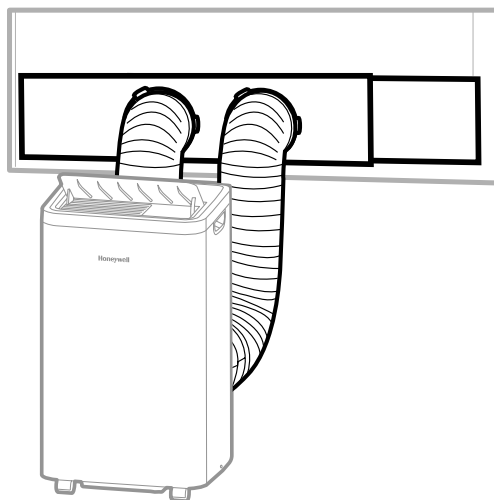

7. Position the non-adhesive foam pads on both edges that are not covered by the foam adhesive tape to seal gaps and prevent air and insects from entering into the room.

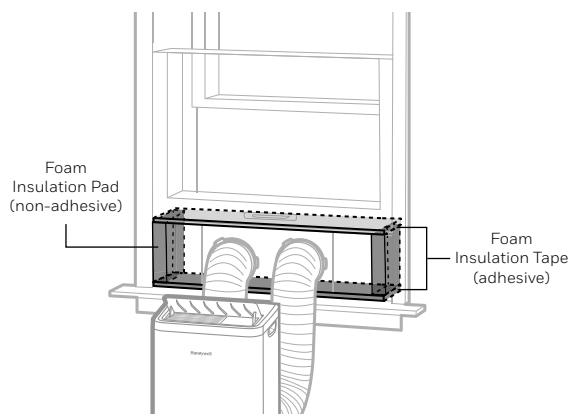

Horizontal Sliding Window

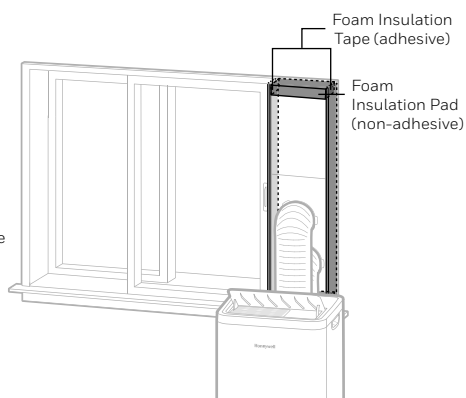

Vertical Sliding Window

8. The Portable Air Conditioner is now ready to use.