



## MRCOOL® LineGuard® Installation

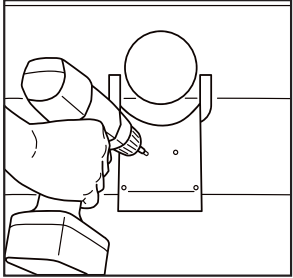


**1**

Determine the path the lineset will follow from the indoor unit to the outdoor unit and draw a chalk line for reference. Start the installation by attaching the base of the wall inlet at the lineset starting location, predrilling where necessary.

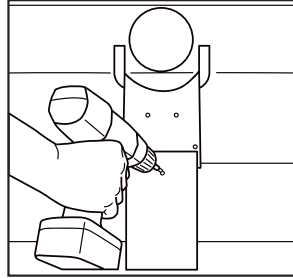


**2**

Measure, cut, and attach additional duct bases along the path. It may be necessary to trim the duct length for a proper fit. After finalizing the location, use screws to secure the ducts to the exterior wall through the punch outs. Please allow room for seasonal expansion and contraction.

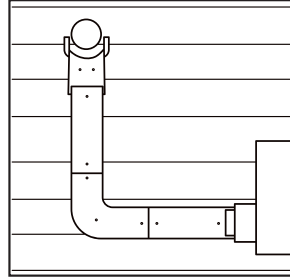


**3**

You may need to add unions, elbows or additional duct bases to complete the ductwork along the chalk line reference.

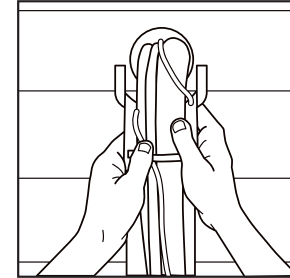

**4**

Secure the ACR / communication wires to the duct bases with clips and ties.

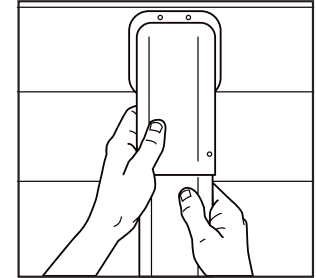

**5**

Complete the installation by attaching the top cover of the line guard into place making sure it clicks. Afterward, snap the rest of the pieces along the path to cover the remaining duct bases. Secure any unions or elbows using the included screws.