

# Duct Kit


Part No. 4042275

## Parts Included:

1. Supply Duct Plenum
2. Packed Fasteners (x4)

## Tools Required:

1. Portable Drill
2. T25 Torx Driver
3. 5/16" Hex Driver

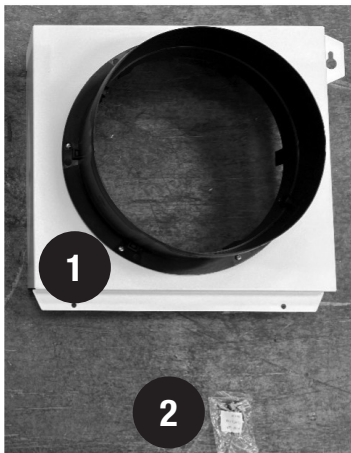


---

**CAUTION!** Before installing duct kit, disconnect dehumidifier from electrical power and disconnect duct work if previously installed.

---

**Step 1:** Using T25 Torx Driver, unthread #10-24 screws on the top panel (x1), rear panel (x1), and left panel (x2) halfway.

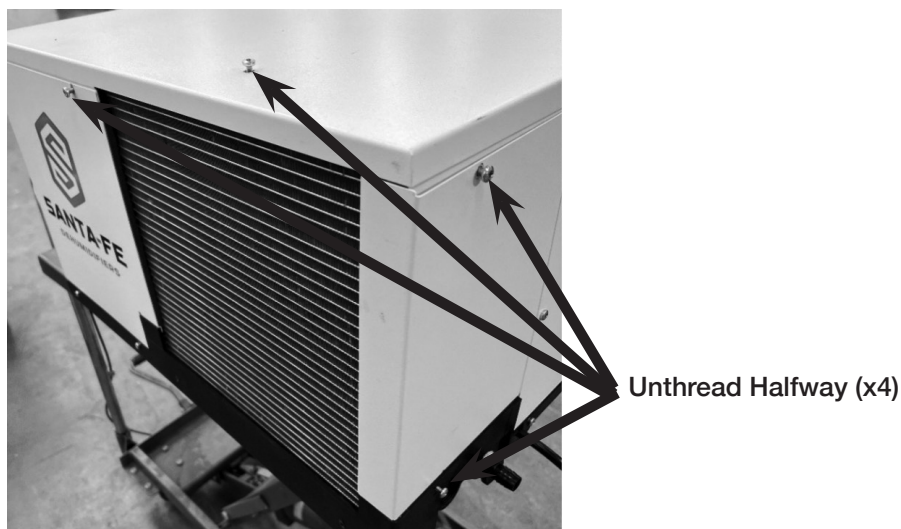


**Therma-Stor<sup>®</sup> LLC**

Driven by performance. Powered by design.™


4201 Lien Rd Madison, WI 53704 • TOLL-FREE 1-800-533-7533 • [www.thermastor.com](http://www.thermastor.com) • [sales@thermastor.com](mailto:sales@thermastor.com)

TS-1185 10/22 Rev A

**Step 2:** Install supply duct plenum on the dehumidifier by slotting half-threaded screws in the keyed grooves (x4). Ensure screws are pushed all the way into the grooves.

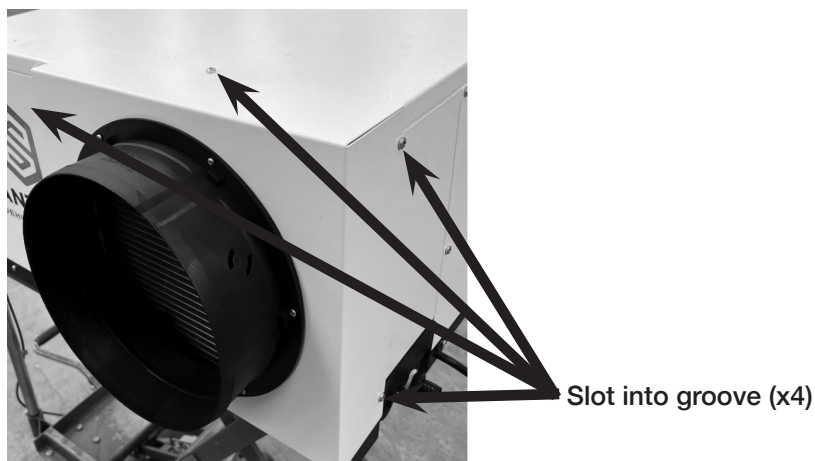

**Step 3:** Using T25 Torx Driver, tighten #10-24 screws on the top panel (x1), rear panel (x1), and left panel (x2). Ensure screws are securely fastened.

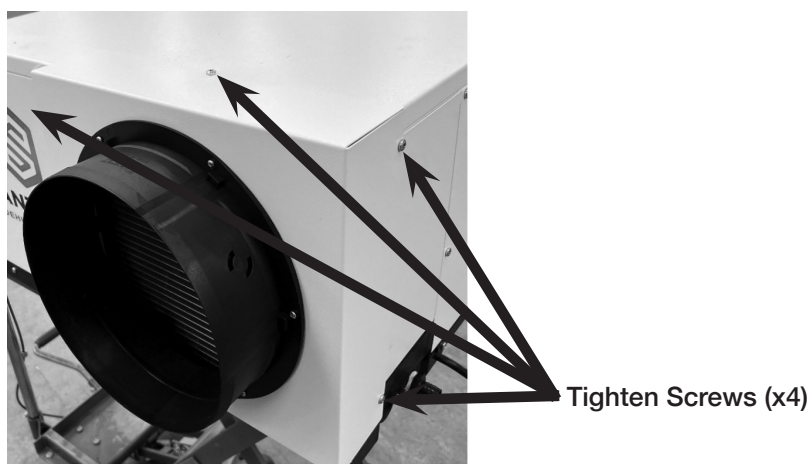

**Step 4:** Locate packed fasteners. Using 5/16" Hex Driver, drill fasteners (x2) through bottom holes of the supply duct plenum into plastic base. Ensure screws are securely fastened.



**Note:** Packed fasteners are self-drilling. No need for pilot holes. Packed parts have x2 additional fasteners that are unneeded.



**Therma-Stor<sup>®</sup> LLC**

Driven by performance. Powered by design.™

4201 Lien Rd Madison, WI 53704 • TOLL-FREE 1-800-533-7533 • [www.thermastor.com](http://www.thermastor.com) • [sales@thermastor.com](mailto:sales@thermastor.com)

TS-1185 10/22 Rev A