



### model EV100

# EVAPORATIVE WHOLE ROOM HUMIDIFIER OWNER'S GUIDE

GUÍA DEL PROPIETARIO DEL HUMIDIFICADOR EVAPORATORIO TIPO VÓRTICE

GUIDE D'UTILISATION – HUMIDIFICATEUR À ÉVAPORATION POUR TOUTE LA PIÈCE

### READ AND SAVE THESE INSTRUCTIONS

LEER Y GUARDAR ESTAS INSTRUCCIONES

LISEZ ET CONSERVEZ CES INSTRUCTIONS

vornado.com



# we expect this product to be **PERFECT**

# if it's not, WE will make it right

vornado.com 800.234.0604 help@vornado.com

# CONTENTS

Important Instructions4	Automa
Getting Started7	Cleaning
Features8	Storage
Controls9	Tips
Filling Water Tank	Troubles
How to Use	Warrant
Replacing Wick12	

Automatic Refill Program		12
Cleaning		13
Storage		16
Tips		16
Troubleshooting		17
Warranty		18
	Español p. 19	Français p. 36

### IMPORTANT INSTRUCTIONS READ ALL INSTRUCTIONS BEFORE USING THIS HUMIDIFIER.

This owner's guide and any additional inserts are considered part of the product. They contain important information about safety, use and disposal. Before using the product, please familiarize yourself with all operating and safety instructions. Please keep all documents for future reference and pass these documents on, together with the product, to any future owner. Please refer to our website for the most current version of our owner's guide.

The following Warning messages are throughout this owner's guide:



### A DANGER

Indicates a hazard with a HIGH level of risk which, if not avoided, will result in death or serious injury. Please pay special attention to any instructions given to avoid this threateningly dangerous risk.



### **A** WARNING

Indicates a hazard with a MEDIUM level of risk which, if not avoided, could result in death, serious injury, minor or moderate injury or potential property damage.

**INTENDED USE:** This product is intended to circulate and humidify the air in indoor living spaces only. This product is not intended for commercial or industrial uses. Please read all instructions before using this humidifier.

The manufacturer assumes no responsibility for damage or injury caused by failure to follow these instructions, improper product use or unauthorized product modification. Any such actions will invalidate the product warranty.



**WARNING** – When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:



### **A** WARNING

Risk From Unintended Use and Handling. Please take care to follow these guidelines to avoid risks to people or property.

- **Do Not** tamper with or modify this product in any way.
- **Do Not** use this product outdoors or directly exposed to weather
- **Do Not** use this humidifier on an uneven surface. Always place this humidifier on a firm, flat surface.
- **Do Not** run power cord under carpeting. Do not cover power cord with throw rugs, runners or similar coverings. Do not route power cord under furniture or appliances. Arrange power cord away from traffic area and where it will not be tripped over.
- **Do Not** operate after the humidifier malfunctions, has been dropped or damaged in any manner. Discard humidifier, or return to authorized service facility for examination and/or repair in order to avoid a hazard.
- Do Not place the humidifier near heat sources, such as stoves, radiators or heaters.
- **Do Not** repeatedly remove and replace the water tank. This will only fill the base and water will spill out.

### **A** DANGER

### Risk From Electrical Shock. Contact with wires or components that are under voltage could be potentially fatal!

- **Do Not** use this product outdoors or exposed to weather or the elements.
- **Do Not** immerse this product in water.
- Do Not pour water through the top Outlet Air Grill on the power head.
- **Do Not** attempt to disassemble the power head. Doing so will void your warranty and could cause damage and/or personal injury. The power head contains no user-serviceable parts. If you experience a problem, please see the warranty for manufacturer information.
- **Do Not** operate the humidifier with a damaged cord or plug. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard
- To reduce the risk of fire or electric shock, do not use this product with a digital timer, blender or solid-state control device, such as a blender or variable-speed fan.
- This appliance has a polarized plug. (One blade is wider than the other.) To reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

### A DANGER

Risk From Electrical Connections. Please pay attention to any instructions given to avoid personal injury or property damage.

- A loose fit between wall outlet (receptacle) and plug may cause overheating and distortion of the plug. Discontinue use of the product in outlet. Contact qualified electrician to replace loose or worn outlet.
- Turn the humidifier off if the relative humidity exceeds 60%. Humidity levels above 60% may allow moisture to build up indoors and condense on surfaces, where microorganisms can settle and grow. For accurate readings, use a hygrometer, which is available at most hardware stores and home centers.
- Unplug humidifier prior to moving, cleaning or refilling.
- Unplug and empty humidifier when not in operation.
- Remove the water tank before moving the humidifier to a new location.
- Empty water from the unit if the humidifier is to be turned off and left for more than 8 hours, as leaving the water will encourage the growth of microorganisms. If this happens, thoroughly clean and disinfect the unit. (Refer to CLEANING.)
- Do Not use undiluted bleach or ammonia, strong detergents, abrasive cleansers, gasoline, paint thinner or other solvents to clean this humidifier. Use only water and mild detergents to perform daily maintenance on your humidifier.
- **Do Not** clean this humidifier in any manner other than what is instructed in this manual.

### **A WARNING**

### Risk to Children and Other At-Risk Groups of People.

- This humidifier can be used by children ages 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Humidifiers should be kept away from children under the age of 8 and not placed in a child's room without supervision.
- This product and packaging material are not toys and should be kept out of reach of children.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate equipment.

FCC CONSUMER ADVISEMENT: This equipment may generate, use and/or radiate radio frequency energy that may cause harmful interference to radio communications. Unauthorized use or modification of this product increases interference risk and may cause FCC revocation of permission to operate. To determine whether the equipment causes harmful interference, please turn the equipment on and off while simultaneously using a radio or television. If interference is suspected, the user is encouraged to contact Vornado Consumer Service at 1-800-234-0604

### **SAVE THESE INSTRUCTIONS**

# GETTING STARTED

Before operating, ALWAYS lift from the bottom by using the handles located on the base. Lifting the Water Tank handle on the Water Tank will cause the tank to detach from the humidifier. Before use, check appliance for visible damage. DO NOT USE if there is evidence of damage. If any damage is found, contact Vornado Air, LLC at 1-800-234-0604.



### Check for Leaks

Damage due to shipping may cause leaks in Base or Water Tank. A visual inspection may not reveal hairline fractures.

- 1. Place humidifier on a water-resistant surface.
- 2. Fill Water Tank with water to inspect for leaks.
- 3. Pour several cups of water into Base to inspect for leaks.

### Not Leaking?

Empty water from Base and install full Water Tank.

### Leaking?

In the slight chance your humidifier has leaks, contact Consumer Service and we will immediately replace damaged parts.

A humidifier is quite useful in supplying necessary moisture to dry air. It should be used with proper care to prevent overhumidification.



A good rule of thumb would be to gauge the condensation or frost on windows. Adjust your humidifier to a point where this condition is at a minimum. These adjustments should be made when major changes in outdoor temperatures occur.

Humidifiers can be placed in any living area that has a convenient location and provides distribution of the moist air to the living area. The measured output of a humidifier is based upon continuous operation at standard rating conditions. With normal variations of indoor and outdoor conditions, the humidistat-controlled humidifier will not run continuously at maximum output unless the controls are set to do so.

#### INITIAL HUMIDITY REQUIREMENTS:

When initially installed or when placed in operation at the beginning of each season, the humidifier equipped with a humidistat may run constantly for a day or so and, thus, evaporate large quantities of moisture. When the home and its furnishings have absorbed moisture and become stabilized at the desired humidity level, the amount of water used will diminish and the humidifier operation will maintain the desired humidity level.

# **FEATURES**

#### SIMPLETANK™ SYSTEM

This Water Tank is easy to carry, fill, install, clean and view water level. Large 1-gallon capacity.

### **POWER HEAD**

Powerful motor circulates humidified air throughout whole room. Easy to access for cleaning.



### WICK

Wicks up water and filters out impurities.

#### **BASE**

Durable and easy to clean.



#### AIR OUTLET GRILL

Initiates Vornado's signature Vortex circulation. Removable for easy cleaning.


### AIR INLET GRILL

Designed for efficient air intake.

#### **CARRY HANDLES**

Integrated handles on sides of base for lifting and carrying.

# CONTROLS

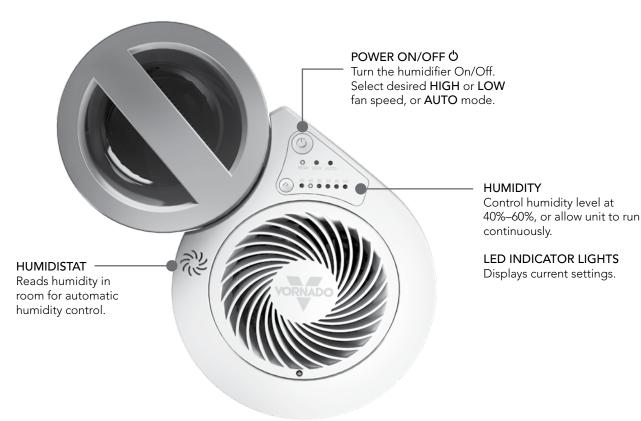

# FILLING WATER TANK

**Note:** Spills can occur during cleaning, moving or refilling the Water Tank, so be careful to avoid spills when doing these activities.

- 1. Unplug humidifier and place on a level surface.
- **2.** Remove Water Tank from the base by grasping the top integrated handle and pulling up towards you (A).
- **3.** Turn the Water Tank upside down and remove the Cap by turning it counterclockwise (B).
- **4.** Gently place Water Tank on a flat surface and fill with cool tap water (C).
- **5.** Ensure Gasket, the rubber ring around the Water Tank, is properly positioned. Insert the Cap into the grooves of the tank and turn clockwise until tightened.
- **6.** Lower Water Tank into Base, positioning Water Tank around the ledge for secure placement (D). Once in nested position, water outlet valve inside Cap opens, releasing water into Base.



# HOW TO USE

- 1. Position humidifier to not blow directly on objects or plants. Plug power cord into standard grounded wall outlet.
- 2. To turn humidifier on, press Power Button. The indicator lights for HIGH fan speed, 50% humidity will illuminate. After first use, humidity setting is saved when powered off. Fan speed will default
- to HIGH. If unit is unplugged, during next use, settings will default to HIGH fan speed, 50% humidity.
- **3.** Use Power Button to select HIGH or LOW fan speed or AUTO mode until the desired setting is illuminated.

#### HIGH

Operation for fast humidification of larger rooms. High-speed operation will evaporate 1 gallon of water (+/- 10%) in 24 hours of continuous operation. (This assumes room conditions of 70° F and 30% relative humidity.) Will operate at High fan speed until the humidity set point is reached. The Fan will then turn off until the humidity level drops below set point.

#### LOW

Operation for quiet, nighttime use or smaller rooms. On Low operation, your humidifier may run without refilling for extended periods. Will operate at Low fan speed until the humidity set point is reached. The Fan will then turn off until the humidity level drops below set point.

#### AUTO

Operation for more precise humidity control. Fan speed will fluctuate between high, low and off to better maintain set humidity

level with the minimal amount of fan noise. While in Auto, you will only be able to mode through humidity settings (40% - 60%). Continuous will be disabled

#### **HUMIDITY - 40%-60% OR CONTINUOUS**


Set the humidity level by pressing the HUMIDITY button until the desired humidification level is illuminated. The humidifier will operate until the desired humidity level is reached. At this point, the Fan will turn off. The Humidity Level indicator light will remain on. If the Fan does not turn on, the humidity setting may be lower than the room humidity level. Increase the humidity set point until the Fan turns on. This is an indication of the level of humidity already in the room. While in Continuous, you will only be able to mode through High and Low fan speeds before unit powers off. Auto mode will be disabled.

# REPLACING WICK

While your humidifier came equipped with a Wick, you will eventually have to replace it, as they last approximately 4–8 weeks, depending on use. Many factors affect the life of the Wicks, including amount of use, water hardness and outside environmental factors. You will know the Wick needs to be replaced when it becomes hard and is no longer absorbing the water effectively. Replace the Wick with a genuine Vornado® Wick. While other brands may fit our units, these wicks do not carry the same quality and life as our own and may diminish the humidifier's performance.

#### REPLACING WICK

- 1. Turn humidifier Off and unplug.
- 2. Remove humidifier body from base by lifting up.
- 3. Remove and discard used Wick
- 4. Install new genuine Vornado Wick by slightly bending the Wick to match curve of unit. Make sure Wick fits flush against bottom and side of humidifier.
- 5. Replace humidifier body. Your humidifier is now ready for use.

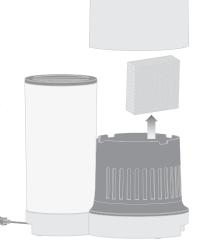

The additional sodium in chemically softened water may cause Wicks to harden. Try using untreated or tap water. Hard water or water with excessive minerals, such as lime or iron, may shorten Wick life. Try Bacteriostat or Water Treatment found at most hardware or home specialty stores or clean the Wick. See CLEANING for instructions.

On first use, the Wick may give off a mild odor. The odor is not harmful and will go away after the first few hours of operation. If the odor is exceptionally strong, you can help eliminate most or all of it by soaking the Wick in a solution of 2 teaspoons of white vinegar and one gallon of water for 20–30 minutes. Rinse thoroughly in cool water. Allow excess water to run off and dry before replacing in the Base. DO NOT wring.

### AUTOMATIC REFILL PROGRAM

1-800-234-0604. Cancel anytime.

Select the shipment interval and Vornado will send replacement Wicks automatically. Eliminate the hassle of remembering to reorder. Maintain the high efficiency of your Vornado humidifier. To sign up, visit vornado.com, email consumerservice@vornado.com or call

Part # MD1-0034

### CLEANING

Proper cleaning of your Evaporative Whole Room Humidifier is essential to the air quality and performance of your humidifier. The frequency in which your humidifier will need to be cleaned will vary depending on use, water hardness and outside environmental factors. It is recommended, assuming average use, to thoroughly clean the unit several times throughout the season, or when algae, mineral deposits or other particles begin to form. **Note:** If the humidifier is turned Off with water in Base and not turned back on for 8 hours or longer, or if humidifier is not cleaned as recommended, you may experience some growth of algae or bacteria. These microorganisms may become airborne.

#### TO CLEAN BASE

1. Turn humidifier Off and unplug.


### Warning: Do not submerge humidifier top in water.

- **2.** Remove humidifier body from base by lifting up.
- **3.** Remove the Wick and Water Tank
- **4.** Unlock wick support frame lock tab by rotating tab counterclockwise. Gently detach wick support frame from the base by releasing the lock

tab located inside the base.

- Empty the Base. Clean Base and wick support frame with warm water and a mild detergent. Rinse and dry.
- 6. Reassemble humidifier. Ensure power cord is locked flat into power cord tab located inside the power head and the wick support frame is locked into base tab.

**Note:** The Base and wick support frame are not dishwasher safe.

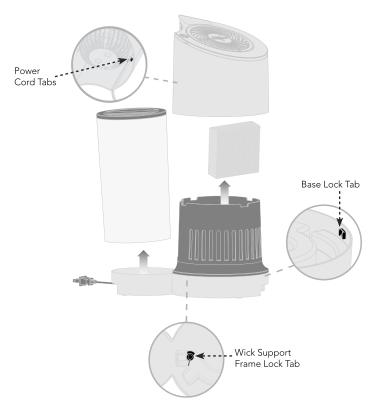

## CLEANING

**Note:** On occasion the Water Tank may need to be wiped down or cleaned to remove build-up of impurities with a mild detergent and cool water. Do not use gasoline, thinners, solvents or other chemicals for cleaning. The Water Tank is not dishwasher safe.

#### TO CLEAN GRILL

**1.** Turn humidifer Off and unplug.

**Note:** Do not use gasoline, thinners, solvents or other chemicals for cleaning.

2. Using a Phillips Head screwdriver, remove screw located at 6 o'clock position inside grill.

- **3.** Twist grill counterclockwise to unlock, then use screwdriver to lift grill.
- **4.** Clean the grill, blade or underside of motor with a soft cloth or with a can of compressed air.
- **5.** Reinstall grill and twist grill clockwise until screw holes align. Replace screw.

#### TO CLEAN WICK

1. To prolong life of Wick, clean Wick by soaking in solution of 1 teaspoon of chlorine bleach and 1 gallon water. Let stand 20 minutes. Rinse thoroughly in cool water. Allow excess water to run off and dry before replacing Wick in Base. DO NOT wring.





# **CLEANING**



#### IN THE EVENT YOU WANT TO DISINFECT THE BASE:

- 1. Mix solution of 1 teaspoon chlorine bleach and 1 gallon water. Fill Base with solution, wet all surfaces. The remaining solution can be used to rinse or soak the wick support frame.
- 2. Let stand 20 minutes, then empty.

**3.** Rinse Base and wick support frame with water until bleach smell is gone. Dry with clean cloth or paper towel. You may also wipe down the entire surface of humidifier with a soft cloth.

# STORAGE

During the off-season or after extended periods of non-use, you may choose to store your humidifier. To ensure long life of the product, it is recommended to store your humidifier by following these instructions:



Cleaning is recommended before storage.

- 1. Unplug power cord and bundle loosely.
- 2. Let humidifier dry completely before storing. Do not store with water inside Water Tank or Base. Remove and discard Wick if it is not suitable for reuse. Do not store humidifier with wet Wick. If Wick is suitable for future use, remove and empty water from Base and Water Tank. Replace Water Tank, power On and select HIGH Fan Speed. Allow humidifer to run until Wick is completely dry.
- 3. Cover, or place back in retail carton if available. This will prevent humidifier from accumulating dust over time.
- 4. Store humidifier in cool and dry location.



Be aware of several things as your Vornado® Evaporative Whole Room Humidifier operates:

- If you operate your humidifier continuously (which is recommended to maintain humidity all day), it may need to be refilled with water every day. Check the Water Tank to be certain that there is an adequate water supply for operation.
- > Allow for optimum airflow by keeping the grill unobstructed. Ensure curtains and other items are far enough away from the unit to not be pulled into the side inlets or interfere with airflow.
- > Any additives, such as aroma fragrances or water conditioners, must not be used. These additives can cause cracks in the plastic of the humidifier and may affect performance. Any use of such additives voids the manufacturer's warranty.



### 😜 DISPOSAL

Dispose of all packaging materials in an environmentally responsible manner.

# TROUBLESHOOTING

### **PROBLEM**

### POSSIBLE CAUSE AND SOLUTION

Unit fails to power on.	Unit is not plugged in. Plug power cord into electrical outlet.
	Household circuit breaker/ground fault circuit interrupter has tripped or blown fuse. Reset circuit breaker/ground fault circuit interrupter, or replace fuse. For assistance, contact licensed electrician.
	Unit is damaged or in need of repair. Cease usage and unplug. Contact Consumer Service for assistance.
Unit makes bubbling or gurgling sound.	This is normal. Water is being dispensed into Base.
Unit is not producing desired amount of humidity.	Water level in Tank is empty or too low. Refill with clean, cool tap water. See HOW TO USE for instructions.
	Unit has reached its set point. When set humidity level is reached, the Fan will turn off until humidity level in room drops below humidity set point.
	Airflow is blocked. Remove obstruction.
	Unit settings are too low. Set to High Fan Speed and Continuous Humidity for maximum humidity output.
Wicks are in need of replacement too often.	The additional sodium in chemically softened water may cause Wicks to harden. Try using untreated tap water or distilled water.
	Try adding Bacteriostat or Water Treatment, found at most hardware or home specialty stores to the water. Or periodically remove the Wicks and clean by soaking them in solution of 1 teaspoon chlorine bleach and 1 gallon water. Let stand 20 minutes. Rinse thoroughly in cool water. Allow excess water to run off and dry before replacing Wick in Base. DO NOT wring.



### WARRANTY

We expect this product to be perfect. If you're not satisfied with this product, let us know.

We're Here to Help 800.234.0604 vornado.com help@vornado.com

Vornado Air LLC ("Vornado") warrants to the original consumer or purchaser this Vornado® Evaporative Whole Room Humidifier ("Product") is free from defects in material or workmanship for a period of five (5) years from the date of purchase. If any such defect is discovered within the warranty period, Vornado, at its discretion, will repair or replace the Product at no cost.

#### For warranty or repair service:

Call 1-800-234-0604 or email help@vornado.com to obtain a Return Authorization ("RA") form. Please have or include your Product's model number and serial number, as well as your name, address, city, state, Zip code and phone number when contacting Vornado for warranty service.

#### After receiving the RA form, ship your Product to:

Vornado Air LLC Attn: Warranty & Repair 415 East 13th Street, Andover, KS 67002. For your convenience, please have your model number and serial number when contacting Vornado with service inquiries. To ensure proper handling, packages must be clearly marked with the RA number. Packages not clearly marked with the RA number may be refused at the receiving dock. Please allow 1–2 weeks for repair and return of your Product after the Product is received.

Repairs not covered by the warranty or outside the warranty period will require a fee to cover the cost of materials, labor, handling and shipping.

This warranty does not apply to defects resulting from abuse of the Product, modification, alteration, mishandling, improper maintenance, commercial use or repair or service of the

Product by anyone other than Vornado; damages which occur in shipment or are attributed to acts of God. Improper product use, which includes using an external device that alters or converts the voltage or frequency of electricity, or shipping a Vornado product to a country not intended for use will void all warranties. Any unauthorized product modification, repair by unauthorized repair center or use of non-approved replacement parts is not recommended and any consequences will not be covered by support services or product warranties. The product warranty will be honored only on models that are being used in the country intended. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. VORNADO SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state. The manufacturer assumes no responsibility for damage or injury caused by failure to follow these instructions, improper product use or unauthorized product modifications. Any such actions will invalidate the product warranty.

All company names and product names are trademarks of their respective owners. ©All rights reserved. All technical information, data and instructions for the installation, connection and operation contained in these instructions for use correspond to the latest available information at time of printing. The contents of this manual may differ slightly from the actual product. Observe any additional supplements.





Vornado Air, LLC 415 East 13th Street, Andover, Kansas 67002 800.234.0604 | vornado.com