

# OWNER'S MANUAL



# TABLE OF CONTENTS

Technical Details		
Important Safety Instructions	3	
Special AIRBELT D Product Features		
ET Power Heads Product Features	5	
Optional DISCO Floor Polisher Product Features		
Optional Attachments, Accessories, Bags and Filters		
Identification of Parts		
Standard Attachments		
Optional Attachments		
Assembly		
Operating Instructions		
Starting the machine with a non-power head attached		
Additional Instructions for starting the machine with a power head attached		
Suction Control		
Adjusting the Telescopic Tube		
Using the Telescopic Tube, Hose & Attachments		
Bag Full or Clog Indicator & Auto Shut-off		
Retracting the Cord		
LED Suction Power Indicator		
Storing the Vacuum	10	
Use and Maintenance of Brushes and Heads		
The Parquet Brush		
The Optional Premium Parquet Nozzle		
The Optional Kombi Nozzle		
The Optional Turbo Nozzle		
Vacuum Maintenance		
Changing the Filter Bag		
Changing the AIRBELT		
Changing the Motor Filter		
Changing the Hospital-grade Micro Filter		
Clog Removal		
Clogs in the Head or Brush		
Clogs in the Telescopic Tube		
Clogs in the Hose		
Clogs in Entrance to Filter Bag		
Trouble-Shooting Guide		
Warranty		
How To Contact SEBO	10	

# TECHNICAL DETAILS

Vacuum motor 1250 watts (12 amps)

Water lift (at motor) 95 inches
Airflow (at motor) 120 CFM
Filter bag capacity 1.5 gallons
Sound level 61 dBA
Body weight 15.9 lbs

Motor protection Thermal cut-out

Cord length 40 feet Range 50 feet

Technical details may be subject to change.

#### IMPORTANT SAFETY INSTRUCTIONS

#### READ ALL INSTRUCTIONS BEFORE USING THIS MACHINE

#### When using an electrical appliance, basic precautions must always be followed.

To reduce the risk of electric shock, this vacuum cleaner has a polarized plug; one blade is wider than the other. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way. Connect only to the outlet type specified on the serial number plate underneath the machine.

#### **SAVE THESE INSTRUCTIONS.**

## WARNING: To reduce the risk of fire, electric shock, or injury:

- 1. Do not leave vacuum while plugged in. Unplug from outlet when not in use and before servicing.
- 2. Do not use outdoors or on wet surfaces.
- 3. Do not use near small children or pets. Do not allow to be used as a toy. Use of this product by children should always be supervised by an adult.
- 4. Use only as described in this manual. Use only manufacturer-recommended attachments.
- Do not use with a damaged cord or plug. If vacuum is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a SEBO service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners.
   Do not run vacuum over cord. Keep cord away from heated surfaces.
- 7. Do not unplug by pulling on cord. To unplug, grasp the plug not the cord.
- 8. Do not plug in if switch is in the "+" (ON) position.
- 9. Do not use outlets above counters to plug in vacuum damage to items in the surrounding area could occur.
- 10. Always carry the vacuum over steps and sills.
- 11. Do not handle plug or vacuum handle with wet hands.
- 12. Do not put any object into vacuum openings. Do not use machine with any openings blocked. Keep openings free of lint, hair, and anything that may reduce air flow.
- 13. Do not re-use filter bags or wash the filters.
- 14. Do not remove any screws from vacuum.
- 15. Do not vacuum up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- 16. Do not use vacuum without filter bag and/or filters in place.
- 17. Turn off all machine controls before unplugging.
- 18. Use extra care when cleaning on stairs.
- 19. Do not use machine to vacuum up flammable or combustible liquids such as gasoline or use in areas where they may be present.

- 20. Machines can cause a fire when operated near flammable vapors or materials. Do not operate this vacuum near flammable fluids, dust or vapors.
- 21. Maintenance and repairs must be done by qualified personnel.
- 22. Use only original SEBO replacement parts.
- 23. Do not use vacuum as a step.
- 24. If vacuum is used on plush carpet or carpet with thick padding, do not leave machine standing in one place with machine turned on.
- 25. While the vacuum is in use, the power cord should be unwound from the cable reel at least two thirds of its length. Hold plug when rewinding onto the cord reel. Do not allow plug to whip while rewinding.
- 26. Keep hair, loose clothing, fingers, and all parts of body away from vacuum openings and moving parts. Do not place fingers or other body parts under vacuum unless it is unplugged.
- 27. Do not place the power head over rug or carpet edges.
- 28. The vacuum has a manual reset thermal protector. The protector is reset by switching off the vacuum. The thermal protector needs some time to cool down after switching off! Check the vacuum for air blockages or mechanical failures before switching on.
- 29. Store the vacuum in a dry place at room temperature. When the vacuum is not in use, you should rewind the cord onto the cord reel.
- 30. Any other servicing should be performed by an authorized service representative.
- 31. The hose contains electrical wires. Do not use if damaged, cut, or punctured. Avoid picking up sharp objects.
- 32. Always unplug vacuum before connecting or disconnecting either hose or power head.
- 33. Use a SEBO power head only in combination with a SEBO vacuum cleaner.
- 34. Do not connect power head to a malfunctioning or damaged vacuum.

#### SEBO AIRBELT D4 PRODUCT FEATURES

The SEBO AIRBELT D4 is equipped with many extras that will make your life easier! Its "suction-optimized" airflow pathway, together with its one-of-a-kind tapered-hose technology, provides ultraquiet operation and amazing suction power. And the ergonomically designed handle offers unmatched user comfort and smooth operating maneuverability. Every detail expresses the highest quality, modern design, reliability, and the standard features SEBO customers throughout the world have come to expect, such as:

- SEBO's patented AIRBELT Bumper Guard.
- A power head with amazing steering ability and easy brush roller removal
- An adjustable telescopic tube with internal power cord.
- Long-lasting motor life, which is further extended by its softstart switch.
- S-class, hospital-grade filtration, which is excellent for users with allergies or asthma.
- Available in three colors: black, red and white.
- A generous five-year warranty on both labor and all non-wear parts.

SEBO Vacuums Save Money! – SEBO vacuums are the highest quality machines available. In fact, if properly maintained, SEBO vacuums can save ordinary residential users hundreds of dollars by providing excellent performance for ten to fifteen years or more. Typical vacuums perform poorly and usually do not last beyond two years. So, in the long run, SEBO vacuums cost less money than the five to six other vacuums purchased during that time period.

**Outstanding Warranty Coverage** – SEBO is confident about the quality of all its vacuums. Therefore, all models include a five-year warranty on the motor and all non-wear parts.

Bag Full or Clog Indicator & Auto Shut Off – The "BAG FULL OR CLOG" indicator (located on top of the canister near the ON/OFF power control knob) will turn orange and the machine will automatically shut off when it senses a full bag, a clog in the airflow pathway, or an excessively dirty micro filter. If the user



ignores this warning, the suction motor will heat up due to the lack of cooling provided by the airflow. Once the motor reaches a certain temperature it will shut off to protect itself from damage. The user should turn the switch off, unplug the machine and immediately insert a new bag or remove the clog (to remove a clog, refer to the Clog Removal section on page 13). After approximately 30 minutes, the motor will have cooled and the vacuum can be restarted.

**High-quality Telescopic Tube and Hose –** On the AIRBELT D4, the power cord is built inside the telescopic tube and suction hose. This eliminates unsightly external wires and enables unobstructed and convenient handle height adjustment.

Variable Power Control on Handle – The vacuum's suction power can be adjusted from 0 to 1,250 watts by a slider switch conveniently located on the handle.



**Comfortable Ergonomic Handle** – The AIRBELT handles are ergonomically designed and positioned to reduce wrist and arm fatigue. For extra comfort, an additional swivel is built into the handle-to-hose connection.

**Quick-release Connections** – The AIRBELT D4 models allow for quick and convenient connection of telescopic tubes, power brush heads, accessory cleaning heads and on-board tools.

**LED Suction-power Indicator** – The indicator tells the user with a glance how much suction power they are using. The light rotates slower or faster depending on the suction setting.



Powerful Vacuum Motors Provide Excellent Cleaning – The canister suction motor is 1250 watts, and the ET-1 power head motor is 175 watts, for a total of 1,425 watts. The ET-2 power head is 200 watts for a total of 1450 watts.

**320-Degree Rotating Hose** – A brilliantly designed hose-to-canister connection allows 320-degree rotation of the suction hose, providing easier user movement and machine maneuverability.



Shock Absorber Provides Furniture and Wall Protection – The patented "AIRBELT" bumper that surrounds the D4 canister acts as a protective barrier. The soft foam bumper with its durable covering protects furniture, walls and the vacuum itself from damage during use.




**Personalized Vacuums –** AIRBELT canister vacuums can be personalized with a replacement AIRBELT bumper cover available in eight patterns and colors.

**Rubber Coated Wheels and High Quality Castors** – The quality of the wheels and castors on SEBO canisters prevent damage to floors and rotate 360° for easy maneuverability.



Large Operating Range – A 40-foot cord with a 50-foot cleaning radius saves time because it minimizes the number of electrical outlets needed during use.



Three Full-Size On-board Tools and Parquet Brush – The vacuum comes standard with a crevice tool, dusting brush and upholstery nozzle which are conveniently stored on the vacuum. Also included with the D4 is the Parquet Brush for gently cleaning hard floors. It is lightweight with soft bristles, so it glides gently over floors. Many optional accessories are also available.





#### SEBO AIRBELT D4 PRODUCT FEATURES

Liberation from Bagless! SEBO Bags are Hygienic – The three-layer filter bag is an integral part of SEBO's filtration system because it effectively contains nearly all dirt captured by the vacuum. SEBO bags can be sealed when full, so no dust can escape into the air during disposal. In



contrast, a lot of dust becomes airborne when emptying the dirt containers of bagless vacuums, and their micro filters quickly clog and must be replaced often, or a loss of suction will occur. Bagless vacuum micro filters are expensive, usually costing much more than SEBO's filter bags.

A Huge 1.5-Gallon Filter Bag – The large-capacity filter bag is convenient and economical because fewer bag changes are needed. Micro Filters are Inexpensive and Easy to Change – Unlike most other vacuums, SEBO's replacement micro filters are reasonably priced and can be easily changed in seconds, without any




tools. And the micro filters last a long time before replacements are necessary because nearly all dust particles and debris are first captured by the three-layer filter bags.

Anti-allergy Hospital-grade, S-class Filtration – An excellent choice for users with allergies or asthma. Certified by leading Allergy foundations in Europe, the AIRBELT D4 vacuums provide the user with S-Class filtration of 99.9% of particles to 0.3 microns.



This is accomplished by the SEBO three-step filtration system. First, the three-layer full-size filter bag (a) collects the vast majority of the debris. Then, the remainder of the particles are collected by the motor filter (b). Finally, the hospital-grade micro filter (c) cleans the exhaust air that the vacuum emits. The AIRBELT (d) disperses the filtered exhaust air around the canister which provides quiet, gentle air flow. SEBO's unwavering attention to the complete sealing of the machine ensures no dirt escapes around the microfilters.

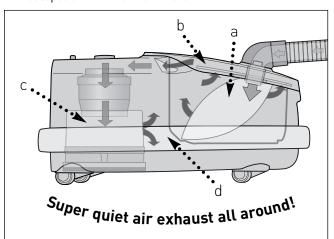

Effective Pet Hair Removal – All SEBO vacuums easily remove pet hair.

Remarkably Quiet Operation -Intelligent design and highquality motors combine to provide amazingly quiet vacuums.



# ET Power Heads - Designed for All Floor Surfaces.

Deep clean your carpet with a SEBO ET power head. SEBO power heads are virtually maintenance free, and their electronic overload protection feature extends belt life by automatically shutting off power, if a brush roller jams. These power heads deliver cleaning flexibility because their brush action aggressively cleans carpeting, and the brush may be switched off to clean hard floors and delicate rugs. The steering ability of the swivel necks help to easily clean around obstacles, and their L-shaped heads provide maneuverability around furniture and under cabinets. They also have brush height and brush wear warning lights.



Cleaning Dimensions – The ET-1 power head is 12-inches wide, with a cleaning with of 10 %-inches, and the ET-2 is 14 %-inches wide, with a 13-inch cleaning width.


**Brushless Cleaning Capability** – The ET-1 or ET-2 power heads can provide gentle, brushless cleaning of delicate rugs or hard floors because the brush roller may be switched off, but suction will continue.

Brush Obstruction Light & Auto Shut Off – If an obstruction becomes jammed in the brush roller, a warning light will quickly flash, the brush roller will immediately stop spinning and the vacuum will shut off. The user should turn the power switch off, unplug the machine, and immediately remove the



obstruction. If the user restarts the machine without removing the obstruction, the power head will again shut off and the amber light will turn on. This prevents the belt from breaking and protects the motor from damage.

Incorrect Height Setting or Brush Deterioration Light – To ensure optimum cleaning at all times, a warning light will illuminate to indicate when the brush height is set too high for effective cleaning, or when the brush roller should be replaced due to excessive wear.



Four-level Manual Brush Height Adjustment – The brush height can be adjusted up or down for optimum cleaning.

Both Carpet and Hard Floor Cleaning – With a power brush to clean carpets and a parquet nozzle to clean hard floors, the AIRBELT D4 provides all the flexibility needed to care for a variety of floor surfaces. The D4 vacuum can morph into a hard floor polisher, by adding a SEBO DISCO head.

#### SEBO DISCO FLOOR POLISHER - OPTIONAL FOR THE AIRBELT D4

#### Polish your hard floor with a SEBO DISCO Ultra-High-Speed floor polisher!


The SEBO DISCO (13" wide, 11 %" polishing width) - It's never been easier to make hard floors shine! The SEBO DISCO floor polisher can both vacuum and polish, for a super-gloss finish. It can be attached to the FELIX uprights or to the AIRBELT canisters. Its suction removes fine dust (dust from fully dried floor polishing product) during polishing, and the 2,000 rpm disc speed will create a high-gloss shine for a fantastic hard floor finish.

#### **DISCO FEATURES:**

SEBO floor pad - Brilliance at work. The SEBO floor pad has been developed to achieve the optimum polished finish on all suitable surfaces. In addition, the floor pad is easy to change and maintain.



Automatic height adjustment - Every hard floor is different. The SEBO DISCO adjusts the floor pad automatically to different floor conditions. The torque of the rotating floor pad is constantly measured for best adjustment. A vacuum seal around the base of the



polisher ensures that even the finest dust gets drawn into the intake flow.

Automatic shut off - Intelligent safety. The SEBO DISCO is a smart machine. The green LED light indicates that the SEBO DISCO is operational and everything is ok. The red LED light comes on if the machine has shut down for safety reasons, for example if there is a blockage



A Soft Bumper - Care everywhere. Every room has obstructions. That is why the SEBO DISCO has a soft bumper. Furniture and walls are protected against scratches and marking.



A highly maneuverable swivel neck and three castor design - glides over the floor. Three high quality castors support the SEBO

DISCO. At the rear are two 360° flexible castors which are fixed on a solid steel shaft. A castor in the middle helps the SEBO DISCO to stay on the right track. Working with the flex neck, they give the SEBO DISCO its supreme maneuverability. The castors are rubberized to prevent skidding and to protect the floor.



Immediate retention of polishing dust by the suction unit.

Reinforced drive disc that provides optimal floor contact and a speed of 2,000 rpm.









SEBO DISCO Black Part #9433AM

## OPTIONAL ATTACHMENTS, ACCESSORIES, BAGS & FILTERS

In addition to the standard on-board tools, a variety of optional attachments are available. The nine-foot extension hose (extends suction hoses) and the 20-inch extension tube are very popular because they create useful tools for cleaning stairs and out-of-reach areas. These two items are sold separately or as part of multiple item attachment kits. Another popular attachment is the hand-held turbo brush for removing pet hair from upholstery and stairs. See page 10 for more information on the Premium Parquet, Kombi and TT-C Turbo Nozzles.

SEBO filter bags can be purchased in boxes of eight and filters are sold as a set. SEBO bags, filters and accessories are reasonably priced and widely available.

To create a fresh scent while vacuuming, "SEBO FRESH" is available. To use, deposit a scented stick in the filter bag.













TT-C Turbo Nozzle

Premium Parquet Nozzle

Kombi Nozzle

Wall & Floor Brush

Flat Upholstery Nozzle

Hand-held Turbo Brush

Radiator Brush











6

SEBO FRESH

Filter Bags


Filters

Extension Tube

Nine-foot Extension Hose

#### IDENTIFICATION OF PARTS


- 1. Handle grip
- 2. Power control slider
- 3. Handle release button
- 4. Slide Button
- 5. Telescopic tube
- 6. On/Off button
- 7. Cable rewind button
- 8. LED suction-power indicator
- 9. Tool release button
- 10. Kombi nozzle (optional)
- 11. Hose
- 12. Bag full or clog indicator
- 13. Hose neck release tabs



- 14. Hose neck
- 15. Cover release catch
- 16. Carrying handle
- 17. AIRBELT shock absorber
- 18. Filter bag cover
- 19. Suction opening
- 20. Parking groove
- 21. Power cable
- 22. Dusting brush
- 23. AIRBELT clip
- 24. Upholstery nozzle
- 25. Crevice nozzle
- 26. Carrying/Parking groove
- 27. Micro filter holder



- 22. Dusting brush 25. Crevice nozzle
- 24. Upholstery nozzle 28. Parquet brush

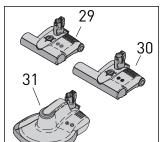


#### Standard & Optional Power Heads

- 29.ET-1 Power head Standard on Premium D4 Black and Premium D4 White Optional for D4 Red: Part #9299AM
- 30. ET-2 Power head Optional for D4 Red: Part #9250AM
- 31. DISCO Optional for all D4 vacuums

Black: Part #9433AM White: Part #9430AM

## Optional Brushes, Heads & Attachments

- 32. Premium Parquet nozzle Part #7200DG
- 10. Kombi nozzle Part #7260DG
- 33. TT-C Turbo brush Part #6780ER
- 34. Straight tube (20 in.) Part #1084HG
- 35. Hand-held Turbo brush Part #6179DA
- 36. Wall and floor brush Part #1325HG
- 37. Flat Upholstery nozzle Part #1090HG
- 38. Extension hose (9 feet) Part #1495AM
- 39. Radiator brush Part #1496DG
- 17. AIRBELT Available in several colors and patterns - Part #6047AM/01-08




## Filters & Filter Bags

- 40. Filter Bag Filter Box D incl. 8 filter bags -Part #8120AM
- 41. Hospital-grade Micro Filter
- 42. Motor Filter Micro Filter Box incl. 1 micro filter and 1 motor filter -Part #8191AM

## **ASSEMBLY**


Push the neck (14) of the hose (11) into the suction opening of the canister (19). When all four notches are lined up correctly, the neck will snap firmly into place. To release the hose from the suction opening, squeeze the release tabs (13) on both sides of the neck of the hose (14), and pull the neck out.

Connect the handle grip (1) to the top of the telescopic tube (5). Snap in place. To release the telescopic tube (5) from the handle grip, push the handle release button (3) and slide the handle out.

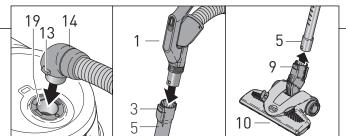

Attach the head or brush to the bottom of the telescopic tube (5). Insert the bottom of the telescopic tube into the neck of the head or brush (10) until it locks into place; or line up the square hole in the telescopic tube with the notches in the front of the neck, and snap firmly into place. To release a head or brush from the telescopic tube (5), push the head release button (9), and pull the head or brush tool off the end of the telescopic tool. The release button (9) is in the same position on all of the heads, brushes and power heads.

NOTE: To attach a SEBO power head (ET-1, ET-2 or DISCO) to your D4 canister, please refer to your power head owner's manual for instructions. Attaching incorrectly could cause damage!

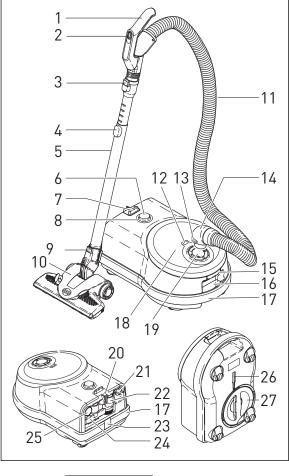


#### OPERATING INSTRUCTIONS

#### Starting the machine with a non-power-head attached - Figures 1, 2 & 3

Before turning on your canister, make sure that you have a firm hold on the handle grip to keep the machine from moving forward.

- 1. With the canister On/Off button (6) in the OFF position, and the power control button (2) on the handle grip (1) in the OFF (-) position, grasp the plug and pull the power cord (21) out from the power cable recess (figure 3). The power cord (21) should be unwound from the cable reel at least two thirds of its length. **Note:** do not over-extend the cord.
- 2. Plug the polarized power cord into a 120 volt wall outlet located near the floor.
- 3. Press the canister On/Off button on the base of the canister (6) gently with your foot or hand. The blue light around the button (8) will blink right and left indicating that the power is on. Your SEBO AIRBELT D4 has a soft-start system for longer component life. This may delay starting slightly.



Continue to page 9.

# Additional instructions for starting the machine with a power head attached - Figures 1, 2, 3, 4, 5 & 6

#### Please refer to your ET or DISCO power head owner's manual for more information.

Before turning on your canister, make sure that the vacuum handle is in its **upright locked position** (figure 4). **Follow steps 1-3 above.** 

When the power head is switched on with the handle in the upright locked position (figure 4), the brush roller on the power head will not spin.

To release the power head from the upright locked position, press down on the foot pedal (#43, figure 5) and lower the handle into the normal operating position. Push the brush roller button on the top of the power head (#44, figure 6) to engage the brush roller. The green light on the power head will illuminate.

When the canister On/Off button (#6, figure 1) is in the ON position, you may turn the power head off and on using the power control button (#2, figure 2) on the handle. To turn the power head off using the power control button on the handle, push the minus (-) button until the suction stops. The green light (44) on the power head will then shut off. The blue light (8) on the canister will remain illuminated until the vacuum is powered off using the On/Off button on the canister (6).

Always turn the power off on the canister AND the power head when changing heads or unplugging the vacuum. Press the minus (-) on the power control button (2) on the handle grip until the suction stops, press the On/Off button (6) on the base of the canister gently with your foot or hand, then unplug the canister to completely shut down the power when changing heads or storing the vacuum.

Continue to page 9.

WARNING! The quality, condition, coating, texture, age and manufacturing technique of all floor surfaces vary. Therefore, vacuums with rotating brushes, including your SEBO, may damage some floor coverings or surfaces. Some types of high-gloss hardwood floors, cushion vinyl, berber carpets, long shag, and delicate or hand-woven carpets are particularly vulnerable to damage by rotating brushes. When possible, consult the materials supplied by your flooring manufacturer for information on proper upkeep and cleaning. To ensure that your new SEBO vacuum cleaner is compatible with your floor, please test the vacuum cleaner on each type of flooring surface in a small inconspicuous area to determine if any damage occurs. If damage occurs, stop using the vacuum cleaner immediately!

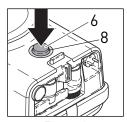


Figure 1




Figure 2



Figure 3




Figure 4

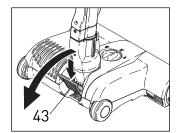


Figure 5

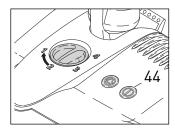


Figure 6

#### **Suction Control - Figure 7**

The suction power will automatically increase from standby to maximum power after the machine is switched on. You can override this process by pressing the plus (+) or minus (-) on the power control button (2) conveniently located on the handle grip (1). Press the plus on the button for maximum suction or press the minus to reduce suction for vacuuming curtains or delicate fabrics. You may adjust the suction control with the power control button (2) as you vacuum different surfaces or when using the accessory tools. For optimal cleaning and brushing, operate the machine at the maximum suction power setting and push the head slowly over the carpet.

# **0**2 **max.**1

Figure 7

#### Adjusting the Telescopic Tube - Figure 8

Adjust the telescopic tube (5) to the correct height by pushing the slide button (4) and gently pulling the tube out to lengthen, or pushing it in to shorten. Release the slide button (4) to lock the tube to the adjusted height.

The handle can be lowered to a horizontal position useful for vacuuming under beds.




Figure 8

#### Using the Telescopic Tube, Hose & Attachments - Figures 9, 10 & 11

The telescopic tube (5) is useful for vacuuming corners and hard-to-reach areas. You may use the telescopic tube without a brush, power head or attachment. To remove a brush or power head, switch off the canister On/Off button (6) and unplug the vacuum. Then, press the tool release button (9) and pull the tube out. The crevice nozzle (25), dusting brush (22), upholstery nozzle (24) and parquet brush (28) may be inserted onto the end of the tube. It is not necessary to turn off the vacuum while switching the **standard** attachments (the crevice nozzle, upholstery nozzle or dusting brush). After use, switch off the power, unplug the vacuum and remove attachment. Re-insert the telescopic tube into the power head or brush, turning the tube if needed, until you hear it click into place.

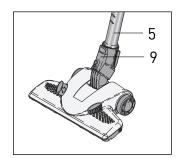


Figure 9

# NOTE! D4 users with power heads, please refer to your power head user's manual for more detailed instructions for connecting your power head.

To use the hose and handle grip without the telescopic tube, switch off the canister On/Off button (6) and unplug the vacuum. Push the handle grip release button (3) and pull the HANDLE GRIP out of the end of the telescopic tube. Do not try to separate the hose from the handle! Insert the crevice nozzle (25), dusting brush (22) or upholstery nozzle (24) onto the end of the handle. It is not necessary to turn off the vacuum while switching the **standard** attachments (the crevice nozzle, upholstery nozzle or dusting brush). After use, switch off the power, unplug the vacuum and remove the attachment. Re-insert the handle into the telescopic tube making sure it is seated correctly and snap it into place.

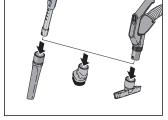


Figure 10

The three standard attachment tools are stored in the rear of the machine. Make sure they snap into place firmly. The dusting brush (22) has a rotating head. If it is not fitting into its storage space, rotate the head to another position.

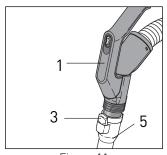



Figure 11

#### Bag Full or Clog Indicator & Auto Shut-Off - Figure 12

When the "BAG FULL OR CLOG" indicator (located on top of the canister (12) turns orange, airflow is reduced due to a full bag, a clog in the airflow pathway, or an excessively dirty filter. Turn the power off, unplug the machine and immediately insert a new bag (see page 11) or remove the clog (see page 13).



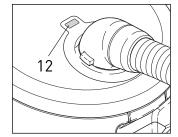


Figure 12

Vacuuming fine dust may require an earlier filter bag change even though the filter bag is not full. Fluff may overfill the bag without the light coming on.

The bag full indicator works more efficiently at full power. Check the bag full status regulary at full suction power.



#### Retracting the Cord - Figure 13

To retract the cord, switch the vacuum off, unplug it from the outlet, then press the cord rewind button (#7, figure 13) and the mechanism will automatically rewind the cord. You must hold the button down until the cord is fully rewound. Hold plug while rewinding into the cord wheel. Do not allow the plug to whip while rewinding. The rewind mechanism will stop automatically when you release the button. Before rewinding the cable, always switch off and unplug the vacuum.





Figure 13




## LED Suction-Power Indicator - Figure 14


Your AIRBELT D4 canster features an LED light display (8) that monitors suction power. It is located around the ON/OFF power control knob (6). When the canister power is switched on, a blue light will blink right and left. As the suction increases, the lights will rotate around the ring. The faster the rotation, the higher the suction.

Figure 14

#### Storing the Vacuum - Figures 15, 16 & 17

The vacuum can be stored with the canister in a horizontal or vertical position. The standard Parquet brush has a parking tab located on the back of the neck. The optional Premium Parquet, Kombi and Turbo nozzles have a parking tab located on the front of the neck (45). Insert the parking tab into the upper side of the parking groove and slide down firmly. For vertical storage or for easy carrying, use the parking slot on the underside (26). For horizontal storage, use the parking slot on the end of the canister (21).

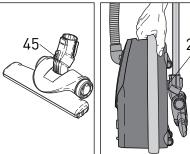






Figure 15

Figure 16

Figure 17

## USE AND MAINTENANCE OF BRUSHES & HEADS



Always unplug vacuum from outlet before dismantling any part of machine! To remove a brush or power head, switch off the power and unplug the vacuum. Then, press the tool release button (9) and pull the tube out.

NOTE! D4 users with ET-1, ET-2 or DISCO power heads, please refer to your power head user's manual for more detailed instructions for operating and maintaining your power head.



Figure 18

#### Parquet Brush (standard) - Figure 18

The D4 comes with a parguet brush (28) that was designed specifically for vacuuming hard floors. It is lightweight with soft bristles, so it glides gently over floors and provides easy maneuverability. Fibers and hair can be pulled out of the bristles manually, or vacuum the bristles with the telescopic tube.





Figure 19

## Premium Parquet Nozzle (optional) - Figure 19

The Premium Parquet nozzle (32) is especially designed for use on hard surfaces. The brush should be cleaned regularly. Remove the parquet nozzle from the telescopic tube to clean. Fibers and hair can be pulled out of the bristles manually, or vacuum the bristles with the telescopic tube. The brush strips are removable for cleaning and replacement.



### Kombi Nozzle (optional) - Figure 20

The Kombi nozzle (10) is adjustable for carpet or hard floors. To set for carpet, slide the up arrow button (46) to the right until it clicks into place. The hard floor dusting brush will raise up allowing the head to move over the carpet. To set for hard floors, slide the down arrow button (47) to the left until it clicks into place. The brush will lower to gently sweep your floors. The slider in Figure 20 is set in the position for hard floors. Remove the Kombi nozzle from the telescopic tube to clean. Fibers and hair can be pulled out of the bristles manually, or vacuum the bristles with the telescopic tube. The brush strip is removable for cleaning and replacement.




Figure 21

## Turbo Nozzle (optional) - Figure 21

The Turbo nozzle (33) has an air-driven rotating brush for gentle brushing of carpets. The Turbo nozzle can be adjusted for high and low pile carpet. To adjust the head for high pile carpet, push the slider button (48) to the right. For low pile carpet, push the slider button (48) to the left. The slider in Figure 21 is set in the low pile position. Remove the Turbo nozzle from the telescopic tube to clean. Remove fibers and hair from the brush manually.



# Always unplug vacuum from outlet before dismantling any part of machine!

#### Changing the Filter Bag - Figures 22, 23, 24, 25 & 26

To change the filter bag (40), switch off the power and unplug the vacuum. Lift the cover release catch (#15, figure 22) and raise the filter bag cover (18). Seal the filter bag with the sealing cap (49). Lift the filter bag out of the holder by tilting the green collar (50) up and pulling it out of the holder as shown in figure 23.

Insert the green collar of a new filter bag down into the filter bag holder vertically as shown in figure 25. Line up the tabs (#52, figure 24) with the slots on the green collar (#51, figure 26) and gently push the collar down flat until the center U-shaped clip (#53, figure 24) moves all the way forward. Close the cover, making sure it snaps shut completely. Do not re-use the filter bags.

The "bag full or clog" indicator works correctly only at full power. Check the status of the filter bag regularly at full power.

**Note:** The nature of the contents of the filter bag will affect the point at which it needs changing. Fine dust may require an earlier change even though the bag is not full. Fluff or hair allows air to pass through easily, so the filter bag may over fill before the "bag full" indicator turns orange.

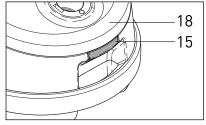


Figure 22

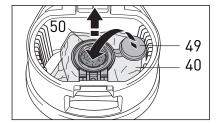


Figure 23

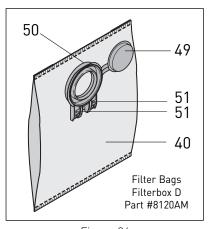


Figure 26

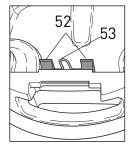


Figure 24

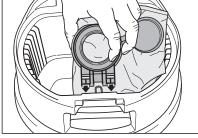


Figure 25

#### Changing the AIRBELT - Figure 27

If damage occurs to the AIRBELT cover, it will need to be replaced. To remove the AIRBELT (7), pry off the clip (23) by inserting the tip of a slot-head screw-driver under the bottom side of the clip. Push outward carefully on the screw-driver until the clip pops off. Grasp the end of the AIRBELT cover (7) and pull the AIRBELT cover will peel off. The foam bumper (54) remains on the vacuum. To replace the AIRBELT, insert the side ribs of the AIRBELT into the grooves (55). Start at the back, insert the rib of the AIRBELT cover into one groove (55), and while holding it down, stretch the AIRBELT cover around the foam (54) into the opposite groove (55). Continue around the vacuum. Secure the ends with the clip (23).

SEBO AIRBELT covers are available in a variety of colors and patterns. See your SEBO dealer for available selection.

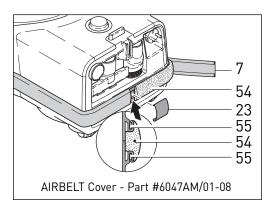


Figure 27

**Note:** Never operate the vacuum with incorrectly attached filters or without filters, bag, AIRBELT or filter bag housing cover (18). Do not re-use filter bags. Do not wash and re-use filters.

#### Changing the Motor Filter - Figures 28 & 29

The motor filter (42) needs to be changed when it becomes extremely dirty or clogged. To remove the motor filter, switch off the power and unplug the vacuum. Lift the cover release catch (#15, figure 28) and raise the filter bag cover (18). Pull the filter (42) out by grasping the rubber rim (#57, figure 29) of the filter and pulling it out of the groove (#56, inset, figure 29) that holds it. Fit the new filter into the groove and push the rubber rim snugly into the groove all the way around the filter edge. Do not leave any loose edges. Close the filter bag cover making sure that the cover release catch snaps back into place.




Figure 28


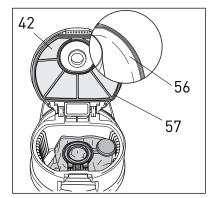


Figure 29

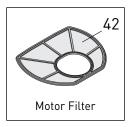

#### Changing the Hospital-grade Micro Filter - Figures 30, 31, 32 & 33

After 10 to 20 bags have been used, change the micro filter (41). To remove the microfilter, switch off the power and unplug the vacuum. Press the release button (58) located on the filter holder (27) as shown in figure 30. While holding the button in, rotate the holder counter-clockwise and pull it out. Remove the filter (41) from the filter holder (27) by pulling the rubber strip (#59, figure 31) away from the notches (60) that hold it onto the base of the filter holder then pulling the filter off. Fit the new filter down over the holder, lining up the notches (60) on the holder with the holes (61) in the red rubber strip. The two tabs located on the indented portion of the red filter rim hook onto the holder rim (see position #62, figure 32). Tuck the peak of the filter down as shown in figure 31. Insert the assembly back into the machine and turn the holder cover clockwise (figure 33). It is not necessary to press the release button to close the filter holder.


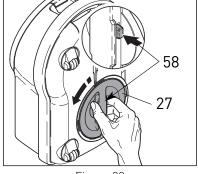


Figure 30



60 60

Figure 31

62

Figure 32

61



Figure 33



D Filter Set - Motor Filter and Hospital-grade Micro Filter - Part #8191AM

Note: Never operate the vacuum with incorrectly attached filters or without filters, bag, AIRBELT or filter bag housing cover (18). Do not re-use filter bags. Do not wash and reuse filters.

#### CLOG REMOVAL



# Always switch off power and unplug vacuum from outlet before removing any clogs!

NOTE! D4 users with ET-1, ET-2 or DISCO power heads, please refer to your power head user's manual for more detailed instructions for removing clogs in your power head.

If the "bag full or clog" warning indicator (12) remains orange after the filter bag has been changed and the filters are in good condition, there is likely a clog in the system

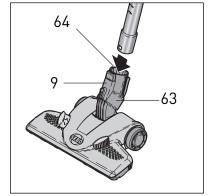


Figure 34

#### Clogs in the Head or Brush - Figure 34

Clogs in the swivel neck (63) of a head or brush can be cleared by first pressing the tool release button (9) and removing the brush or head. Check inside the swivel neck channel (64), and clean out pathway.

#### Clogs in the Telescopic Tube - Figure 35

Remove head from telescopic tube (5) by pushing the tool release button (9) and pulling the tube out. Remove the handle grip (1) from the top of the telescopic tube by pushing the handle grip release button (3). A stiff wire or stick can be used to push the clog out of the tube.



Check for suction at the end of the hose by removing the handle grip (1) from the telescopic tube (5) and putting your hand over the handle grip suction opening (65). Turn the power on and slide the suction up to full power. If you feel reduced suction, the blockage is in the hose.

If the blockage is in the hose, there are two ways to clear it:

- 1. With the telescopic tube disconnected from the handle grip (1), hold the hose upright with one hand blocking the handle grip suction opening (65) and switch on the machine with full suction power. If necessary, quickly lift your hand on and off the end of the hose. If that does not clear the clog, you may also clear clogs by reversing the hose see #2 below.
- 2. With the power off, remove the hose neck (#14, figure 36) from the suction opening (19) by squeezing the two release buttons (13). Remove the handle grip (1) from the telescopic tube (figure 37) and insert the handle end of the hose (1) into the suction opening (figure 38). Note: the handle will not fit snugly into the suction opening. Then, hold the hose upright with one hand blocking the hose neck end and switch on the machine at full suction power. If necessary, quickly lift your hand on and off the neck end of the hose (figure 38). After the clog is removed, replace the hose in the correct position.

Note! Do not insert a wire or stick into the hose. Doing so may cause damage to the hose.

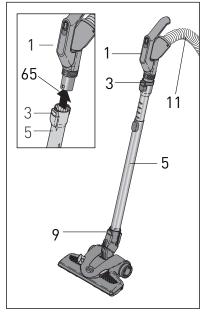


Figure 35


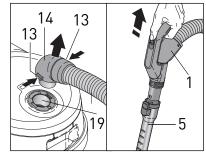


Figure 36 Figure 37

## Clogs in Entrance to Filter Bag - Figure 39

Remove hose neck (14) from vacuum cleaner (see figure 36), open the filter bag cover (see page 11) and clean out entrance to bag (66).

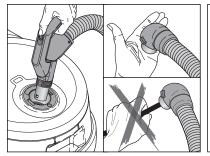

66

Figure 38

Figure 39

# TROUBLE-SHOOTING GUIDE

# ! Always unplug vacuum from outlet before dismantling any part of the machine!

DDOD! EM	DEACON	COLUTION
PROBLEM	REASON	SOLUTION
Does not turn on	1. Telescopic tube not inserted properly.	1. See page 7.
	2. Not plugged into working outlet.	2. Use another outlet.
	3. Cable worn.	3. Replace cable.
	4. The power control button switch is set to "-" ("off" position).	4. Set power control button to "+" position. See page 9.
Bag full or clog light on Bag full or clog light on	1. Bag full.	1. Replace filter bag. See page 11.
& machine shuts off	Clog in hose, telescopic tube, brush or head, or entrance to filter bag.	2. See Clog Removal on page 13. Users with clog in power head attachment: refer to clog removal in the ET-1, ET-2 or DISCO owner's manual.
	3. Hospital-grade micro filter dirty.	3. Replace hospital-grade micro filter. See page 12.
	4. Motor filter dirty.	4. Replace motor filter. See page 12.
Does not pick up	Hose/handle assembly not correctly inserted.	Re-insert hose/handle assembly making sure that it is lined up properly and is snapped into place. See page 7.
	2. The power control button switch is set to "-" ("off" position).	2. Set power control button to "+" position. See page 9.
	3. Filter bag cover not closed.	3. See below.
Filter bag door won't fully close	1. Filter bag cover not fully closed.	1. Re-insert bag. Lock the cover down firmly. See page 11.
	2. Bag not inserted properly.	Re-insert bag. Lock the cover down firmly. See page 11.
	3. Motor filter not properly inserted.	3. Remove the filter bag cover (18) and make sure the motor filter is seated firmly in place all the way around the rim. See page 12.

## AIRBELT D4 SCHEMATIC AND PARTS LIST

## Premium D4 - Black (Onyx) Premium D4 - White 90640AM 90630AM D4 - Red 90641AM 26 28 45 -25 24 38 37-47 22 21 20 36 19 18 47 49 50 17 31 47 16 - 15 35 -14 34 4 (b) 47 10 43 8 -3 ET-1 Power Head -4 (a) Standard for D4 Premium #9951AM Black (Onyx) #9258AM White Optional for D4 Red #9299AM Red

#### Canister with Handle/Hose

#### 90641AM Premium D4 - White Machine


Pos.	Part #	Description
1	8001WEER	Bottom casing (2)
2	8086	Castor cpl
3	8065ER	Micro filter seal
4	8191AM	a) Hospital-grade micro filter &
		b) Motor filter = Microfilter set
5	8084ER	Micro filter holder
6	8120AM	Filter bag
7	8045ER	Motor support
8	8091AM	Internal cable set
9	8048ER	1200W Vac motor (7 & 8)
10	665613E	Cord reel
11	8009	Motor inlet seal
12	8098ER	Rewind lever spring
13	8036ER	Rewind lever cpl (12)
14	8085ER	Motor cover cpl (11 & 13)
15	8106ER	PCB w/ switch
16 17	8058ER	Retaining ring
18	8038ER1	Power display
19	8057 8037GS	Spring for power button Power button
20	6047AM/01	
21	8033UL	AIRBELT cover (dark gray) Foam bumper
22	8034GS	AIRBELT clip
23	8140ER	Filter bag spring w/hardware
24	6750ER	Bag cover axle
25	8052ER	Bag cover hinge (2 pcs)
26	8003WEER	Top casing (23-25)
27	8059GS	Cable entry
28	8010PRER	Attachment holder cpl
29	8114ER	Bag cover release w/axle & spring
30	8129GS	Bag cover insert
31	8079GS	Hose neck
32	7020ER	Bag indicator
33	8127ER	Bag indicator adjuster
34	8130	Bag cover seal
35	8051AM4	Inside cover cpl (30-34, 47 & 50)
36	8005WEER	Bag cover
37	6270GS	Telescopic tube (38&39)
38	6420GS	Release button, leaf spring & cap
39	6421GS	Slider button w/hardware
40	8142GS	Upholstery nozzle
41 42	8146ER 8066GS	Dusting brush, horsehair Crevice nozzle
43	6391DA	Parquet nozzle
44	5266	Cable clamp
45	8119AM	7' handle with hose
46	01000	Screw C 2.9 x 16
47	01036	Screw 4 x 14
48	0102	Screw F 3.9 x 13
49	8160	Internal cable
50	8093	Hose neck wiring
51	8038ER4	Power display (16,17 & 52)
52	8108ER	PCB w/lights
53	6369GS	Mains cable

## 90640AM PREMIUM D4 - Black (onyx) Machine Exceptions

1	8001SWER	Bottom casing (2)
20	6047AM/02	AIRBELT cover (silver)
26	8003SWER	Top casing (23-25)
36	8005SWER	Bag cover

#### 90630AM D4 - Red Machine Exceptions

1	8001DRER	Bottom casing (2)
26	8003DRER	Top casing (23-25)
28	8010D4ER	Attachment holder cpl
36	8005DRER	Bag cover



ET-2 Power Head optional for D4 Red #9250AM Red

#### SFBO VACUUM CI FANFR WARRANTY

- 1. Your authorized SEBO dealer or SEBO will provide the original product purchaser with replacement of Non-Wear Parts which fail due to a material or workmanship defect for a period of five (5) years from the original date of purchase of new product. SEBO will provide a five (5) year warranty on suction motors and brush drive motors.
- Your authorized SEBO dealer or SEBO will repair (or will cover labor charges associated with repair) a defective SEBO vacuum cleaner at no cost to the original purchaser, within five (5) years of original purchase of new product in the United States; and within one (1) year of original purchase of new product in Canada.
- 3. SEBO or an authorized SEBO dealer must complete all warranty repairs.
- To locate an authorized SEBO dealer in your area, or to register a warranty claim in the United States of America, please visit our website at www.sebo.us.
- To locate an authorized SEBO dealer in your area, or to register a warranty claim in Canada, please call Floor Care Equipment, Ltd. at (800) 661-8687.
- The warranties provided for above apply exclusively to SEBO Vacuum Cleaners which are used residentially.
   No warranty is provided for SEBO vacuum cleaners used commercially.

- 7. The Wear Parts excluded from warranty coverage include filter bags, motor filters, micro filters, the cable (external cord), the attachment hose, the brush rollers, the front bottom plate, the rear bottom plate, the crevice nozzle, the upholstery nozzle, the dusting brush, the parquet brush and all of the optional attachments. (See "Identification of Parts" on page 7 of this manual).
- 8. This warranty applies only while your SEBO Vacuum Cleaner is physically located within the United States of America and its territories or Canada.
- 9. The purchase receipt showing the date, price, and item of purchase is the initial document of proof of purchase and determines the validity of warranty. To be certain that your warranty claim can be processed as quickly and efficiently as possible, please retain your original purchase receipt and mail in the warranty card provided with your new SEBO vacuum cleaner.
- 10. This warranty gives you specific legal rights. You may also have other legal rights, which vary from state/province to state/province.
- 11. SEBO America will not process nor will it accept responsibility for warranty claims for machines purchased from dealers located in Canada. Floor Care Equipment, Ltd. will not process nor will it accept responsibility for warranty claims for machines purchased from dealers located in the United States.

**EXCLUSIVE REMEDY:** The remedies provided under the terms of this Warranty are the purchaser's exclusive remedies and are in lieu of any other remedies otherwise available.

#### THE WARRANTY DOES NOT COVER:

- Used or secondhand products.
- Products outside of the warranty period.
- Items not manufactured by SEBO.
- Normal maintenance service.
- Equipment damaged by improper use, accident, other casualty or negligence.
- Machines equipped with nonauthorized attachments or modifications.
- Machines on which the serial number has been altered or removed.

#### To contact SEBO in the United States of America:

SEBO America, LLC Telephone: (800) 334-6614 Fax: (303) 792-9196

Website: www.sebo.us



#### LIMITATIONS AND EXCLUSIONS:

SEBO MAKES NO OTHER REPRESENTATIONS OR WARRANTIES, EXPRESSED OR IMPLIED AND SPECIFICALLY EXCLUDES THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

SEBO WILL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND OR NATURE.

THIS DISCLAIMER OF IMPLIED WARRANTIES SHALL NOT APPLY TO THE EXTENT SAID DISCLAIMER IS NOT ALLOWED BY APPLICABLE STATE/PROVINCIAL LAW.

#### To contact SEBO in Canada:

Floor Care Equipment, Ltd. Telephone: (800) 661-8687 Fax: (800) 270-4807

Website: www.sebocanada.ca



