


# Hang Kit

Part No. 4044745


## Parts Included:

- A** (2) 1/4" x 25' Black Polyester Solid Braid Rope
- B** (4) 1/4" Ratchet Pulley with Snap Hook
- C** (4) 1" D-Ring Tie Down with Mounting Bracket
- D** (8) #10-13 6-Lobe Flat Head Screws
- E** (2) TS Bracket 4041892-01 (Cleats)
- F** (4) #10-24 x 1/2" 6-Lobe Drive Pan Head Screws

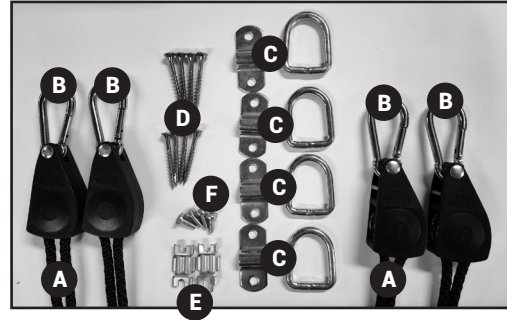


## Tools Required: Drill

**Step 1:** Carefully turn the dehumidifier on its side and insert the feet to allow ratchet straps to be placed under the dehumidifier. The feet also serve as safety backup in the event one of the straps was to slip.

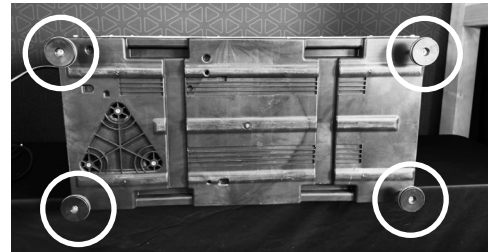

**Step 2:** Install D-rings and mounting brackets 12" apart on the joist front to back and no more than 16" from side to side. They can be installed either on the side or underneath the joist. Keep the straps vertical to the unit.

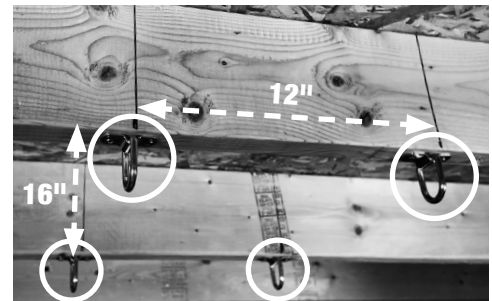

**Step 3:** Two ropes are installed into the four ratchets. Lift tab on ratchet to release if the rope is pulled to far. Hook snap hook on the ratchet pulley to the first installed D-ring and pass the other end of the rope with the ratchet pulley under the dehumidifier lining up the rope in the channel in the base of the dehumidifier. Hook the snap hook into the second D-ring installed on the joist. Complete these same steps on the other side of the dehumidifier.



**Therma-Stor<sup>®</sup> LLC**

Driven by performance. Powered by design.™

4201 Lien Rd Madison, WI 53704 • TOLL-FREE 1-800-533-7533 • [www.thermastor.com](http://www.thermastor.com) • [sales@thermastor.com](mailto:sales@thermastor.com)

TS-2148 05/25 Rev A



**Step 4:** Before proceeding, confirm straps are in the channels under the dehumidifier. Pull straps to remove any slack so straps are even. The straps are to help lift the unit. Start with one corner. Place one hand under the dehumidifier and with the other hand pull on ratchet strap. Raise the dehumidifier a couple of inches on one end and repeat steps on the opposite side of the dehumidifier. Slowly raising the unit up evenly on both sides.




**Step 5:** Once the dehumidifier is at the height desired, use a level to make sure it is even on both sides and front to back.




**IMPORTANT**

UNIT MUST BE LEVEL BOTH FRONT TO BACK AND SIDE TO SIDE FOR PROPER DRAINAGE OF WATER.

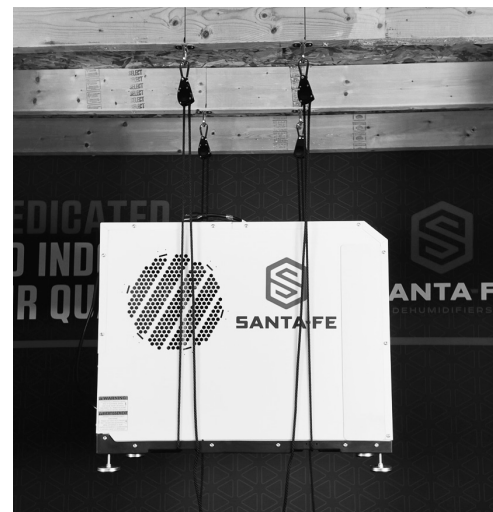

**Step 6:** Use the (4) #10-24 x 1/2" 6-Lobe Drive Pan Head Screws to install the cleats to secure the strap closest to the front of the dehumidifier on the left and right side.

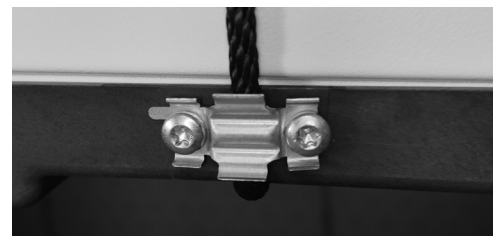

**Step 7:** Bundle the extra straps and secure them with cable ties (not included).

To lower the unit, support dehumidifier from underneath and push up on tab of the ratchet. Lower each corner of the dehumidifier slowly and a couple inches at a time.



**Therma-Stor<sup>®</sup> LLC**

Driven by performance. Powered by design.<sup>™</sup>

4201 Lien Rd Madison, WI 53704 • TOLL-FREE 1-800-533-7533 • [www.thermastor.com](http://www.thermastor.com) • [sales@thermastor.com](mailto:sales@thermastor.com)

TS-2148 05/25 Rev A

