


Roomba® Max 705

Vac Robot + AutoEmpty™ Dock


Owner's Guide

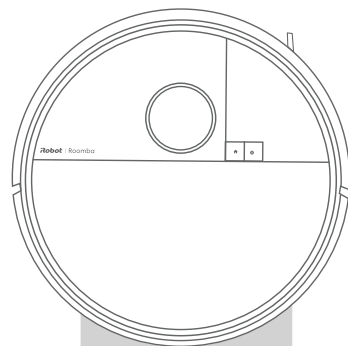


iRobot

Getting started

- 1 Remove protective film from camera and foam inserts behind bumper

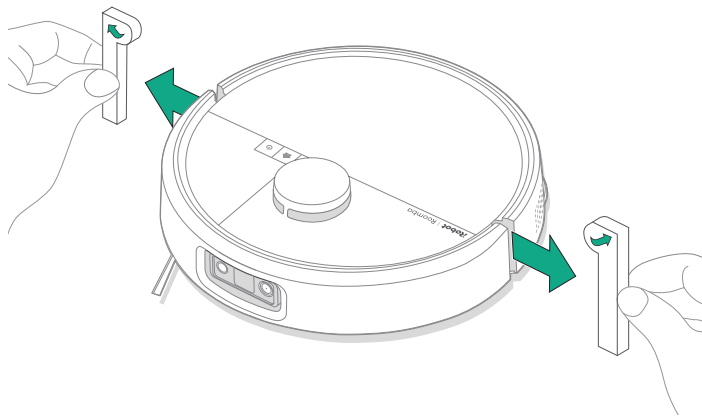

- 2 Place the dock on hard-surface flooring

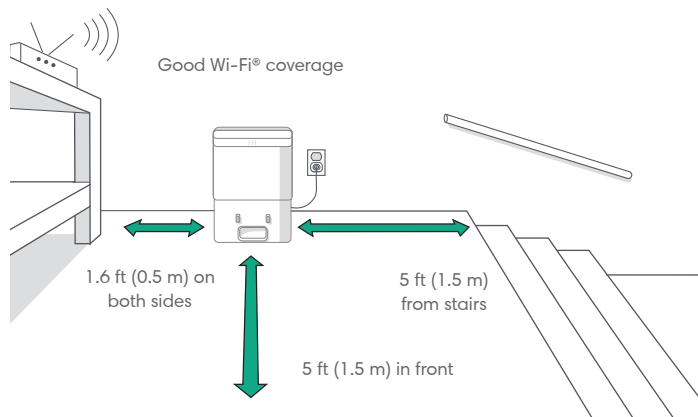


NOTE: Do not place it in direct sunlight. Ensure that the area around the dock is free of clutter to improve docking performance.




WARNING: To prevent the risk of your robot falling down stairs, ensure that your dock is placed at least 1.5 metres (5 feet) away from stairs.

3 Plug in the dock

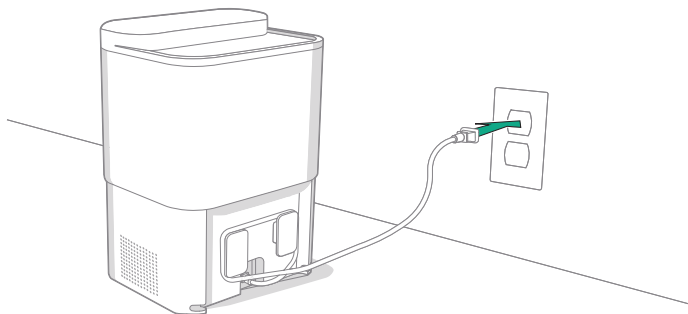


Plug the power cord into the wall. Wrap the cord back so it won't get in the way of the robot as it comes and goes.

4 Install the Edge-Sweeping Brush

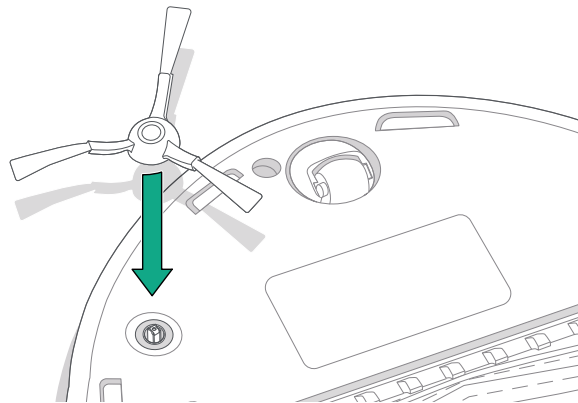

Align the Edge-Sweeping Brush and press down until you hear a click.

5 Wake up the robot

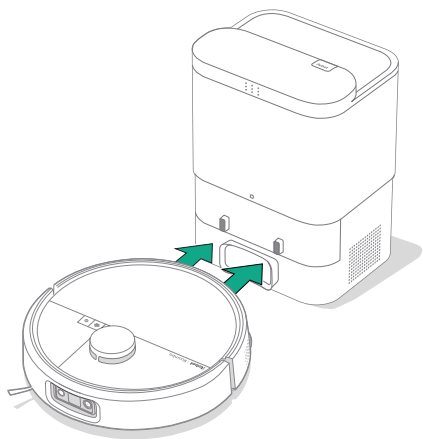

Place your robot in front of the dock, then slide it towards the dock, lining up the metal Charging Contacts. After a few minutes, a sound will let you know it's awake.



NOTE: Your robot comes with a partial charge, but we recommend that you charge the robot for 4 hours prior to starting the first cleaning job.

To remove your robot from the dock, slide the robot towards you and then lift.

6 Download the Roomba® Home App

Scan the QR code with the camera on your mobile device or find the Roomba® Home App in your app store. The app will guide you through the steps to set up your robot. Once your robot is set up in the app, you'll be able to:


- Control when, where and how you clean
- Create automatic cleaning schedules
- Set custom cleaning preferences
- Unlock digital features
- Access to tips, tricks and answers to commonly asked questions



IMPORTANT: Read the enclosed safety information guide first before using your robot.


About your Roomba® Max 705 Vac

Top view

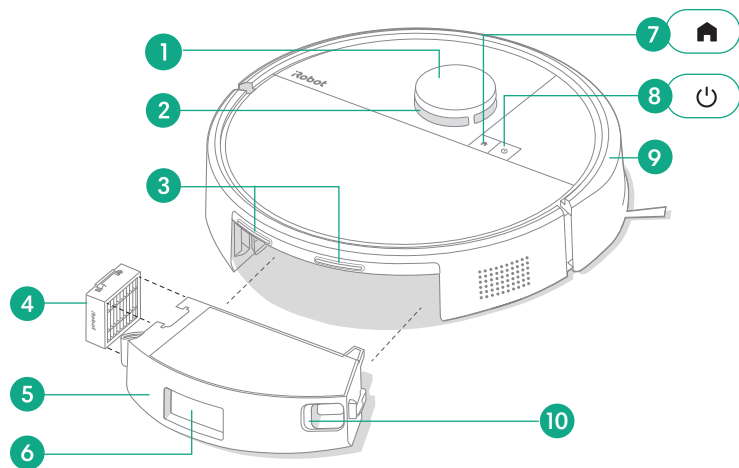

- | | |
|-------------------------|--------------------------|
| 1 LiDar Detector Bumper | 6 Debris Evacuation Port |
| 2 ClearView™ Pro LiDar | 7 Home Button |
| 3 Charging Contacts | 8 Power Button |
| 4 Filter | 9 Bumper |
| 5 Bin | 10 Bin Release Button |


Bottom view

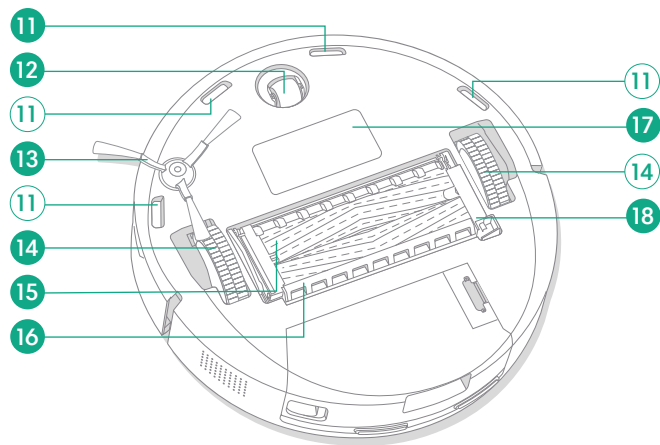

- | | |
|---------------------------------|------------------------|
| 11 Cliff Sensors | 16 Brush Cover |
| 12 Caster Wheel | 17 Battery Pack |
| 13 Edge-Sweeping Brush | 18 Brush Cover Release |
| 14 Wheels | |
| 15 Multi-Surface Rubber Brushes | |


About your AutoEmpty™ Dock for your Roomba® Max 705 Vac

Front view

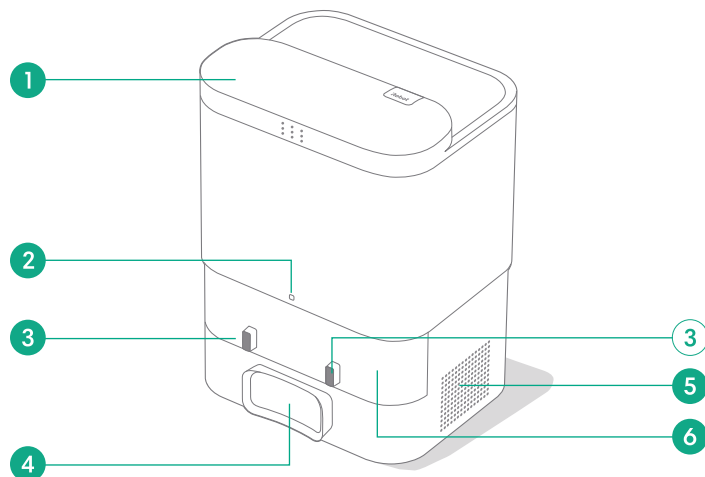

- 1 Canister Lid
- 2 LED indicator
- 3 Charging Contact
- 4 Debris Evacuation Port
- 5 Exhaust Vent
- 6 IR Window


Top view

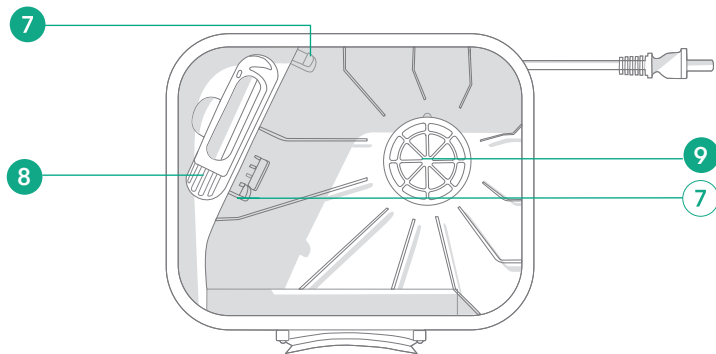

- 7 Bag Guide Rails
- 8 Cleaning Brush Accessory
- 9 Dock Filter

Charging

Power icon indicator

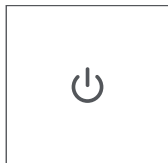

Power button


White – Fully charged and connected

Flashing white – Return to dock to charge

Pulsing White – Charging (low battery) – If the user tries to start a mission the buttons will then flash red and trigger an audio telling users it can't start due to low battery.

Flashing red – Low battery/Error

Dock LED indicator

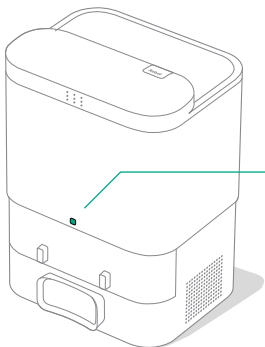

Solid white: Charging

Solid red: Bag full or not installed

Charging during a cleaning routine

Your robot will return to the dock whenever it needs to recharge. Once it is sufficiently charged, it will then resume cleaning where it left off.

Standby mode

Your robot uses a small amount of power whenever it is on the dock. You can put it in a further-reduced power state when not in use by pressing  for 10 seconds. To exit Low Power mode, short press the  button.

Storing your robot

For long-term storage, turn off your robot by removing it from the dock and holding  for 10 seconds. Store in a cool, dry place.

Cleaning

Button controls



Home button: Tap to send the robot home
Press when running to pause
Press when paused to dock
Press when docking to stop
Press when docked to empty the dust bin

Power button: Tap to start/pause/resume a job
Hold for 3 seconds to turn on
Hold for 10 seconds to turn off

Cleaning pattern

Your robot will automatically explore and clean your home in neat rows. It will return to the dock at the end of a cleaning routine whenever it needs to recharge.



Tips:

- Remove excess clutter from floors before cleaning.
- Use your robot frequently to maintain well-conditioned floors.

After 90 minutes of inactivity off the dock, your robot will automatically end its clean. If you are unsure if it has finished or paused, visit the **Roomba® Home App** to check on its status.

Spot clean

Tap the  button twice to spot clean a designated area. After the spot clean is complete, your robot will end the job. Press  to send it back to its dock.

AutoEmpty™ Dock


Your robot will automatically attempt to empty its dust bin every time it returns to its AutoEmpty™ dock or is physically placed on the AutoEmpty™ dock.



NOTE: It is highly recommended to use the Roomba® Home App for cleaning control. The mobile app can be used to clean specific rooms, set up cleaning routines and create automations/schedules.

Vacuuming

- 1 To start cleaning, place the robot back on the dock and use the app or press the  button.

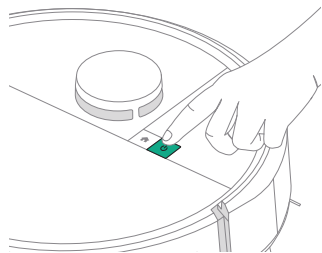

NOTE: It is recommended to clean the Dust Bin at least once a week. Otherwise, the performance of the vacuum may be reduced.

Care and maintenance for your robot


To keep your robot at optimal performance, make sure that you regularly perform the following basic care and maintenance. There are additional instructional videos in the Roomba® Home App. If you notice your robot picking up less debris from your floor, empty the bin, clean the filter and clean the brushes.

Part	Care frequency	Replacement frequency*
Dust Bin	Empty bin as needed	-
Filter	Clean once a week (twice a week if you have a pet)	Every 2 months
Edge-Sweeping Brush	Clean every 2 weeks or as often as needed	Every 3–6 months
Multi-Surface Rubber Brushes	Clean once a week	Every 6–12 months
Front Caster Wheel	Clean every 2 weeks or as often as needed	-
Charging Contacts	Clean every 2 weeks or as often as needed	-
Sensors	Clean once a month or as often as needed	-
Brush Cover	Inspect every 6 months	Replace if worn or damaged

* Replacement frequency may vary. Parts should be replaced if there is any visible wear and tear. If you think you need a replacement part, please contact iRobot Customer Care for more information.

Cleaning the Edge-Sweeping Brush


Pull to remove the Edge-Sweeping Brush. Remove any hair or debris using the cleaning brush, then reinstall the Edge-Sweeping Brush.

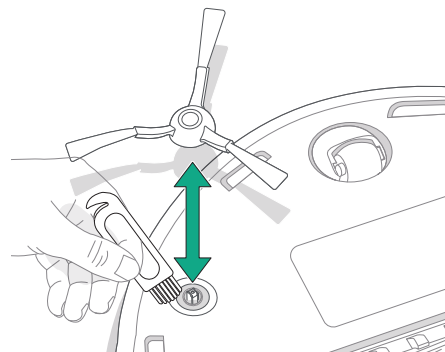


IMPORTANT: It is recommended to replace the Edge-Sweeping Brush every 3–6 months for optimal cleaning.

Cleaning the Multi-Surface Rubber Brushes


- 1 Pinch the brush frame release tab, lift the tab and remove any obstructions.

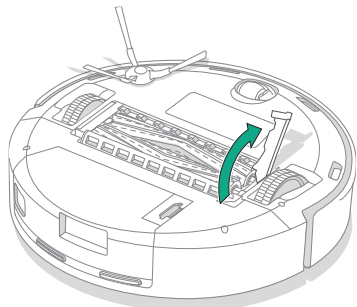


- 2 Remove the Multi-Surface Rubber Brushes.

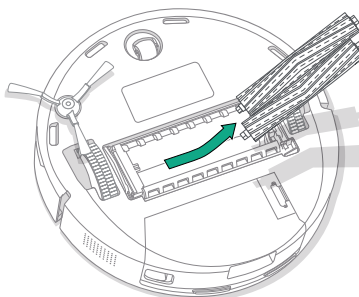


- 3 Remove the end caps from the ends of the brushes.

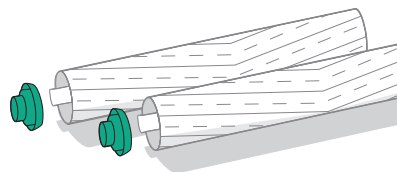

- 4 Remove any hair or debris that has collected beneath the caps. Replace end caps.

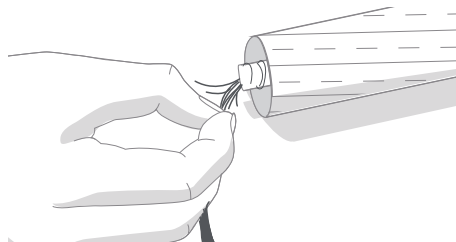


- 5 Reinstall the Multi-Surface Rubber Brushes and brush cover in the robot.

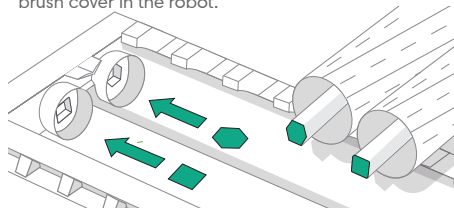

IMPORTANT: It is recommended to replace the Multi-Surface Brushes every 6–12 months for an optimal cleaning effect.

Cleaning the Front Caster Wheel

Use the cleaning brush to remove hair and debris from the Front Caster Wheel.

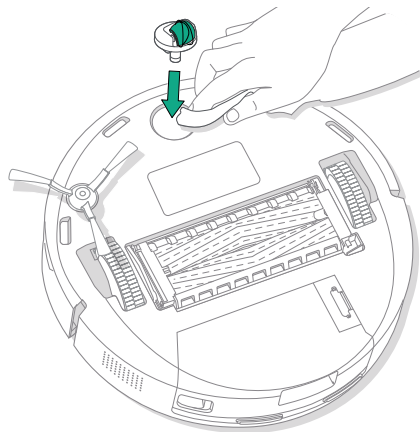


IMPORTANT: A front wheel clogged with hair and debris could result in damage to your floor. If the wheel is not spinning freely after you have cleaned it, please contact Customer Care.


Cleaning the charging contacts and sensors

Unplug the dock from the wall and wipe the charging contacts and sensors with a clean, dry cloth or lightly dampened melamine foam.

CHARGING CONTACTS

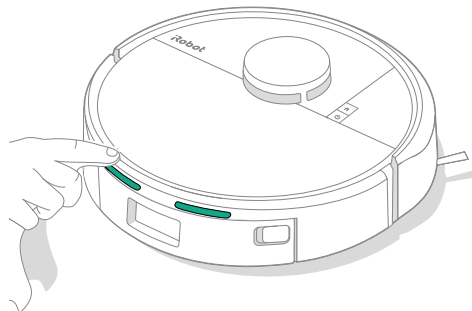


SENSORS

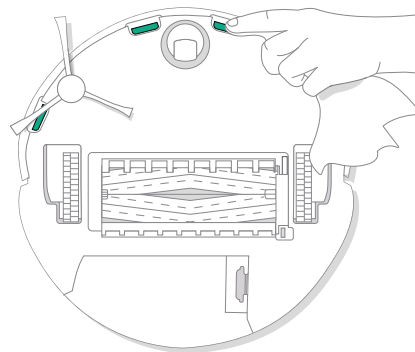


IMPORTANT: Do not spray cleaning solution or water onto the sensors or sensor openings.

Emptying the bin


- 1 Press the Dust Bin Release Buttons to remove the Dust Bin.

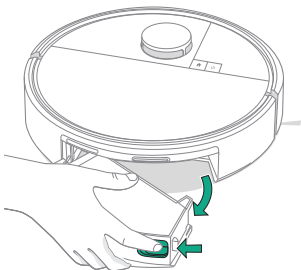

- 2 Open the door to empty and clean the Dust Bin with the cleaning brush.

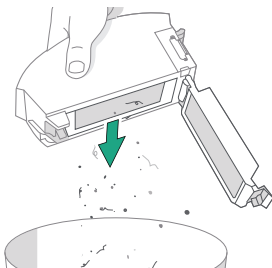


- 3 Clean debris from the vacuum path. Place the bin back in the robot.

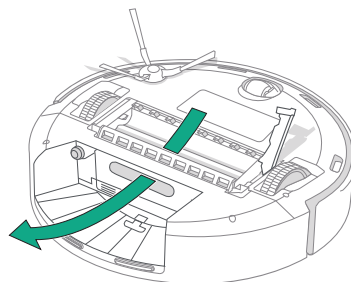


Washing the bin

- 1 Release the bin, remove the filter and open the bin door.

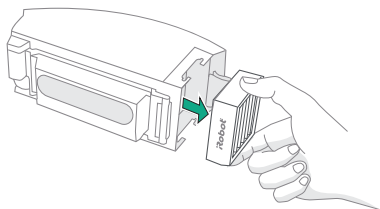

- 2 Rinse the dust bin and water tank using warm water.

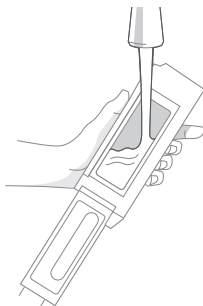


- 3 Make sure that the bin is completely dry. Reinsert the filter and place the bin back in the robot.




IMPORTANT: The bin is not dishwasher safe. Do not wash the filter. Remove the filter before washing the bin.

Cleaning the filter


- 1** Remove the bin. Open the bin door and remove the filter.

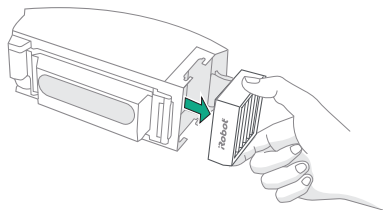


- 2** Remove debris with the cleaning brush.

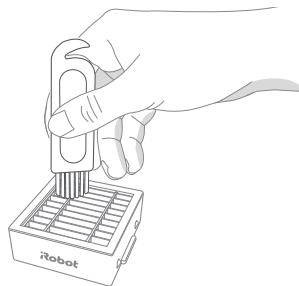

- 3** Empty and wipe the bin with a clean cloth.

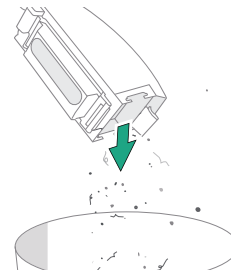

- 4** Reinsert the filter. Place the bin back in the robot.

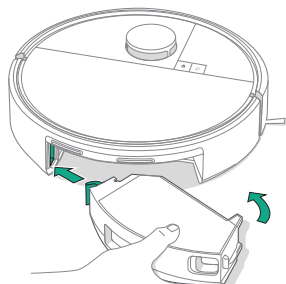

Care and maintenance for your dock


To keep your dock running at optimal performance, perform the procedures on the following pages.

Part	Care frequency	Replacement frequency*
Charging Contacts	Once every month	-
Sensors	Clean once a month	-
IR Window	Clean once a month	-
Bags	-	Bags should be replaced when full, prompted by the LED indicator on the dock and/or Roomba® Home App
Dock filter	Once every month (remove debris from the dock filter)	

* Replacement frequency may vary. Parts should be replaced if there is any visible wear and tear. If you think you need a replacement part, please contact iRobot Customer Care for more information.

Cleaning the Charging Contacts and IR Window


Inspect the components to make sure that they are clear of debris. Wipe with a clean, dry cloth.

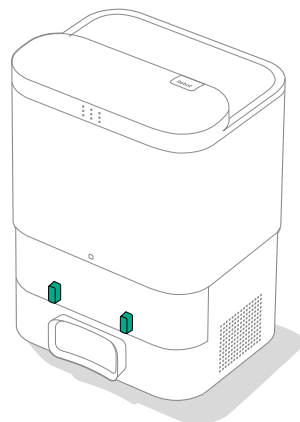


IMPORTANT: Do not spray cleaning solution or water onto the sensors or sensor openings.

Replacing the bag


- 1 Lift up on the canister lid to open.

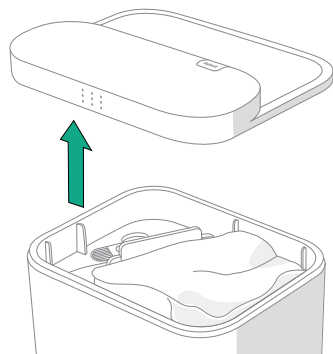

- 2 Pull up on the card to remove the bag from the canister.

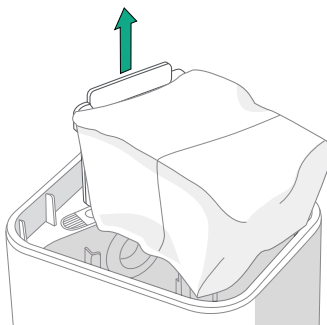

- 3 Install a new bag by sliding the card into the guide rails. This will seal the bag so dust and debris cannot escape.

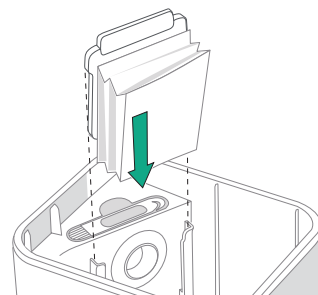


- 4 Press down on the lid, making sure that it is completely closed.



IMPORTANT: To achieve optimal performance with your robot and dock, clean and/or replace your robot's filter as needed.

Removing debris from the dock filter

Inspect the blower cover for any lint or debris build-up and wipe with a clean, dry cloth to remove.

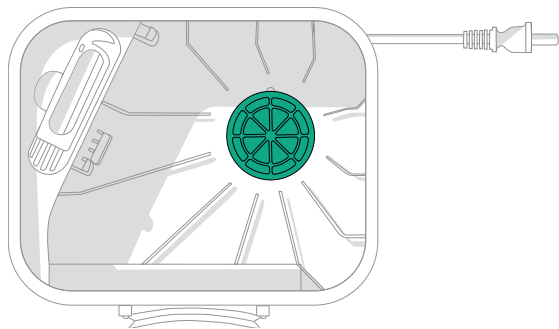

Troubleshooting

Troubleshooting your robot

Your robot will alert you if something is wrong with a voice announcement or audio alert. The Roomba® Home App will also provide notifications with steps to troubleshoot any issues.

If you are unsure if the robot has finished or paused, consult the Roomba® Home App to check on its status.

Factory reset

To factory reset, press  for 5 seconds and then (within 5 seconds) press  and  for 5 seconds.

BATTERY SAFETY AND POSTAGE



WARNING: Lithium-ion batteries and products that contain lithium-ion batteries are subject to strict transportation regulations. If you need to post this product for service, travel or any other reason, you **MUST** follow the below postage instructions.

- Battery **MUST** be turned off before posting.
- Turn off the battery by removing the robot from the dock and pressing the bumper in for 10 seconds while holding the  button. All indicators will then turn off.
- Package the robot securely for postage.

If you need further assistance, please visit your Roomba® Home App, contact our Customer Care team or visit global.irobot.com.

Troubleshooting your dock

Your dock will tell you if something is wrong via an LED indicator on the front of the canister and through the Roomba® Home App. If the dock is not performing as expected, check the Roomba® Home App for errors.

LED indicator	Common error	How to fix
Solid red	Bag full or missing	Replace the bag if it is full or missing. Make sure that the bag is securely inserted. If the problem persists, remove any debris from the port on the bottom of your robot and dock.

This product has been equipped with a thermal protector designed to protect against damage due to overheating. If the protector operates, the motor will stop running. If this happens, unplug the unit, allow it to cool for 30 minutes, clear any obstructions from the evacuation port and evacuation tube, then plug the unit back in.



Need further assistance? We're here to help.

Download the Roomba® Home App or visit global.irobot.com for product support or to contact your local support centre. If you need further assistance in the US and Canada, call the US Customer Care team on (877) 855-8593.

iRobot USA Customer Care hours

Monday to Friday, 9 AM–9 PM Eastern Time

Saturday and Sunday 9 AM–6 PM Eastern Time

Safety information

Please see the safety guide that came with your robot or visit global.irobot.com



WC# 4857380 vA



©2025 iRobot Corporation, 8 Crosby Drive, Bedford, MA 01730, USA. All rights reserved. iRobot, Roomba and Roomba Combo are registered trademarks of iRobot Corporation. AutoEmpty and AutoWash are trademarks of iRobot Corporation. Wi-Fi and the Wi-Fi logo are registered trademarks of Wi-Fi Alliance. Apple and App Store are trademarks of Apple Inc., registered in the U.S. and other countries. Google Play is a trademark of Google LLC.